


# FAIRINO

## FR Lua programming script

## User Manual

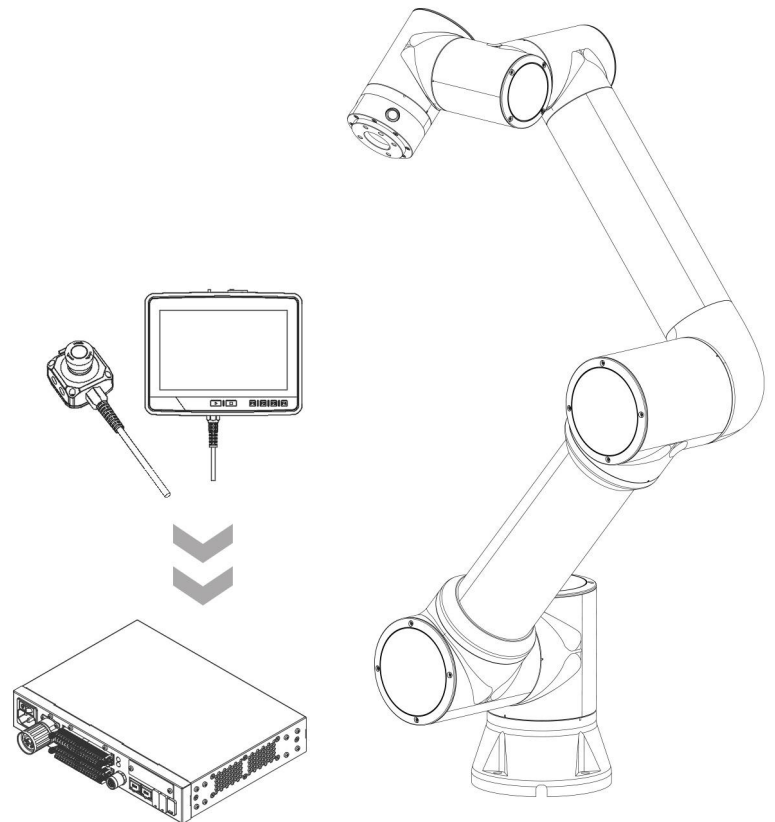

FAIR Innovation (Suzhou) Robotic System Co.,Ltd.

Data Encoding 20200310



## Contents

1 Overview.....	1
2 FR Lua Programming Script Fundamentals.....	1
2.1 Basic Grammar.....	1
2.1.1 FR Lua Annotations.....	1
2.1.2 FR Lua Keywords.....	1
2.1.3 Variables.....	1
2.1.4 Data Types.....	3
2.1.5 Operators.....	7
2.2 Control structure.....	9
2.2.1 Conditional statements.....	9
2.2.2 Loop statements.....	11
2.2.3 Control statements.....	14
2.3 Functions.....	14
2.3.1 Definition and Use of FR Lua Functions.....	15
2.3.2 Function Parameters.....	15
2.3.4 Return value of function.....	16
2.3.5 Functions as Parameters and Return values.....	17
2.3.6 Recursive Functions.....	18
2.4 Character string.....	19
2.4.1 String Definition.....	19
2.4.2 Escaping Characters.....	20
2.4.3 String Operations.....	20
2.5 Arrays.....	28
2.5.1 One dimensional array.....	28
2.5.2 Multidimensional array.....	28

2.6 Table.....	29
2.6.1 Basic Usage of Table.....	29
2.6.2 Table Operation Functions.....	30
2.7 File operation.....	32
2.7.1 Simple mode.....	33
2.7.2 Full mode.....	34
2.8 Modules.....	35
2.10.1 Creating Modules.....	35
2.10.2 Module Call.....	36
2.10.3 Search Path.....	36
3 FR Lua Script Preset Functions.....	37
3.1 Logical instruction.....	37
3.1.1 Loop.....	37
3.1.2 Waiting.....	37
3.1.3 Pause.....	40
3.1.4 Subroutines.....	40
3.1.5 Variables.....	41
3.2 Motion command.....	42
3.2.1 Point to point.....	42
3.2.2 Straight Line.....	44
3.2.3 Arc.....	45
3.2.4 Complete Circle.....	48
3.2.5 Spiral.....	50
3.2.6 New Spiral.....	51
3.2.7 Horizontal Spiral.....	52
3.2.8 Spline.....	53
3.2.9 New spline.....	57

3.2.10 Swing.....	60
3.2.11 Trajectory Reproduction.....	63
3.2.12 point offset.....	64
3.2.13 Servo.....	65
3.2.14 Trajectory.....	66
3.2.15 Trajectory J.....	69
3.2.16 DMP.....	70
3.2.17 Workpiece Conversion.....	71
3.2.18 Tool Conversion.....	72
3.2.19 line of intersection.....	74
3.3 Control instruction.....	75
3.3.1 Digital IO.....	75
3.3.2 Analog IO.....	78
3.3.3 Virtual IO.....	82
3.3.4 Sports DO.....	84
3.3.5 Exercise AO.....	86
3.3.6 Expanding IO.....	87
3.3.7 Coordinate System.....	91
3.3.8 mode Switching.....	92
3.3.9 Collision Level.....	92
3.3.10 Collision Detection.....	93
3.3.11 Acceleration.....	94
3.4 Peripheral instruction.....	94
3.4.1 Gripper.....	94
3.4.2 Spray gun.....	95
3.4.3 Expansion axis.....	96
3.4.4 Conveyor Belt.....	101

3.4.5 Grinding equipment.....	102
3.4.6 Suction cups.....	106
3.4.7 End-effector transparent transmission.....	107
3.5 Welding instruction.....	109
3.5.1 Welding.....	109
3.5.2 Arc Tracking.....	122
3.5.3 Laser Tracking.....	125
3.5.4 Laser Recording.....	129
3.5.5 Wire positioning.....	130
3.5.6 Attitude Adjustment.....	132
3.6 Force Control Command.....	134
3.6.1 Force Control Set.....	134
3.6.2 Torque Recording.....	140
3.7 Packing Instruction.....	142
3.7.1 Matrix Movement.....	142
3.8 Communication instruction.....	144
3.7.1 Modbus.....	144
3.7.1.1 Modbus-TCP.....	144
3.7.1.1 Modbus-RTU.....	151
3.7.2 Xmlrpc.....	159
3.7.3 Board Card.....	159
3.9 Auxiliary instruction.....	162
3.8.1 Auxiliary Threads.....	162
3.8.2 Call Function.....	163
3.8.3 Point Table.....	164



# 1 Overview

Welcome to the user manual for programming scripts for the FAIRINO collaborative robot FR Lua. This manual aims to provide users with comprehensive guidance on how to proficiently use FR Lua scripts for programming on FAIRINO collaborative robots. Through FR Lua scripts, users can flexibly control robots to perform various tasks.

## 2 FR Lua Programming Script Fundamentals

### 2.1 Basic Grammar

#### 2.1.1 FR Lua Annotations

The comments in FR Lua, starting with `--`, will be ignored by the interpreter. Single line comments are typically used for brief Explanations or annotations of code.

The Explanation for FR Lua comments is as follows.

Code 2-1 FR Lua Annotation Explanation

```
1  --This is a single line comment
```

#### 2.1.2 FR Lua Keywords

The following are the reserved keywords in FR Lua that cannot be used as names. The FR Lua keywords are as follows:

Code 2-2 FR Lua keyword

```
1  and   break  do       else    elseif  end
2  false for    function goto    if      in
3  local nil    not      or      repeat return
4  then  true   until    while
```

#### 2.1.3 Variables

In the FR Lua environment, variables are identifiers used to store data, which can hold various data types including functions and tables. Variable names consist of letters, numbers, and underscores, and must start with a letter or underscore. FR Lua

is case sensitive.

### 1) Variable type

FR Lua contains three types of variables:

**Global variables:** By default, all variables are global variables unless explicitly declared as local variables.

**local variable:** Declared with the local keyword, the scope starts from the declared position until the end of the current statement block.

**Fields in Tables:** Tables are very important data structures in FR Lua, and fields in tables can also be used as variables. Examples of FR Lua variable types are shown below.

#### Code 2-3 FR Lua Variable Type Example

```
1  --Global variables
2  globalVar = 10
3  --local variables
4  local localVar = 20
5  --Fields in the table
6  local tableVar = {key = 30}
```

### 2) Assignment and multi value assignment

**Assignment statement:** Used to change the value of a variable or table field. By using "=", the value on the right will be assigned to the variable on the left in sequence. The example of FR Lua assignment is shown below.

#### Code 2-4 The example of assigning values to FR Lua

```
1  local a = 5
2  local b = 10
3  a = b --The value of a=b ,a is now 10
```

**Multi value assignment:** FR Lua supports assigning values to multiple variables simultaneously, usually used to swap variable values or assign function Return values to multiple variables. The example of multi value assignment in FR Lua is shown below.

#### Code 2-5 FR Lua Multi value Assignment Example

```
1  --Exchange variable values
2  local x = 1
3  local y = 2
4  x,y=y,x --x is now 2, y is now 1
```

Code 2-5 (continued)

```

5  --Function returns multiple values
6  local function getvalues()
7  return 5, 10
8  end
9  local a, b=getvalues() -- a is now 5, b is now 10

```

## 2.1.4 Data Types

FR Lua supports eight basic data types: nil, boolean, number, string, user data, function, thread, and table. The basic data types are described in Table 2-1.

Table 2-1 FR Lua Data Type Description

Value type	Description
Nil	Indicates an invalid value, the default value when the variable is not assigned a value.
Boolean value	Contains only two values, true and false, typically used for conditional judgment.
Number	FR Lua uses double precision floating-point numbers to represent numbers, including integers and floating-point numbers.
String	Used for storing text, it can be represented by single quotes, double quotes, or long strings.
User data	Used to store external data generated by C language.
Function	Functions written in C or RFLua that can be assigned, passed, and returned are the foundation of logical implementation.
Thread	As a coroutine implementation, threads allow concurrent execution, with each thread having an independent execution stack while sharing the global environment and state.

### 1) Nil data type

Indicates 'invalid 'or' null value ', which is the default uninitialized value. Usually used to indicate that there is no value or that a variable's value is undefined, for example:

Code 2-7 nil data type example

```

1. local a = nil
2. print (a) -- Output: nil

```

### 2) Boolean (boolean)

In FR Lua, Boolean types only have two values: true and false. Except for false and nil, all other values (including the number 0) are considered true, as shown in the

following example:

#### Code 2-7 Boolean Data Type Example

```
1. --Define Boolean values
2. local a = true
3. local b = false
4. --Directly output Boolean values
5. --Boolean condition judgment
6. if a then
7.     --code
8. end
9. if not b then
10.    --code
11. end
12. --Note: The number 0 is also considered true
13. local c = 0
14. if c then
15.     --code
16. end
17. --False and nil will be considered as false
18. local d = nil
19. if not d then
20.     --code
21. end
```

### 3) Number

The numeric type is used to store integers or floating-point numbers. FR Lua uses double precision floating-point numbers to represent the number type, so it can accurately represent a wide range of integers and decimals. The example is as follows:

#### Code 2-8 Numerical Data Type Example

```
1. local x = 10      --Integer
2. local y = 3.14    --Floating point number
3. local z = 1e3     --Scientific notation, representing 1000
```

### 4) String (string)

Strings are used to store textual data. Strings can be represented by single quotes, double quotes, or `[[[]]]` to represent multi line strings, using an example of linking two strings is as follows:

#### Code 2-9: Example of String Data Type

```
1. --Example 1: Using single and double quotation marks
2. local str1 = 'Hello, FR!'    --Use single quotation marks
3. local str2 = " Hello, FR! "  --Use double quotation marks
```

Code 2-9 (continued)

```

4. --Example 2: [[]], when a string is long or needs to span multiple lines, [[]] can be used to
   represent a multi line string.
5. local multi_line_str = [[
6. I am a FAIRINO collaborative robot.
7. Thank you for your trust.
8. May I help you with anything!
9. ]]
10. --Example 3: String connection
11. --Using FRLua To connect multiple strings.
12. local part1 = "Hello"
13. local part2 = "FR!  "
14. local combined=part1.. "".. Part2- Connect strings using

```

### 5) User data

User data is a special type used to represent data created by C/C++code. In FR Lua, it is typically used to interact with external programs or libraries.

### 6) Function

Functions in FR Lua are also a type of data that can be assigned to variables or passed as Parameters. Functions can be named or anonymous (lambda functions), for example:

Code 2-10 Function Data Type Example

```

1. local function greet()
2. print("Hello, FR!")
3. end
4. Greet() - Output: Hello, FR!

```

### 7) Thread (thread)

In FR Lua, threads are used to represent coroutine implementations, which allow for non preemptive multitasking between different code blocks, similar to lightweight threads. Examples are as follows:

Code 2-11 Function Thread Data Type Example

```

1. local co = coroutine.create(function()
2. print("Running coroutine") end)
3. Coroutine. sum (co) -- Output: Running coroutine

```

### 8) Table (Table)

The core data structure of FR Lua is the table, which creates empty tables through `{}`. It serves as an associative array, supporting numerical and string indexing, providing flexibility in data organization. The table index starts from 1 and automatically expands in length with the content. Unallocated elements default to nil.

The basic syntax for creating and using tables is as follows:

Code 2-12: Basic syntax of table

```
1. local FR={} -- Create an empty table
2. local User={"Hello", "FR", "!"} -- Initialize table directly
```

An example of a numerical index (similar to an array) for a table is as follows:

Code 2-13: Numerical Index of Table

```
1. --Table of numerical indexes
2. local numbers = {10, 20, 30, 40}
3. --Accessing the values in the table
4. print (numbers [1]) -- Output: 10
5. print (numbers [2]) -- Output: 20
6. --The length of the table will automatically expand
7. numbers[5] = 50
8. print (numbers [5]) --Output: 50
```

An example of a string index (similar to a dictionary) for a table is as follows:

Code 2-14: String Index of Table

```
1. --Table with string index
2. local person = {
3.   name = "FR",
4.   age = FR,
5.   city = "China"
6. }
7. --Accessing the values in the table
8. print (person. name) -- Output: FR
9. print (person ["age"]) -- Output: FR
```

The mixed index of tables, FR Lua tables can use both numeric and string indexes simultaneously, as shown in the following example:

Code 2-15 Mixed Index of Table

```
1. -Create a mixed index table.
2. local fr_robots = {
3.   "FR3",
4.   "FR5",
5.   "FR10",
6.   company = "FR",
7.   founded = 2019
8. }
```

The dynamic growth of a table, for example:

Code 2-16: Dynamic Growth of Tables

```
1. --Create an empty table to store robot models
2. local fr_models = {}
3. --Dynamically add robot product models
4. fr_models[1] = "FR3"
5. fr_models[2] = "FR5"
6. fr_models[3] = "FR10"
7.
8. --Dynamically add more information
9. fr_models["total_models"] = 3
10. fr_models["latest_model"] = "FR10"
11.
12. --Accessing data in the table
13. fr_models [1] -- Output: FR3
14. fr_models ["total_models"] -- Output: 3
15. fr_models ["latest_model"] -- Output: FR10
```

## 2.1.5 Operators

### 1) Arithmetic operator

The commonly used arithmetic operators in FR Lua include addition (+), subtraction (-), multiplication (\*), division (/), remainder (%), exponentiation (^), sign (-), and division (/). The following are examples of commonly used arithmetic operators:

Code 2-17 Examples of Common Arithmetic Operators Used in FR Lua

```
1. --Variable definition
2. local FR_1 = 10
3. local FR_2 = 20
4.
5. --Addition
6. local addition = FR_1 + FR_2
7.
8. --Subtraction
9. local subtraction = FR_1 - FR_2
10. --Multiplication
11. local multiplication = FR_1 * FR_2
12. --Division
13. local division = FR_2 / FR_1
```

Code 2-17 (continued)

```
14. --Take surplus
15. local modulo = FR_2 % FR_1
16.
17. --Multiplying power
18. local power = FR_1 ^ 2
19.
20. --Negative sign
21. local negative = -FR_1
22.
23. --Divisible
24. local integerDivision = 5 // 2
```

## 2) Relational operator

The commonly used relational operators in FR Lua are equal to (`==`), not equal to (`~=`), greater than (`>`), less than (`<`), greater than or equal to (`>=`), and less than or equal to (`<=`). The following are examples of commonly used relational operators:

Code 2-18: Example of using commonly used relational operators in FR Lua

```
1. --Variable definition
2. local FR_1 = 10
3. local FR_2 = 20
4.
5. --Equal to
6. local isEqual = (FR_1 == FR_2)
7.
8. --Not equal to
9. local isNotEqual = (FR_1 ~= FR_2)
10.
11. --Greater than
12. local isGreaterThan = (FR_1 > FR_2)
13. local isLessThan = (FR_1 < FR_2)
14.
15. --Greater than or equal to
16. local isGreaterOrEqual = (FR_1 >= FR_2)
17.
18. --Less than or equal to
19. local isLessOrEqual = (FR_1 <= FR_2)
```

## 3) Logical operator

The commonly used logical operators in RLua are (and), or (or), and non (not).

The following are examples of commonly used logical operators:

Code 2-19 Examples of Common Logical Operators Used in FR Lua

```
1. --Example:
2. local FR = true
3. local NFR = false
4. local result1 = FR and NFR
5. print ("FR and NFR:", result1) -- Output: FR and NFR: false
6. local result2 = FR or NFR
7. print ("FR or NFR:", result2) -- Output: FR or NFR: true
8. local result3 = not FR
9. print ("not FR:", result3) -- Output: not FR: false
```

#### 4) Other operators

Other commonly used operators in FR Lua include the join operator (..), table index ([]), assignment (=), table constructor ({}), and variable length operator (#). Examples of commonly used other operators are as follows:

Code 2-20 Example of using other commonly used operators in FR Lua

```
1. --Examples of using other operators:
2. local str1 = "Hello"
3. local str2 = "FR! "
4. local result = str1 .. " " .. str2
5. local myTable = {a = 1, b = 2}
6. local valueA = myTable["a"]
7. local x = 5
8. local myTable = {1, 2, 3, 4}
```

## 2.2 Control structure

### 2.2.1 Conditional statements

In FR Lua, the if, elseif, and else keywords are used to execute different code blocks, and the execution path is determined based on the authenticity of the conditions. The following is the working mechanism of FR Lua conditional statements:

**If conditional statement:** Used to specify a condition. If the condition is true, execute the code in the condition block.

**Elseif conditional statement:** When the if condition is false, another condition

can be provided for checking.

If all if and elseif conditions are false, execute the code in the else block.

Condition evaluation: FR Lua assumes that Boolean values true and non nil values are true. Boolean values of false or nil are considered false.

Note: In FR Lua, 0 is considered true, unlike some other programming languages.

The basic structure of conditional statements:

Code 2-21 Basic structure of conditional statements in FR Lua

```
1.  if condition1 then
2.  --Code block executed when condition 1 is true
3.
4.  elseif condition2 then
5.  --The code block executed when condition 1 is false and condition 2 is true
6.
7.  else
8.  --Code block executed when all conditions are false
9.
10. end
```

The following is an example of using conditional statements:

Code 2-22 Example of using conditional statements

```
1.  --Example 1: Judging the Positive and Negative of Numbers
2.  local number = 10
3.
4.  if number > 0 then
5.      --Number is positive
6.  elseif number < 0 then
7.      --Number is negative
8.  else
9.      --Number is zero
10.
11. end
12. --Output result: The number is a positive number
13.
14. --Example 2: Check if the variable is nil
15. local value = nil
16.
17. if value then
18.     --variable not nil
```

Code 2-22 (continued)

```

19. else
20.     --variable is nil
21.
22. end
23. --Output result: The variable is nil
24. --Example 3: 0 is considered true in FRLua
25. local num = 0
26.
27. if num then
28.     --0 is considered true
29. else
30.     --0 is considered false
31.
32. end
33.     --Output result: 0 is considered true

```

### 2.2.2 Loop statements

In FR Lua programming, it is often necessary to repeatedly execute certain code segments, which is called a loop. A loop consists of two parts: the loop body and the termination condition of the loop. FR Lua provides various loop control structures for repeatedly executing a certain piece of code when conditions are met.

A loop consists of a loop body and termination conditions, where the loop body refers to a set of statements that are repeatedly executed; The termination condition refers to the condition that determines whether the loop continues. When the condition is false, the loop ends.

#### 1) While loop

The while loop will repeatedly execute the code block when the specified condition is true, and will not terminate until the condition is false. The basic structure and example of a while loop are as follows:

Code 2-23 The basic structure of the while loop in FR Lua

```

1. while condition do
2.     --Circular body
3.
4. end

```

Code 2-24 Example of using while

```

1. --Example: Calculate the sum of 1 to 5
2. local sum = 0
3. local i = 1

```

```
4. while i <= 5 do
5.   sum = sum + i
6.   i = i + 1
7. end
8.
```

2. For numerical loop: The for loop is used to iterate over a range of numbers and execute the loop body. The basic structure and example of a for numerical loop are as follows:

Code 2-25 Basic structure of for numerical loop in FR Lua

```
1. for i = start, end, step do
2.   --Circular body
3.
4. end
```

Code 2-26 Example of using for numerical loop

```
1. Example: Output numbers from 1 to 5
2. for i = 1, 5 do
3.   --code
4.
5. end
6.
```

### 3) For Generic Loop

Generic loops are used to traverse tables or iterators. The basic structure and example of a for generic loop are as follows:

Code 2-27 Basic structure of for generic loop in FR Lua

```
1. for key, value in pairs(table) do
2.   --Circular body
3.
4. end
```

Code 2-28 Example of using for generic loops

```
1. --Example: Traverse keys and values in a table
2. local myTable = {a = 1, b = 2, c = 3}
3. for key, value in pairs(myTable) do
4.   -- code
5. end
6.
```

### 4) repeat... Until loop

Repeat... until loop is similar to while loop, but it first executes the loop body and then checks the conditions. Only when the condition is false, will it continue to execute. The basic structure and example of the repeat... until loop are as follows:

Code 2-29 The basic structure of the until loop

```

1.  repeat
2.  --Circular body
3.
4.  until condition

```

Code 2-30 repeat Example of using the until loop

```

1.  --Example: Calculate the sum of 1 to 5
2.  local sum = 0
3.  local i = 1
4.  repeat
5.  sum = sum + i
6.  i = i + 1
7.  until i > 5
8.  -- Sum : 15

```

### 5) Nested loop

Nested loop refers to a loop structure being contained within another loop structure. This is typically used in scenarios where multidimensional data is processed or multiple sets of similar operations need to be repeated. In nested loops, the outer loop controls larger operations such as the number of rows, while the inner loop controls smaller operations such as the specific content of each row.

Code 2-31 Nested Loop Example

```

1.  --Example: print a 5x5 star matrix.
2.  for i = 1, 5 do -- outer loop, control line
3.    for i = 1, 5 do -- Inner loop, control column
4.      io.write("*") -- Output asterisks and keep them on the same line
5.    end
6.  end
7.
8.  for i = 1, 5 do -- outer loop, control line
9.    for i = 1, 5 do -- Inner loop, control column
10.     io.write("* ") -- Output asterisks and keep them on the same line
11.    end

```

```
12. -- Line break after completing each line of output
13. end
14.
```

### 2.2.3 Control statements

FR Lua provides two special statements for controlling loops, namely `break` and `goto`.

**Break statement:** Used to jump out of the current loop in advance. When the loop encounters a `break` statement, it will immediately end the loop, jump out of the current loop body, and no longer execute subsequent iterations. It can avoid unnecessary loops and improve efficiency.

Code 2-32 Example of `break` statement in FR Lua

```
1. --Example: Exit the loop when the counter reaches 3
2. for i = 1, 5 do
3.     if i==3 then -- When i equals 3, exit the loop
4.         break -- prematurely terminate the loop
5.     end
6. end
7.
```

**goto statement:** It can unconditionally jump to the specified tag position. It is possible to simplify code logic in certain complex situations.

Code 2-33 Example of `goto` statement in FR Lua

```
1. Example: Using goto to skip certain statements
2. local i = 1
3. :: loop_start:: -- Define a label
4. i = i + 1
5. if i <= 5 then
6.     goto loop_start -- Jump back to the tag and continue the loop
7. end
```

## 2.3 Functions

A function is an abstraction of a set of instructions in a program, used to perform specific tasks or calculations and return results. The functions in FR Lua language are very flexible in writing and use, they can have or not have Parameters and can return one or multiple values.

### 2.3.1 Definition and Use of FR Lua Functions

The functions in FR Lua are an important component of programming, supporting encapsulation of duplicate code, modular programming, and handling complex logical operations. The basic structure of FR Lua functions is as follows:

Code 2-34 Basic Structure of FR Lua Functions

<pre> 1. optional_function_scope function function_name(argument1, argument2, ...) 2.     --Function Body: Operation of Function 3.     return result_params_comma_separated 4. end </pre>
--

Function structure analysis:

`optional_function-scope`: optional scope setting. If the function needs to be used only in a specific module or block, it can be defined as a local function, and if not set, it defaults to a global function.

- `Function_name`: The function name used to identify the function for easy calling.
- `Argument1, Argument2,...`: Parameters of the function, data passed to the function.
- `Function_fody`: The function body contains the specific code that needs to be executed.
- The Return value of the function '`return result_crams_comma_separated`' can return multiple values.

The two main uses of functions are:

**Complete tasks**: for example, call functions in the cooperative robot to perform operations such as moving and grabbing. Functions are used as call statements.

**Calculate and Return values**: When calculating loads or coordinates, functions are used as expressions for assignment statements.

### 2.3.2 Function Parameters

FR Lua functions support different types of Parameter passing methods, allowing the passing of basic data types, tables, and functions.

1) Passing basic data types can include numerical, string, and boolean values as Parameters:

Code 2-35 Function Parameter Passing Example

```
1. function set_speed(speed)
    print ("Set speed to:", speed)
end

set_speed(15)
```

2) A table, as a Parameter table and a complex data structure, is commonly used to pass multiple related values:

Code 2-36 The function takes a table as a Parameter and passes it

```
1. function set_position(pos)
2.     --
3. end
4.
5. local position = {x = 100, y = 200, z = 300}
6. set_position(position)
```

3) Varargs, FR Lua supports mutable Parameters, meaning functions can accept any number of Parameters. Through Grammar implementation:

Code 2-37 The function takes a table as a Parameter and passes it

```
1. function print_args(...)
2.     local args = {...} -- Package all Parameters into a table
3.     for i, v in ipairs(args) do
4.         --code
5.     end
6. end
7.
8. print_args("Hello, FR!", 123, true)
```

### 2.3.4 Return value of function

The FR Lua function can return any type of value, including a single value, multiple values, or a table. The Return value is used to provide the caller with the operation result.

1) Return a single value: The function can return a calculation result or status information:

Code 2-38 returns a single value

```
1. function square(x)
2.     return x * x
3. end
4.
5. local result = square(5)
```

2) If a function needs to return multiple results, you can use commas to separate multiple returns:

Code 2-39 returns multiple values

```

1. function calculate(a, b)
    local sum = a + b
    local diff = a - b
    return sum, diff
end

local sum_result, diff_result = calculate(10, 5)
print ("sum:", sum_result, "difference:", diff_result)
--[[
Output
Sum: 15 Difference: 5
]]

```

3) return table: Complex data can be returned through a table, especially when multiple values need to be passed:

Code 2-40 returns the table

```

1. function get_robot_status()
2.     return {speed = 10, position = {x = 100, y = 200, z = 300}}
3. end
4.
5. local status = get_robot_status()

```

### 2.3.5 Functions as Parameters and Return values

FR Lua is a functional language that allows functions to be passed as Parameters to other functions and also allows functions to return to other functions. This feature can be used to create flexible callback mechanisms and higher-order functions.

1) Function as Parameter: One function can be passed as a Parameter to another function to implement callbacks

Code 2-41 function passed as Parameter

```

1. function operate_on_numbers(a, b, operation)
    return operation(a, b)
end

local result = operate_on_numbers(5, 10, function(x, y)
    return x * y

```

```
end)
```

2) Functions as Return values: Functions can also return another function, which is very useful when creating custom logic:

Code 2-42 function passed as Parameter

```
1. function multiplier(factor)
   return function(x)
     return x * factor
   end
end

local double = multiplier(2)
local triple = multiplier(3)
```

### 2.3.6 Recursive Functions

FR Lua supports recursion, which means that the function calls itself. Recursive functions are commonly used to handle tasks such as decomposition problems and traversing tree structures.

The basic structure of recursive functions usually consists of two parts:

**Base Case:** This is the termination condition of recursion to prevent infinite recursion of the function.

**Recursive Case:** A function recursively calls itself to gradually reduce the size of the problem until it meets the baseline conditions.

Code 2-43 Basic Structure of Recursive Functions

```
1. function recursive_function(param)
2.     if benchmark condition then
3.         --Terminate recursion and return result
4.         return result
5.     else
6.         --Recursive call
7.         return recursive_function (reduced Parameter)
8.     end
9. end
```

Simple example: factorial calculation, factorial is a classic example of recursive functions. The definition of factorial is:  $n! = n * (n-1) * (n-2) * \dots * 1$ , and  $0! = 1$ . We can calculate factorial through recursive functions.

Stepwise recursive formula:  $n! = n * (n - 1)!$

The benchmark condition is  $0! = 1$

Code 2-44 Recursive implementation of factorial

```
1. function factorial(n)
   if n == 0 then
     return 1-- Benchmark condition: The factorial of 0 is 1
   else
     return n * factorial (n - 1) -- Recursive call: n * (n-1)!
   end
end
```

## 2.4 Character string

In FR Lua language, string is a basic data type used to store textual data. Strings in FR Lua can contain various characters, including but not limited to letters, numbers, symbols, spaces, and other special characters.

### 2.4.1 String Definition

In FR Lua, strings can be represented using single quotes, double quotes, or square brackets `[[ ]]`. Square brackets are commonly used to represent multi line strings.

Code 2-45 String Definition Example

```
1. --Define a string using single quotation marks
local str1 = 'Hello FR3'

--Define a string using double quotation marks
local str2 = "Welcome to FR "
```

--Define a multiline string using square brackets

```
local str3 = [[
This is a multi-line
string for FR5 product.
]]
--      string for FR5 product.
```

## 2.4.2 Escaping Characters

Lua supports the use of backslashes to represent escape characters. Escaped characters and their corresponding meanings:

Table 2-2 Escaped Characters and Their Corresponding Meanings

Escaping characters	Significance	ASCII code value (decimal)
\a	Bell ringing (BEL)	007
\b	Backspace (BS), move the current position to the previous column	008
\f	Page change (FF), move the current position to the beginning of the next page	012
\n	Line break (LF), move the current position to the beginning of the next line	010
\r	Enter (CR) to move the current position to the beginning of the line	013
\t	Horizontal Tab (HT) (Jump to the next TAB position)	009
\v	Vertical Tabulation (VT)	011
\\	Represents a reverse slash character "\ "	092
\'	Represents a single quotation mark (apostrophe) character	039
\"	Represents a double quotation mark character	034
0	Empty character (NULL)	000
\ddd	Any character represented by 1 to 3 octal digits	Three digit octal
\xhh	Any character represented by 1 to 2 hexadecimal digits	Two digit hexadecimal system

## 2.4.3 String Operations

Lua provides various built-in functions for string operations, including some commonly used functions:

Table 2-3 Common Functions for String Operations

Serial number	Method&Application
1	String.upper (argument) converts all strings to uppercase letters.

Table 2-3 (Continued )

Serial number	Method&Application
2	String. power (argument) converts all strings to lowercase letters.
3	String.gsub (mainString, findString, replaceString, num) replaces a specified character in a string.
4	String.find (str, substr, [init, [plain]]) searches for substrings in a specified string and returns substrings the start and end indexes.
5	String. reverse (arg) inverts the string.
6	string.format (...) Format a string.
7	String.char (arg) and string.byte (arg) String.char: Convert integer numbers to characters. String.byte: Convert characters to integer values.
8	String. len (arg) calculates the length of a string.
9	String.rep (string, n) returns n copies of a string.
10	String.match (str, pattern, init) searches for the first substring from the specified string str that matches the pattern pattern.
11	String. sub (s, i [, j]) performs string truncation operations.

1) String.upper: Convert lowercase letters to uppercase letters

Table 2-4 Detailed Parameters of string.upper

Attribute	Explanation
<b>Prototype</b>	local upper_str = string.upper(argument)
<b>Description</b>	Convert all strings to uppercase letters
<b>Parameter</b>	·Argument: The string to be converted
<b>Return value</b>	·Upper_str: The converted output string

Code 2-46 string.upper Example

```
1. local original_str = "Hello, FR!"
2. local upper_str = string.upper(original_str)
```

2) String.lower: Convert lowercase letters to uppercase letters

Table 2-5 Detailed Parameters of string.lower

Attribute	Explanation
<b>Prototype</b>	local lower_str = string.lower(str)
<b>Description</b>	Convert all uppercase letters in a string to lowercase letters
<b>Parameter</b>	• Str: The string to be converted
<b>Return value</b>	• Lower_str: The converted output string

## Code 2-47 string.upper Example

1. local original\_str = "HELLO, FR!"
2. local lower\_str = string.lower(original\_str)

## 3) String.gsub: Global substitution in strings

Table 2-6 Detailed Parameters of string.gsub

Attribute	Explanation
<b>Prototype</b>	local newString = string.gsub(mainString, findString, replaceString, num)
<b>Description</b>	Used for global replacement in a string, i.e. replacing all matching substrings. <ul style="list-style-type: none"> <li>• MainString: The original string to be replaced;</li> <li>• FindString: The substring or pattern to be searched for;</li> <li>• (Point): Match any individual character.</li> <li>• .%Escaping special characters or Lua patterns. For example,% Representing dot characters in literal sense; <ul style="list-style-type: none"> <li>• %a: Match any letter ([A-Za-Z]);</li> <li>• %c: Match any control character;</li> <li>• %d: Match any number ([0-9]);</li> <li>• %l: Match any lowercase letter;</li> <li>• %u: Match any uppercase letter;</li> <li>• %x: Match any hexadecimal digit ([0-9A-Fa-f]);</li> <li>• %p: Match any punctuation mark;</li> <li>• %s: Match any blank character (space, tab, line break, etc.);</li> <li>• %w: Match any alphanumeric character (equivalent to% a% d);</li> <li>• %b: Match any word boundary;</li> <li>• %f: Match any file name character;</li> <li>• %[ : Match any character class;</li> <li>• %]End character class;</li> <li>• %*: Indicates that the preceding character or sub pattern can appear zero or multiple times;</li> <li>• %+: Indicates that the preceding character or sub pattern appears at least once.</li> <li>• %-: Indicates that the preceding character or sub pattern appears zero or once.</li> <li>• %?: Indicates that the preceding character or sub pattern appears zero or once.</li> <li>• %n: Represents the nth captured sub pattern, where n is a number.</li> <li>• %%Match the percentage sign% itself.</li> </ul> </li> <li>• ReplaceString: a string used to replace the found substring;</li> </ul>
<b>Parameter</b>	
<b>Return value</b>	• NewString: The replaced string.

## Code 2-52 string.gsub Example

```

1. local mainString = "Hello, FR! Hello, Lua!"
2. local findString = "Hello"
3. local replaceString = "Hi"
4. --Replace all matching substrings
5. local newString = string.gsub(mainString, findString, replaceString)

```

4) String.find: Search for substrings in a string.

Table 2-7 Detailed Parameters of string.find

Attribute	Explanation
<b>Prototype</b>	string.find (str, substr, init, plain)
<b>Description</b>	Search for substrings in a string and return the start and end indices of the substring. If a substring is found, it returns the starting and ending positions of the substring in the string; If not found, it returns nil
<b>Parameter</b>	<ul style="list-style-type: none"> <li>• Str: The string to search for;</li> <li>• Substr: The substring to be searched for.</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>• Init: The starting position of the search, default is 1. If specified, the search will start from this location.</li> </ul>

## Code 2-49 string.find Example

```

1. local str = "Hello, FR
2. local substr = "world"
3.
4. --Find the position of substring 'FR'
5. local start, end_ = string.find(str, substr)
6.
7. --Start searching from the specified location
8. local start, end_ = string.find(str, substr, 6)
9.
10. --Compare using regular strings
11. local start, end_ = string.find(str, "FR", 1, true)
12.

```

5) String.reverse: Inverts the string.

Table 2-8 Detailed Parameters of string.reverse

Attribute	Explanation
<b>Prototype</b>	local reversed_str = string.reverse (arg)
<b>Description</b>	Used to invert strings
<b>Parameter</b>	<ul style="list-style-type: none"> <li>• arg: The string that needs to be reversed;</li> </ul>
<b>Return value</b>	Reversed_str: The reversed string

## Code 2-50 string.reverse Example

1. local original\_str = "Hello, World!"
2. local reversed\_str = string.reverse(original\_str)
3. print (reversed\_str) -- Output "! DlrOW, olleH"

6) String.f Format: The function is used to create a formatted string.

Table 2-9 Detailed Parameters of string.form

Attribute	Explanation
<b>Prototype</b>	local string.format = string.format(format, arg1, arg2, ...)
<b>Description</b>	Used to create formatted strings <ul style="list-style-type: none"> <li>• Format: a string containing formatting instructions that start with the % symbol and are followed by one or more characters to specify the format;</li> <li>• %D or %i: integer;</li> <li>• %f: Floating point number;</li> <li>• %g: Automatically select %f or %e based on the size of the value;</li> <li>• %E or %E: floating point number represented by Scientific notation;</li> <li>• %X or %X: hexadecimal integer;</li> </ul>
<b>Parameter</b>	<ul style="list-style-type: none"> <li>• %o: Octal integer;</li> <li>• %p: Pointer (usually displayed as a hexadecimal number);</li> <li>• %s: String;</li> <li>• %q: A string enclosed in double quotation marks, used for program output;</li> <li>• %c: Characters;</li> <li>• %b: Binary numbers;</li> <li>• %%Output% symbol;</li> <li>• Arg1, arg2,...: Parameters to be inserted into the formatted string.</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>• Reversed_str: The reversed string.</li> </ul>

## Code 2-51 string.f Format Example

1. --Format numbers
2. local num = 123
3. local formatted\_num = string.format("Number: %d", num)
- 4.
5. --Format floating-point numbers
6. local pi = 3.14159
7. local formatted\_pi = string.format("Pi: %.2f", pi)
- 8.
9. --Format string
10. local name = "Kimi"
11. local greeting = string.format("Hello, %s!", name)
- 12.

```

13. --Format multiple values
14. local name = "Kimi"
15. local age = 30
16. local greeting = string.format("Hello, %s. You are %d years old.", name, age)
17.
18. --Format as hexadecimal
19. local num = 255
20. local formatted_hex = string.format("Hex: %x", num)

```

Code 2-51 (continued)

```

21. --Format as Scientific notation
22. local large_num = 123456789
23. local formatted_scientific = string.format("Scientific: %e", large_num)
24.

```

7) `String.char`: Convert one or more integer Parameters into corresponding strings

Table 2-10 Detailed Parameters of `string.char`

Attribute	Explanation
<b>Prototype</b>	<code>string.char(arg1, arg2, ...)</code>
<b>Description</b>	Convert one or more integer Parameters into corresponding strings, where each integer represents the ASCII or Unicode encoding of a character
<b>Parameter</b>	<ul style="list-style-type: none"> <li>• Arg1, arg2,...: integer sequence to be converted to characters;</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>• Str: A string composed of converted characters.</li> </ul>

Code 2-52 `string.char` Example

```

1. local str = string.char(72, 101, 108, 108, 111)
2.

```

8) `String.byte`: Convert one or more characters in a string to an integer.

Table 2-11 Detailed Parameters of `string.byte`

Attribute	Explanation
<b>Prototype</b>	<code>local byte1, byte2 = string.byte (s, i, j)</code>
<b>Description</b>	Convert one or more characters in a string to their corresponding ASCII or Unicode encoded integers. <ul style="list-style-type: none"> <li>• s: The string to be converted.</li> <li>• i: The position of the first character to be converted in a string is set to 1 by default;</li> <li>• j: The position of the last character to be converted in a string is set to i by default.</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>• Byte1, byte2: The encoded values corresponding to the converted characters.</li> </ul>

Code 2-53 `string.byte` Example

```

1. local str = "Hello"
2. local byte1 = string.byte(str, 1)

```

```

3. local bytes = string.byte(str, 1, 5)
4.
5. for i, v in ipairs(bytes) do
6.     -- code
7. end

```

9) String.len: Calculate the length of a string.

Table 2-12 Detailed Parameters of string.len

Attribute	Explanation
<b>Prototype</b>	local length = string.len (arg)
<b>Description</b>	The function is used to calculate the length of a string, which is the number of characters contained in the string.
<b>Parameter</b>	<ul style="list-style-type: none"> <li>Arg: The string to calculate its length.</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>Length: The length of a string, which is the number of characters in the string.</li> </ul>

Code 2-54 string.len Example

```

1. local str = "Hello, FR!"
2. local length = string.len(str)

```

10) String.rep: Copy a string.

Table 2-13 Detailed Parameters of string.rep

Attribute	Explanation
<b>Prototype</b>	local repeated_str = string.rep (string, n)
<b>Description</b>	Used to repeat a string a specified number of times, that is, to copy and concatenate a string multiple times.
<b>Parameter</b>	<ul style="list-style-type: none"> <li>Arg: The string to calculate its length.</li> </ul>
<b>Return value</b>	<ul style="list-style-type: none"> <li>Length: The length of a string, which is the number of characters in the string.</li> </ul>

Code 2-55 string.rep Example

```

1. local str = "FR "
2. local n = 3
3. local repeated_str = string.rep(str, n)

```

11) String.match: searches for substrings in the str that match the specified pattern.

Table 2-14 Detailed Parameters of string.match

Attribute	Explanation
<b>Prototype</b>	local match_result = string.match (str, pattern, init)
<b>Description</b>	The function is used to search for substrings in a given string str that match a

specified pattern.

- Str: The string to search for;
- Pattern: a string that defines the search pattern and can contain special pattern matching characters;
- Init: The starting position of the search, default is 1. If specified, the search will start from this location.

**Parameter**

- Match\_desult: If a matching substring is found, return the matching string. If

**Return value** captures (sub patterns enclosed in parentheses) are defined in the pattern, return the values of these captures. If no match is found, return nil.

Code 2-56 string.match Example

```

1. local text = "Hello, 1234 world! "
2. local pattern="% d+" -- matches one or more numbers
3. local start = 1
4.
5. --Match numbers
6. local match = string.match(text, pattern, start)
7.
8. --Match and return
9. local pattern_with_capture = "(%d+) world"
10. local match, number = string.match(text, pattern_with_capture, start)
11.

```

12) String.sub: Extract substrings from a string.

Table 2-15 Detailed Parameters of string.sub

Attribute	Explanation
<b>Prototype</b>	string.sub (s, i, j)
<b>Description</b>	Extract a substring from the given string s. It determines the range of substrings to be truncated based on the specified starting position i and optional ending position j.
<b>Parameter</b>	<ul style="list-style-type: none"> <li>• s: To extract the original string of a substring;</li> <li>• i: The index position at the beginning of a substring can be negative, indicating that the calculation starts from the end of the string;</li> <li>• j: End position (optional), can also be negative, indicating calculation starts from the end of the string. If j is omitted, it will be truncated to the end of the string by default.</li> </ul>
<b>Return value</b>	• Sub-result: The extracted substring.

Code 2-57 string.sub Example

```

1. --Simple excerpt
2. local text = "FR3 Robotics"
3. local subText = string.sub(text, 1, 3)
4.
5. --Cut from the starting position

```

```

6. local text = "FRs FR5"
7. local subText = string.sub(text, 5)
8.
9. --Use negative index to extract from the end
10. local text = "Welcome to FR10"
11. local subText = string.sub(text, -4, -1)
12.

```

## 2.5 Arrays

In FR Lua, arrays are implemented using the table type. In fact, there is no dedicated array type in FR Lua, but tables can be used as arrays to process elements. The index of an array generally starts from 1, rather than 0 as in other languages. You can use `{}` to create an empty array and store various types of elements in it.

### 2.5.1 One dimensional array

#### 1) Create an array

Code 2-58 Create Array Example

```

1. --Create an empty array
2. local array = {}
3. --Initialize array
4. local robotmodels = {"FR3", "FR5", "FR10", "FR20"}

```

2) Accessing array elements: Accessing array elements through indexes, starting from 1.

Code 2-59 Example of accessing array elements

```

1. robotmodels [1] --Accessing array elements

```

3) Modifying array elements: You can modify elements in an array by indexing them.

Code 2-60 Example of modifying array elements

```

1. --Modify an element in an array
2. robotmodels [2] = "FE5_1"

```

### 2.5.2 Multidimensional array

In FR Lua, multidimensional arrays are implemented through nested tables, meaning that each element in the array itself is also an array. Through this method, two-dimensional arrays, three-dimensional arrays, and even higher dimensional arrays

can be created.

### 1) Create multidimensional array

To create a two-dimensional array, you can store the data for each row in a separate table, and then store the tables for these rows in a larger table.

Here is a simple example of a two-dimensional array that stores different robot models and their Parameters.

Code 2-61 Example of 2D Array

```

1.  --Create a two-dimensional array
local robots = {
    {"FR3", 3, "Lightweight"},
    {"FR5", 5, "Standard"},
    {"FR10", 10, "Heavy-duty"}
}--Accessing elements in a two-dimensional array
--robots [1] [1] -- Output: FR3
--robots [2] [2] -- Output: 5
--robots [3] [3] -- Output: Heavy duty

```

### 2) Traverse a two-dimensional array

Nested loops can be used to traverse multidimensional arrays. The following example demonstrates how to traverse a two-dimensional array of robots.

Code 2-62 Traverse 2D Array Example

```

1.  for i = 1, #robots do
2.      for j = 1, #robots[i] do
3.          -- robots[i][j])
4.      end
5.  end

```

## 2.6 Table

In FR Lua, table is a powerful and flexible data structure. It can be used to represent arrays, dictionaries, collections, and other complex data types. Due to the lack of built-in arrays or object systems in FR Lua, tables are one of the most core data structures in FR Lua.

### 2.6.1 Basic Usage of Table

Table is an associative array that uses any type of key (but not nil) to index. That is to say, both numbers and strings can be used as key values.

## Code 2-63 Table Index Example

- ```

1. --Example 1: Using numbers as indexes
2. local fruits = {"FR3", "FR5", "FR10"}
3. --fruits[1] -- output: FR3
4. --Example 2: Using a string as an index
5. local person = {name = "FR", age = 5}
6. --person["name"] --output: FR

```

## 2.6.2 Table Operation Functions

In FR Lua, the table module provides some commonly used functions to manipulate table data.

Table 2-16 Detailed Parameters of Common Functions in Table Module

| Serial number | Method&Application                                                                                                       |
|---------------|--------------------------------------------------------------------------------------------------------------------------|
|               | table.concat (table , sep , start , end):                                                                                |
| 1             | All elements from the start position to the end position are separated by the specified delimiter (sep) and reconnected. |
| 2             | table.insert (table, pos, value):<br>Insert value elements at specified positions in the array section of the table      |
| 3             | table.remove (table , pos)<br>return the elements in the table array that are partially located at the pos position      |
| 4             | table.sort (table , comp)<br>Sort the given table in ascending order.                                                    |

Here are detailed Explanations and usage examples of these functions:

- 1) Table.concat: Connecting strings in a table

Table 2-17 Detailed Parameters of table.concat

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | local concatenated = table.concat (table , sep , start , end)                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b> | This function is used to concatenate strings in a table and can specify the delimiter sep, as well as concatenate from the start item to the end item of the table. <ul style="list-style-type: none"> <li>• Table: a table containing the string elements to be connected;</li> <li>• Sep: The delimiter used when connecting strings. If not provided or nil, do not use the • delimiter. The default value is nil.</li> </ul> |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• Start: Specify which index in the table to start the connection from. The default value is 1, starting from the first element of the table.</li> <li>• End: Specify which index in the table to connect to. If not provided or nil, connect to the end of the table.</li> </ul>                                                                                                         |

**Return value** • Concatenated: The concatenated string.

Code 2-65 table.concat example

```
1. local FRuser = {" Welcome ", " to ", " FR "}
2.
3. local result = table.concat(FRuser, " ")
```

2) Table-in-insert: inserts a value at a specified location in a table

Table 2-18: Detailed Parameters of Table-INsert

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | table.insert (table, pos, value)                                                                                                                                                                                                                                                                                          |
| <b>Description</b>  | Used to insert a value at a specified location in a table<br>·Table: The table where new elements need to be inserted;<br>·value: The value of the new element to be inserted;                                                                                                                                            |
| <b>Parameter</b>    | ·Pos: Index of the position where the new element is inserted. If pos equals the length of the table plus one, the new element will be added to the end of the table. If pos is greater than the length of the table, the new element will be inserted at the end of the table and the length of the table will increase. |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                      |

Code 2-66 Table. insert Example

```
1. local robots = {"FR3", "FR5"}
2.
3. -- Insert at the second position
4. table.insert(robots, 2, "FR10")
5. -- robots [2]-- Output: FR10
```

3) Table.remove: Elements removed from a table

Table 2-19 Detailed Parameters of table.remove

| Attribute           | Explanation                                                                                                                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | local removed = table.remove (table, pos)                                                                                                                                                                                     |
| <b>Description</b>  | Delete the element at the specified position from the table. If the position pos is not specified, delete the last element.<br>·Table: The table from which elements need to be removed;                                      |
| <b>Parameter</b>    | ·POS: To remove the positional index of an element. The default value is nil, indicating the removal of the last element. If pos is greater than the length of the table, nil will be returned and the table will not change. |
| <b>Return value</b> | ·Removed: The value of the removed element. If no pos is specified or pos is out of range, return nil.                                                                                                                        |

Code 2-67 table.remove example

```

1. local robots = {"FR3", "FR5", "FR10"}
2. table.remove(robots, 2)

```

4) Table.sort: Sort the elements in the table.

Table 2-20 Detailed Parameters of table.sort

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | table.sort (table, comp)                                                                                                                                                                                                                                                                                   |
| <b>Description</b>  | Sort the elements in the table. If the comp function is provided, use a custom comparison function to determine the sorting order.<br><ul style="list-style-type: none"> <li>·Table: The table to be sorted;</li> <li>·Comp: A comparison function used to determine the order of two elements.</li> </ul> |
| <b>Parameter</b>    | This function takes two Parameters (usually elements from a table) and returns a Boolean value. If the first Parameter should be before the second Parameter, return true; Otherwise, return false.                                                                                                        |
| <b>Return value</b> | table.sort (table, comp)                                                                                                                                                                                                                                                                                   |

Code 2-68 table.sort example

```

1. local numbers = {5, 2, 9, 1, 7}
2. table.sort(numbers)
3. for i, v in ipairs(numbers) do
4.     -- code
5. end
6. --Output: 1 2 5 7 9
7.
8. --Example: Custom Sorting
9. local numbers = {5, 2, 9, 1, 7}
10. table.sort (numbers, function (a, b) return a>b end) -- Sort in descending order
11. for i, v in ipairs(numbers) do
12.     -- code
13. end
14. --Output: 9 7 5 2 1

```

## 2.7 File operation

File I/O in FR Lua is used for reading and modifying files. It operates in two modes: simple mode and full mode.

### 2.7.1 Simple mode

The simple mode is similar to file I/O operations in the C language. It maintains a current input file and a current output file, providing operations for these files. It is suitable for basic file operations.

Use the `io.open` function to open the file, where the value of mode is shown in Table 2-22.

Table 2-21 values of mode

| Mode      | Description                                                                                                                                                                                                                                          |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>r</b>  | Open the file in read-only mode, the file must exist.                                                                                                                                                                                                |
| <b>w</b>  | Open the write only file. If the file exists, the file length will be reset to 0, which means the content of the file will disappear. If the file does not exist, create it.                                                                         |
| <b>a</b>  | Open write only files in an attached manner. If the file does not exist, it will be created. If the file exists, the written data will be added to the end of the file, and the original content of the file will be retained. (EOF symbol reserved) |
| <b>r+</b> | Open the file in read-write mode, the file must exist.                                                                                                                                                                                               |
| <b>w+</b> | Open the read-write file, and if the file exists, the file length will be reset to zero, meaning the content of the file will disappear. If the file does not exist, create it.                                                                      |
| <b>a+</b> | Similar to a, but this file is readable and writable                                                                                                                                                                                                 |
| <b>b</b>  | Binary mode, if the file is a binary file, b can be added                                                                                                                                                                                            |
| <b>+</b>  | The number indicates that the file can be read or written                                                                                                                                                                                            |

Simple mode uses standard I/O or a current input file and a current output file.

For example, if there is a file named 'example.txt', perform a file read operation

Code 2-69 reads files

```

1. --Open files in read-only mode
2. file = io.open("example.txt", "r")
3.
4. --Set the default input file to 'example.txt'
5. io.input(file)
6.
7. --Output file first line
8. print(io.read())
9.
10. --Close open files
11. io.close(file)
12.
13. --Open write only files in an attached manner
14. file = io.open("example.txt", "a")
15.

```

```

16. --Set the default output file to 'example. txt'
17. io.output(file)
18.
19. --Add Lua comments on the last line of the file
20. Io. write ("end of example. txt file comment")
21.
22. --Close open files
23. io.close(file)

```

In the above example, the io. "x" method was used, where io. read() does not have any Parameters. The Parameters can be one from Table 2-22:

Table 2-22 Parameters of io. read()

| Mode                   | Description                                                                                            |
|------------------------|--------------------------------------------------------------------------------------------------------|
| <b>"*n"</b>            | Read a number and return it. Example: file.read ("* n")                                                |
| <b>"*a"</b>            | Read the entire file from the current location. Example: file.read ("* a")                             |
| <b>* l "(default)"</b> | Read the next line and return nil at the end of the file (EOF). Example: file.read ("* l")             |
| <b>number</b>          | returns a string with a specified number of characters, or returns nil on EOF. Example: file. read (5) |

Other IO methods include:

io. tmpfile(): returns a temporary file handle that opens in update mode and is automatically deleted at the end of the program

io. type (file): Check if obj has an available file handle

io. lush(): Write all data in the buffer to the file

io. lines (optional file name): returns an iterative function that retrieves a line of content from the file each time it is called. When it reaches the end of the file, it returns nil but does not close the file.

### 2.7.2 Full mode

Full mode uses file handles to perform operations, defining all file operations as file handle methods in an object-oriented style. It is suitable for more complex tasks, such as reading multiple files simultaneously. For example, using a file named example.txt, you can perform various file operations.

Code 2-70 operates on files in full mode

```

1. --l. Read the entire file content:
2. local file = io.open("example.txt", "r")

```

```
3. local content=file: read ("* a") -- Read the entire file content
4. file:close()
5.
6. --2. Read files line by line:
7. local file = io.open("example.txt", "r")
8. for line in file:lines() do
9.     -- code
10. end
11. file:close()
12.
13. --3. Read a line
14. local file = io.open("example.txt", "r")
15. local line=file: read ("* l") -- Read one line
16. file:close()
17.
18. --Write file operation to the example. txt file
19. --1. Write string:
20. local file = io.open("example.txt", "w")
21. file:write("Hello, Lua!\n")
22. file:close()
23.
24. --2. Add write, append content to the end of the file:
25. local file = io.open("example.txt", "a")
26. file:write("This is appended text.\n")
27. file:close()
```

## 2.8 Modules

Modules are a mechanism used in FR Lua to organize code, providing a better way to encapsulate and reuse code. In large-scale applications, using modules can make the code structure clearer and facilitate maintenance and expansion.

### 2.10.1 Creating Modules

In FR Lua, tables are used to create modules by directly defining a table and returning it as the module. This method is more intuitive and clear.

Code 2-71: Creating a Module Using Tables

```
1. --Create modules using tables
2. --robot_module.lua
3. local robot_module = {}
4.
5. robot_module.version = "1.0"
```

```
6.
7.  function robot_module.greet()
8.    -- code
9.  end
10.
11. return robot_module
```

### 2.10.2 Module Call

FR Lua uses the `require` function to load modules. `Require` will execute the module file and return the module's table. Modules are usually saved in the same directory as FR Lua scripts or configured in the path specified by the `LUA_PATH` environment variable.

The `require` function will only be executed once when the module is loaded for the first time and the result will be cached. If you call `require` the same module multiple times, it will only return the table of the first loaded module and will not reload the module. This behavior helps improve performance and avoid duplicate loading and execution.

Code 2-72 records the modules that have been created

```
1. --Loading module
2. local robot = require "robot_module"
3.
4. --Using functions in the module
5. Robot.green() -- Output: Welcome to use the FAIRINO collaborative robot
```

### 2.10.3 Search Path

FR Lua uses a search path to find module files. This path can be set through the `package.path` variable. The path is a string containing patterns, and FR Lua will search for module files in the directories specified by these patterns. `Package.path` can be set in the script to specify the search path for the module:

Code 2-73 records the modules that have been created

```
1. package.path = package.path .. ";/ path/to/modules/?.lua"
2. local mathlib = require("robot_module ")
```

## 3 FR Lua Script Preset Functions

### 3.1 Logical instruction

#### 3.1.1 Loop

Please refer to section 2.2.2 for details.

#### 3.1.2 Waiting

This instruction is a delay instruction, divided into four parts: "WaitMs", "WaitDI", "WaitMultiDI", and "WaitAI".

##### **WaitMs: Wait for a specified time**

Table 3-1 Detailed Parameters of WaitMs

| Attribute           | Explanation                                                        |
|---------------------|--------------------------------------------------------------------|
| <b>Prototype</b>    | WaitMs(t_ms)                                                       |
| <b>Description</b>  | Wait for the specified time                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>t_ms: Unit [ms].</li> </ul> |
| <b>Return value</b> | null                                                               |

##### **WaitDI: Waiting for digital input from the control box**

Table 3-2 Detailed Parameters of WaitDI

| Attribute          | Explanation                                                                                                                                                           |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | WaitDI (id, status,maxtime, opt)                                                                                                                                      |
| <b>Description</b> | Waiting for digital input from the control box                                                                                                                        |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>id: Control box DI port number, 0-7 control box DI0-DI7, 8-15 control box CI0-CI7;</li> <li>status:0-False, 1-True;</li> </ul> |

- maxtime:maximum waiting time, unit [ms];
- opt: Policy after timeout, 0-program stops and prompts timeout, 1-ignore timeout prompt to continue program execution, 2-wait indefinitely.

**Return value** null

### WaitToolDI: Waiting for tool numerical input

Table 3-3 Detailed Parameters of WaitToolDI

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                          |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WaitToolDI (id, status,maxtime, opt)                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Waiting for digital input from the control box                                                                                                                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: Tool DI port number, 0 - End-DI0, 1 - End-DI1;</li> <li>• status:0-False, 1-True;</li> <li>• maxtime:maximum waiting time, unit [ms];</li> <li>• opt: Policy after timeout, 0-program stops and prompts timeout, 1-ignore timeout prompt to continue program execution, 2-wait indefinitely.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                 |

### WaitMultiDI: Waiting for multiple digital inputs from the control box

Table 3-4 Detailed Parameters of WaitMultiDI

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WaitMultiDI (mode, id, status,maxtime, opt)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Waiting for multiple digital inputs from the control box                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• mode: [0] - Multi channel AND, [1] - Multi channel OR;</li> <li>• id: io number, bit0~bit7 corresponds to DI0~DI7, bit8~bit15 corresponds to CI0~CI7;</li> <li>• status: bit0~bit7 corresponds to DI0~DI7 status, bit8~bit15 corresponds to CI0~CI7 status: 0-False, 1-True;</li> <li>• maxtime:maximum waiting time, unit [ms];</li> <li>• opt: Policy after timeout, 0-program stops and prompts timeout, 1-ignore timeout prompt to continue program execution, 2-wait indefinitely.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

### WaitAI: Waiting for analog input from the control box

Table 3-5 Detailed Parameters of WaitAI

| Attribute        | Explanation                            |
|------------------|----------------------------------------|
| <b>Prototype</b> | WaitAI (id, sign, value, maxtime, opt) |

|                    |                                                                                                                                                                                                                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | Waiting for analog input from the control box <ul style="list-style-type: none"> <li>• id: io number, range [0~1];</li> <li>• sign: 0- greater than, 1- less than</li> </ul>                                                                         |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• value: Input the percentage of current or voltage value, with a range of [0~100] corresponding to current value [0~20mA] or voltage [0~10V];</li> <li>• maxtime:maximum waiting time, unit [ms];</li> </ul> |

Table 3-5 (Continued)

| Attribute           | Explanation                                                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• opt: Policy after timeout, 0-program stops and prompts timeout, 1-ignore timeout prompt to continue program execution, 2-wait indefinitely.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                            |

### WaitToolAI: Waiting for tool analog input

Table 3-6 Detailed Parameters of WaitToolAI

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WaitToolAI (id, sign, value, maxtime, opt)                                                                                                                                                                                                                                                                        |
| <b>Description</b>  | Waiting for tool analog input <ul style="list-style-type: none"> <li>• id: io number, 0 End AI0;</li> <li>• sign: 0 greater than, 1 less than;</li> <li>• value: Input the percentage of current or voltage value, with a range of [0~100] corresponding to current value [0~20mA] or voltage [0~10V];</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• maxtime: maximum waiting time, unit [ms];</li> <li>• opt: Policy after timeout, 0-program stops and prompts timeout, 1-ignore timeout prompt to continue program execution, 2-wait indefinitely.</li> </ul>                                                              |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                              |

### Code 3-1 Waiting Instruction Example

```

1.  --Waiting
2.  WaitMs (1000) -- Wait for a specified time of 1000ms
3.
4.  --Waiting for digital input from the control box
5.  WaitDI (1,1,0,1) -- Port number: Ctrl-DI1, status: true (on),maximum waiting time: 1000ms,
   policy after waiting timeout: ignore timeout prompt and continue program execution
6.
7.  --Waiting for tool digital input
8.  WaitToolDI (1,1,0,1) -- Port number: End DI0, status: true (open),maximum waiting time:
   1000ms, policy after waiting timeout: ignore timeout prompt and continue program execution
9.
10. --Waiting for multiple digital inputs from the control box
11. WaitMultiDI (0,3,11000,0) -- Multi channel AND, IO port numbers: DI0 and DI1, DI0 on, DI1
   off,maximum waiting time: 1000ms, policy after timeout: program stops and prompts timeout.
12. WaitMultiDI (1,3,3,1,0) -- Multiple OR, IO port numbers: DI0 and DI1, DI0 open, DI1
    
```

```

open,maximum waiting time: 1000ms, policy after timeout: program stops and prompts
timeout.
13.
14. --Waiting for analog input from the control box
15. WaitAI (0,0,201000,0) -- IO port: control box AI0, condition:<, value: 20, maximum waiting
time: 1000ms, policy after timeout: program stops and prompts timeout.

```

Code 3-1 (continued)

```

16.
17. --Waiting for tool analog input
18. WaitToolAI (0,0,201000,0) -- IO port: Control box End-AI0, condition:<, value:
20,maximum waiting time: 1000ms, policy after timeout: program stops and prompts
timeout.

```

### 3.1.3 Pause

#### Pause: Pause

Table 3-7 Detailed Parameters of Pause

| Attribute           | Explanation                   |
|---------------------|-------------------------------|
| <b>Prototype</b>    | Pause (num)                   |
| <b>Description</b>  | Call subroutines              |
| <b>Parameter</b>    | • Num: custom numerical value |
| <b>Return value</b> | null                          |

FR Lua has defined the following pause methods

Code 3-2 Pause Example

```

1. Pause (0) -- No function
2. Pause (2) -- Cylinder not in place
3. Pause (3) -- The screw is not in place
4. Pause (4) -- Floating lock handling
5. Pause (5) -- Sliding tooth treatment

```

### 3.1.4 Subroutines

#### NewDofile: subroutine call

Table 3-8 Detailed Parameters of NewDofile

| Attribute        | Explanation                      |
|------------------|----------------------------------|
| <b>Prototype</b> | NewDofile (name_path, layer, id) |

|                     |                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Call subroutines <ul style="list-style-type: none"> <li>• Name_cath: The file path containing the file subroutine, "/fruser/# # # #. lua";</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Layer: the layer number that calls the subroutine;</li> <li>• id: ID number.</li> </ul>                      |
| <b>Return value</b> | null                                                                                                                                                  |

### DofileEnd: Subroutine call ends

Table 3-9 Detailed Parameters of DofileEnd

| Attribute           | Explanation          |
|---------------------|----------------------|
| <b>Prototype</b>    | DofileEnd ()         |
| <b>Description</b>  | Subroutine call ends |
| <b>Parameter</b>    | null                 |
| <b>Return value</b> | null                 |

Code 3-3 Example of calling and closing subroutines

```

1. --Call the dofile1.lua subroutine
2. NewDofile("/fruser/dofile1.lua",1,2);
3.
4. DofileEnd();-- Subroutine call ends

```

### 3.1.5 Variables

The basic content of variables is detailed in section 2.1.3. FR Lua also defines query variable types and system variable queries and assignments.

#### RegisterVar: Variable type query

Table 3-10 Register Var Detailed Parameters

| Attribute           | Explanation             |
|---------------------|-------------------------|
| <b>Prototype</b>    | RegisterVar (type, var) |
| <b>Description</b>  | Variable type query     |
| <b>Parameter</b>    | null                    |
| <b>Return value</b> | null                    |

**GetSysVarvalue:** Retrieve system variables

Table 3-11 Detailed Parameters of GetsysVarvalue

| Attribute           | Explanation                      |
|---------------------|----------------------------------|
| <b>Prototype</b>    | GetSysVarvalue (s_var)           |
| <b>Description</b>  | Retrieve system variables        |
| <b>Parameter</b>    | • s_var: System variable name.   |
| <b>Return value</b> | Var_value: System variable value |

**SetSysVarvalue** Set system variables

Table 3-12 Detailed Parameters of tSysVarvalue

| Attribute           | Explanation                                                                 |
|---------------------|-----------------------------------------------------------------------------|
| <b>Prototype</b>    | SetSysVarvalue (s_var, value)                                               |
| <b>Description</b>  | Set system variables                                                        |
| <b>Parameter</b>    | • s_var: system variable name;<br>• value: The value of the input variable. |
| <b>Return value</b> | null                                                                        |

Code 3-4 Example of Operations Related to FR Lua Variables and System Variable values

```

1. local frvalue1 = 0.0
2. Register Var ("number", "frvalue1") -- Query for numeric variables
3. local frString = "X:3.4, Y:0.0"
4. Register Var ("string", "frString") -- Character variable query
5.
6. TEST_1=Get SysVarvalue (s_var_3) -- Get the system variable value and assign it to TEST_1
7. Set System Variable value (s_var_3,1) -- Set System Variable value

```

## 3.2 Motion command

### 3.2.1 Point to point

#### PTP: point-to-point

Table 3-13 PTP Detailed Parameters

| Attribute          | Explanation                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | PTP (point_name, ovl, blendT, offset_flag, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz) |
| <b>Description</b> | point-to-point motion                                                                                     |
| <b>Parameter</b>   | • point_name: Name of the target teaching point                                                           |

- ovl: Debugging speed, range [0~100%];
- blend T: [-1] - Non smooth, [0~500] - Smooth time, unit: [ms];
- offset\_flag: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - default offset in the tool coordinate system is 0;
- offset\_x~offset\_rz: offset, unit [mm] [° ];

**Return value** null

## MoveJ: Joint Space Motion

Table 3-14 Detailed Parameters of MoveJ

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveJ (j1, j2, j3, j4, j5, j6, x, y, z, rx, ry, rz, tool, user, speed, acc, ovl, ep1, ep2, ep3, ep4, blendT, offset, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz)                                                                                                                                                                                                                                                     |
| <b>Description</b>  | Joint Space Motion <ul style="list-style-type: none"> <li>• j1~j6: Target joint position, unit [° ];</li> <li>• x, y, z, rx, ry, rz: Cartesian pose of the target, unit [mm] [° ];</li> <li>• tool: tool number;</li> <li>• user: workpiece number;</li> <li>• speed: speed, range [0~100%];</li> <li>• acc: Acceleration, range [0~100%], temporarily not open;</li> </ul>                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• ep1~ep4: External axis 1 position~External axis 4 position;</li> <li>• blend T: [-1] - Non smooth, [0~500] - Smooth time, unit: [ms];</li> <li>• offset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_x~offset_rz: offset, unit [mm] [° ].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                    |

Code 3-5 Using point-to-point instructions for motion example

```

1. --Using MoveJ for exercise
2. x,y,z,rx,ry,rz=GetForwardKin(149.135,-79.058,-78.558,-145.409,-94.182,88.654)
3. MoveJ(149.135,-79.058,-78.558,-145.409,-94.182,88.654,
x,y,z,rx,ry,rz,1,0,100,180,100,0.000,0.000,0.000,0.000,0,0,0,0,0,0)
4. --Using PTP for movement
5. PTP (DW01100, -1,0) -- Target Point name: DW01, Velocity Percentage: 100, Blocked:
Yes (-1- Stop), offset: 0- No
6. PTP(DW01,100,10,0)
7. --Target Point name: DW01, Speed Percentage: 100, Blockage: No (10- Smooth Transition
Time of 10ms), offset: 0- No
8. PTP(DW01,100,10,1,0,0,0,0,0)

```

9. --Target Point name: DW01, Velocity Percentage: 100, Blockage: No (10ms), offset: Yes (1-Workpiece/Base Coordinate System Offset), Pose offset: [0.0, 0.0, 0.0, 0.0]
10. PTP(DW01,100,10,2,0,0,0,0,0)
11. --Target Point name: DW01, Velocity Percentage: 100, Blockage: No (10ms), offset: Yes (2-Tool Coordinate System Offset), Pose offset: [0.0, 0.0, 0.0, 0.0, 0.0, 0.0]

### 3.2.2 Straight Line

#### Lin: Linear motion

Table 3-15 Lin Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | Lin (point_name, ovl, blendR, search, offset_flag, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz)                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>  | Linear Lin motion <ul style="list-style-type: none"> <li>• point_name: Target point name;</li> <li>• ovl: Debugging speed, default from 0 to 100 is 100.0;</li> <li>• blendR: [-1.0] - Motion in place (blocking), [0~1000] - Smooth radius (non blocking), unit [mm];</li> <li>• search: [0] - No (welding wire) positioning, [1] (welding wire) positioning;</li> </ul>                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• offset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_x~offset_rz: offset, unit [mm] [°].</li> </ul> velAccParamMode: Speed/acceleration parameter mode: 0-Percentage, 1-Physical meaning. <ul style="list-style-type: none"> <li>• speed: Mode as velocity in the physical sense.</li> <li>• acc: Mode as acceleration in the physical sense.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

#### MoveL: Cartesian Space Linear Motion

Table 3-16 Detailed Parameters of MoveL

| Attribute          | Explanation                                                                                                                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | MoveL (j1, j2, j3, j4, j5, j6, x, y, z, rx, ry, rz, tool, user, speed, acc, ovl, blendR, blendRMode, ep1, ep2, ep3, ep4, search, offset, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz, oacc, velAccParamMode) |
| <b>Description</b> | Cartesian space linear motion <ul style="list-style-type: none"> <li>• j1~j6: Target joint position, unit [°];</li> <li>• x, y, z, rx, ry, rz: Cartesian pose of the target, unit [mm] [°];</li> </ul>                         |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• tool: tool number;</li> <li>• user: workpiece number;</li> <li>• speed: speed, range [0~100%];</li> </ul>                                                                             |

Table 3-16 (Continued)

- acc: Acceleration, range [0~100%], temporarily not open;
- ovl: Debugging speed, range [0~100%];
- blendR: [-1] - Non smooth, [0~1000] - Smooth radius, unit [mm];
- blendMode: Transition mode, 0-inscribed transition, 1-corner transition;
- ep1~ep4: External axis 1 position~External axis 4 position;
- search: [0] - Non welding wire positioning, [1] - welding wire positioning;

| Attribute    | Explanation                                                                                                                                                                                                                                                                                                                                                                          |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|              | <ul style="list-style-type: none"> <li>• offset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_x~offset_rz: offset, unit [mm] [° ]</li> <li>• oacc: Acceleration scaling factor;</li> <li>• velAccParamMode: Speed/acceleration parameter mode: 0-Percentage, 1-Physical meaning..</li> </ul> |
| Return value | null                                                                                                                                                                                                                                                                                                                                                                                 |

## Code 3-6 Motion Example Using Linear Instructions

```
--Using MoveL for Linear Motion
j1,j2,j3,j4,j5,j6=GetInverseKin(0,-315.039,327.526,786.334,0.052,-32.916,-32.464,-1)
MoveL(j1, j2,j3,j4,j5,j6,-315.039,327.526,786.334,0.052,-32.916,-32.464, 1,0, 100, 180,
100, -1, 0.000,0.000,0.000,0.000,0,0,0,0,0,0)
--Basic Lin Linear Motion
Lin (DW01100, -1,0,0) -- Target Point name: DW01, Velocity Percentage: 100, Blockage:
Yes (-1), Positioning: No, offset: No
Lin (DW01100,10,0,0) -- Target Point Information: DW01, Velocity Percentage: 100,
Blockage: No (10mm), Positioning: No, offset: No
```

### 3.2.3 Arc

#### ARC: Arc Motion

Table 3-17 ARC Detailed Parameters

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | ARC (point_p_name, poffset, offset_px, offset_py, offset_pz, offset_prx, offset_pry, offset_prz, point_t_name, toffset, offset_tx, offset_ty, offset_tz, offset_trx, offset_try, offset_trz, ovl, blend)                                                                                                                                                                                                                                                        |
| <b>Description</b> | ARC arc motion                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• point_p_name: the name of the midpoint of the arc;</li> <li>• poffset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_px~offset_prz: offset, unit [mm] [° ];</li> <li>• point_t_name: the name of the endpoint of the arc;</li> <li>• Toffset: [0] - no offset, [1] - offset in the workpiece/base coordinate system,</li> </ul> |

Table 3-17 (Continued)

- [2] - offset in the tool coordinate system;
- offset\_tx~offset\_trz: Offset amount, unit [mm] [° ].
  - ovl: Debugging speed, range [0~100%];
  - blendR: [-1] - Non smooth, [0~1000] - Smooth radius, unit [mm];
  - offset\_x~offset\_rz: offset, unit [mm] [° ].
  - velAccParamMode: Speed/acceleration parameter mode: 0-Percentage, 1-Physical meaning.

| Attribute           | Explanation                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | <ul style="list-style-type: none"> <li>• speed: Mode as velocity in the physical sense.</li> <li>• acc: Mode as acceleration in the physical sense.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                           |

## MoveC: Cartesian space circular motion

Table 3-18 Detailed Parameters of MoveC

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | MoveC (pj1, pj2, pj3, pj4, pj5, pj6, px, py, pz, prx, pry, prz, ptool, puser, pspeed, pacc, pep1, pep2, pep3, pep4, poffset, offset_px, offset_py, offset_pz, offset_prx, offset_pry, offset_prz, tj1, tj2, tj3, tj4, tj5, tj6, tx, ty, tz, trx, try, trz, ttool, tuser, tspeed, tacc, tep1, tep2, tep3, tep4, toffset, offset_tx, offset_ty, offset_tz, offset_trx, offset_try, offset_trz, ovl, blendR)                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b> | <p>Cartesian space circular motion</p> <ul style="list-style-type: none"> <li>• pj1~pj6: Joint positions of path points, unit [° ];</li> <li>• px, py, pz, prx, pry, prz: Cartesian pose of path points, unit [mm] [° ];</li> <li>• ptool: tool number;</li> <li>• puser: workpiece number;</li> <li>• pspeed: speed, range [0~100%];</li> <li>• pacc: Acceleration, range [0~100%], temporarily not open;</li> <li>• pep1~pep4: External axis 1 position~External axis 4 position;</li> <li>• poffset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> </ul>                                                                                       |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• offset_px~offset_prz: offset, unit [mm] [° ];</li> <li>• tj1~tj6: Joint position of target point, unit [° ];</li> <li>• tx, ty, tz, trx, try, trz: Cartesian pose of the target point, unit [mm] [° ];</li> <li>• ttool: tool number;</li> <li>• tuser: workpiece number;</li> <li>• tspeed: speed, range [0~100%];</li> <li>• tacc: Acceleration, range [0~100%], temporarily not open;</li> <li>• tep1~tep4: External axis 1 position~External axis 4 position;</li> <li>• Toffst: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_tx~offset_trz: Offset amount, unit [mm] [° ].</li> </ul> |

|                     |                                                                                                                                                                                                                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | <ul style="list-style-type: none"> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• blendR: [-1] - Non smooth, [0~1000] - Smooth radius, unit [mm].</li> <li>• oacc: Acceleration scaling factor;</li> <li>• velAccParamMode: Speed/acceleration parameter mode:<br/>0-Percentage, 1-Physical meaning..</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                     |

## Code 3-7 Using Arc Instructions for Motion Example

1. --Using MoveC for circular motion
2. pj1,pj2,pj3,pj4,pj5,pj6=GetInverseKin(0,388.104,-462.265,-5.226,177.576,-1.292,143.417,-1 )
3. tj1,tj2,tj3,tj4,tj5,tj6=GetInverseKin(0, 271.474,-476.328,3.739,179.502,-2.433,134.753,-1)
4. MoveC(pj1,  
pj2,pj3,pj4,pj5,pj6,388.104,-462.265,-5.226,177.576,-1.292,143.417,1,0,100,180,0.000,0.000  
,0.000,0.000,0,0,0,0,0,0, tj1,tj2,tj3,tj4,tj5,tj6,271.474,-476.328,3.739,179.502,  
-2.433,134.753,1,0,100,180,0.000,0.000,0.000,0.000,0,0,0,0,0,0,100,-1)
5. --Using ARC for basic circular motion
6. PTP (DW01100, -1,0) -- PTP mode, moving to the starting point position
7. -- (DW01100, -1,0,0) -- Move in a straight line to the starting point position
8. ARC(DW02,0,0,0,0,0,0, DW03,0,0,0,0,0,0,100,-1)
9. --The midpoint of DW02 arc motion, 0- not offset; DW03: End point coordinates of arc, 0- no offset, 100- percentage of motion speed, -1- stop at the end point
- 10.
11. --Arc motion based on base coordinate offset using ARC
12. PTP (DW01, 100, -1,0) --PTP mode, moving to the starting point position
13. ARC(DW02, 1, 1, 2, 3, 4, 5, 6, DW03, 1, 11, 12, 13, 14, 15, 16, 100, -1)
14. --The midpoint of DW02 arc motion, 1-base coordinate offset; 1, 2, 3, 4, 5, 6-offset Cartesian coordinates, DW03: arc endpoint coordinates, 1-base coordinate offset, 11, 12, 13, 14, 15, 16 offset Cartesian coordinates, 100 motion velocity percentage, -1- offset at endpoint
- 15.
16. --Arc motion based on tool coordinate offset using ARC
17. PTP (DW01100, -1,0)--PTP mode, moving to the starting point position
18. ARC(DW02,2,1,2,3,4,5,6, DW03,2,11,12,13,14,15,16,100,-1)
19. --The midpoint of DW02 arc motion, 2-tool mark offset; 1, 2, 3, 4, 5, 6-offset Cartesian coordinates, DW03: arc endpoint coordinates, 2-tool coordinate offset, 11, 12, 13, 14, 15, 16 offset Cartesian coordinates, 100 motion velocity percentage, -1- offset at endpoint
- 20.
21. --Using ARC to enable smooth circular motion
22. PTP (DW01100, -1,0) --point-to-point mode, moving to the starting point position
23. ARC(DW02,0,0,0,0,0,0, DW03,0,0,0,0,0,0,100,30)
24. --The midpoint of DW02 arc motion, 0- not offset; DW03: End point coordinates

of arc, 0- no offset, 100- percentage of motion speed, 30- smooth 30mm

### 3.2.4 Complete Circle

#### Circle: Complete circular motion (Cartesian space)

Table 3-19 Detailed Parameters of Circle

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | Circle (pj1, pj2, pj3, pj4, pj5, pj6, px, py, pz, prx, pry, prz, ptool, puser, pspeed, pacc, pep1, pep2, pep3, pep4, tj1, tj2, tj3, tj4, tj5, tj6, tx, ty, tz, trx, try, trz, ttool, tuser, tspeed, tacc, tep1, tep2, tep3, tep4, ovl, offset, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz, velAccParamMode, speed, acc)                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>  | Complete circular motion (Cartesian space) <ul style="list-style-type: none"> <li>• pj1~pj6: Joint positions of path points, unit [°];</li> <li>• px, py, pz, prx, pry, prz: Cartesian pose of path points, unit [mm] [°];</li> <li>• velAccParamMode: Speed/acceleration parameter mode: 0-Percentage, 1-Physical meaning.</li> <li>• speed: Mode as velocity in the physical sense.</li> <li>• acc: Mode as acceleration in the physical sense.</li> <li>• ptool: tool number;</li> <li>• puser: workpiece number;</li> <li>• pspeed: speed, range [0~100%];</li> <li>• pacc: Acceleration, range [0~100%], temporarily not open;</li> <li>• pep1~pep4: External axis 1 position~External axis 4 position;</li> </ul>                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• tj1~tj6: Joint position of target point, unit [°];</li> <li>• tx, ty, tz, trx, try, trz: Cartesian pose of the target point, unit [mm] [°];</li> <li>• ttool: tool number;</li> <li>• tuser: workpiece number;</li> <li>• tspeed: speed, range [0~100%];</li> <li>• tacc: Acceleration, range [0~100%], temporarily not open;</li> <li>• tep1~tep4: External axis 1 position~External axis 4 position;</li> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• offset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_x~offset_rz: offset, unit [mm] [°].</li> <li>• velAccParamMode: Speed/acceleration parameter mode: 0-Percentage, 1-Physical meaning..</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## Circle: Full circle motion

Table 3-20 Detailed Parameters of the New Circle

| Attribute           | Explanation                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | Circle (pos_p_name, pos_t_name, ovl, offset_flag, offset, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz)                                                                                                                                                               |
| <b>Description</b>  | Circular motion <ul style="list-style-type: none"> <li>• pos_p_name: Name of the midpoint 1 of the entire circle;</li> <li>• pos_t_name: Name of the midpoint 2 of the entire circle;</li> </ul>                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• offset: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - offset in the tool coordinate system;</li> <li>• offset_x~offset_rz: offset, unit [mm] [° ].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                   |

Code 3-8 utilizes the circular instruction for motion

1. --Complete circular motion (Cartesian space)
2. pj1,pj2,pj3,pj4,pj5,pj6=GetInverseKin(0,388.104,-462.265,-5.226,177.576,-1.292,143.417,-1)
3. tj1,tj2,tj3,tj4,tj5,tj6=GetInverseKin(0, 271.474,-476.328,3.739,179.502,-2.433,134.753,-1)
4. Circle(pj1, pj2,pj3,pj4,pj5,pj6,388.104,-462.265,-5.226,177.576,-1.292, 143.417, 1, 0, 100, 180, 0.000, 0.000, 0.000, 0.000, tj1, tj2, tj3, tj4, tj5, tj6, 271.474, -476.328, 3.739, 179.502,-2.433,134.753,1,0,100,180,0.000,0.000,0.000,0.000,100,0,0,0,0,0,0)
- 5.
6. --Circle movement
7. PTP (DW01100, -1,0) PTP motion to the starting point position
8. --Lin (DW01100, -1,0,0) -- Straight line motion to starting point position
- 9.
10. Circle(DW02,DW03,100,0)
11. --The midpoint of DW02's circular motion (path point 1); DW03: End point coordinates of arc (path point 2), 100-- percentage of motion speed, 0- no offset
- 12.
13. Circle(DW02, DW03,100,1,0,0,10,0,0,0)
14. --The midpoint of DW02's circular motion; DW03: End point coordinates of arc, 100-percentage of motion speed, 1- based on base coordinate offset, 0,0,10,0,0,0 joint offset angle
- 15.
16. Circle(DW02, DW03,100,2, 0,0,10,0,0,0)

17. --The midpoint of DW02's circular motion; DW03: End point coordinates of arc, 100- percentage of motion speed, 2- based on tool coordinate offset, 0,0,10,0,0,0 joint offset angle

### 3.2.5 Spiral

#### Spiral: Spiral motion

Table 3-21 Detailed Parameters of Spiral

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | Spiral (pos_1_name, pos_2_name, pos_3_name, ovl, offset_flag, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz, circle_num, circle_angle_Co_rx, circle_angle_Co_ry, circle_angle_Co_rz, rad_add, rotaxis_add)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>  | Spiral motion <ul style="list-style-type: none"> <li>• pos_1_name: the name of the midpoint 1 of the spiral line;</li> <li>• pos_2_name: the name of the midpoint 2 of the spiral line;</li> <li>• pos_3_name: the name of the midpoint 3 of the spiral line;</li> <li>• ovl: Debugging speed, range [0~100%], default 100.0;</li> <li>• offset_flag: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - default offset in the tool coordinate system is 0;</li> <li>• offset_x~offset_rz: offset, unit [mm] [° ];</li> <li>• circle_num: number of spiral turns;</li> <li>• circle_ongle Co_rx~circle_ongle Co_ry: attitude angle correction, unit [° ]</li> <li>• radadded: radius increment, unit [mm];</li> <li>• rotaxias_add: incremental axis direction, unit [mm].</li> </ul> |
| <b>Parameter</b>    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Code 3-9 Spiral Instruction Motion Example

1. --Basic Spiral Spiral Motion
2. Spiral (DW01, DW02, DW03, 100,0,0,0,0,0,0,0,5,0,0,0,10,10)
3. --DW01- Name of midpoint 1 of spiral line, DW02- Name of midpoint 2 of spiral line, DW03- Name of midpoint 3 of spiral line, 100- Debugging speed, 0- No offset, 5- Number of spiral turns, (0,0,0) attitude angle correction, 10- Radius increment, 10- Axis direction increment;
4. --Spiral Spiral Motion with Base Coordinate Offset
5. Spiral (DW01, DW02, DW03,100,1,1,0,0,10, 0,0,0,0,0,0,10,10)
6. --DW01- Spiral midpoint 1 name, DW02- Spiral midpoint 2 name, DW03- Spiral midpoint 3 name, 100- Debugging speed, 1- Base coordinate offset, (0,0,10, 0,0,0) - Offset Parameter, 5- Spiral turns, (0,0,0) attitude angle correction, 10- Radius increment, 10- Axis direction increment;
7. --Spiral Spiral Motion with Tool Coordinate Offset
8. Spiral(DW01, DW02,DW03,100,2,1, 0,0,10, 0,0,0,0,0,0,10,10)
9. --DW01- Spiral midpoint 1 name, DW02- Spiral midpoint 2 name, DW03- Spiral midpoint 3 name, 100- Debugging speed, 0- Tool coordinate offset, (0,0,10, 0,0,0) - Offset Parameter, 5-

Spiral turns, (0,0,0) attitude angle correction, 10- Radius increment, 10- Axis direction increment.

### 3.2.6 New Spiral

#### NewSpiral: New Spiral Motion

Table 3-22 Detailed Parameters of NewSpiral

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | NewSpiral (desc_pos_name, ovl, offset_flag = 2, offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz, circle_num, circle_angle, rad_init, rad_add, rot_direction, velAccParamMode, speed, acc)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>  | NewSpiral new spiral motion                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• desc_pos_name: Name of the starting point of the new spiral motion;</li> <li>• ovl: Debugging speed, default from 0 to 100 is 100.0;</li> <li>• offset_flag: [0] - no offset, [1] - offset in the workpiece/base coordinate system, [2] - default offset in the tool coordinate system 2 (fixed Parameter);</li> <li>• offset_x~offset_rz: offset, unit [mm] [°];</li> <li>• circle_num: number of spiral turns;</li> <li>• circle_angle Spiral inclination angle, unit [°];</li> <li>• rad_init: Initial radius of spiral, unit [mm];</li> <li>• radadded: radius increment, unit [mm];</li> <li>• rotaxias_add: incremental axis direction, unit [mm];</li> <li>• rot_direction: Rotation direction, 0- clockwise, 1- counterclockwise;</li> <li>• velAccParamMode: Velocity and acceleration parameter model, 0: constant angular velocity, 1: constant linear velocity;</li> <li>• speed: physical speed;</li> <li>• acc: physical acceleration.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Code 3-10 New Spiral Instruction Motion Example

1. --Clockwise N-Spiral spiral motion
2. PTP (DW01100,0,2,50,0,0, -30,0,0) -- Using PTP to move to the starting point of the spiral line (fixed motion mode)
3. --DW01 Spiral Starting Point 1 Name, 100 Debugging Speed, 2 Tool Coordinate Offset, (50, 0, 0, -30, 0, 0) - Offset Parameters (x, y, z, rx, ry, rz)
4. NewSpiral(DW01,100,2,50,0,0,30,0,0,5,30,50,10,15,0,0,0)
5. --DW01 Spiral Starting Point 1 Name, 100 Debugging Speed, 2 Tool Coordinate Offset, (50, 0, 0, -30, 0, 0) - Offset Parameters (x, y, z, rx, ry, rz), 5 Spiral Circles, 30 Spiral Tilt Angle, 50 Initial Radius, 10 Radius Increment, 15 Axis Direction Increment, 0 Clockwise
6. --Counterclockwise N-Spiral spiral motion
7. PTP (DW01100,0,2,50,0,0, -30,0,0) -- move to the starting point of the spiral line
8. NewSpiral(DW01,100,2,50,0,0,30,0,0,5,30,50,10,15,1,0,0)

9. --DW01 Spiral starting point 1 name, 100 Debugging speed, 2 Tool coordinate offset, (50, 0, 0, -30, 0, 0) - Offset Parameters (x, y, z, rx, ry, rz), 5 Spiral turns, 30 Spiral inclination angle, 50 Initial radius, 10 Radius increment, 15 Axis direction increment, 1 Counter clockwise

### 3.2.7 Horizontal Spiral

The H-Spiral horizontal spiral motion is completed by the combination of Horizon Spiral Motion Start and Horizon Spiral Motion End.

#### Horizon Spiral Motion Start: Horizontal spiral motion begins

Table 3-23 Detailed Parameters of Horizon Spatial Motion Start

| Attribute           | Explanation                                                                                                                                                                                                                                                                     |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | HorizonSpiralMotionStart (rad, vel, rot_direction, circle_angle)                                                                                                                                                                                                                |
| <b>Description</b>  | Horizontal spiral motion begins                                                                                                                                                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• rad: Spiral radius, unit [mm];</li> <li>• vel: rotational speed, unit [rev/s];</li> <li>• rot_direction: Rotation direction, 0- clockwise, 1- counterclockwise;</li> <li>• circle_angle Spiral inclination angle, unit [° ]</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                            |

#### Horizon Spiral Motion End: Ending Horizontal Spiral Motion

Table 3-24 Detailed Parameters of Horizon Spatial MotionEnd

| Attribute           | Explanation                   |
|---------------------|-------------------------------|
| <b>Prototype</b>    | HorizonSpiralMotionEnd ()     |
| <b>Description</b>  | Horizontal spiral motion ends |
| <b>Parameter</b>    | null                          |
| <b>Return value</b> | null                          |

Code 3-11 H-Spiral Horizontal Spiral Motion Example

1. --Clockwise H-Spiral horizontal spiral
2. HorizonSpiralMotionStart(30,2,0,20)
3. --Horizontal spiral, 30- rotation radius, 2- selected speed, 0- clockwise rotation, 20- rotation tilt angle
4. Lin(DW01,100,-1,0,0)
5. Horizon Spiral MotionEnd() -- End of Horizontal Spiral
6. --Counterclockwise H-Spiral horizontal spiral
7. HorizonSpiralMotionStart(30,2,1,20)
8. --Horizontal spiral, 30- rotation radius, 2- selected speed, 1- counterclockwise rotation, 20- rotation tilt angle

9. Lin(DW01,100,-1,0,0)
10. Horizon Spiral MotionEnd() -- End of Horizontal Spiral

### 3.2.8 Spline

The spline instruction is divided into three parts: spline group start, spline segment, and spline group end. The spline group start is the starting symbol of spline motion, and the current node graph of the spline segment includes SPL, SLIN, and SCIRC. The spline group end is the ending symbol of spline motion.

#### SplineStart: Spline motion begins

Table 3-25 Detailed Parameters of SplineStart

| Attribute           | Explanation         |
|---------------------|---------------------|
| <b>Prototype</b>    | SplineStart ()      |
| <b>Description</b>  | Spline group starts |
| <b>Parameter</b>    | null                |
| <b>Return value</b> | null                |

#### SPL method one: SPTP type spline segments

Table 3-26 Detailed Parameters of SPTP

| Attribute           | Explanation                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPTP(point_name, ovl)                                                                                                               |
| <b>Description</b>  | SPTP spline segment                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• point_name: Target point name;</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                |

#### SPL method 2: SplinePTP type spline segments

Table 3-27 Detailed Parameters of SplinePTP

| Attribute          | Explanation                                                                                                                                                                                                                                                                        |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | SplinePTP (j1, j2, j3, j4, j5, j6, x, y, z, rx, ry, rz, tool, user, speed, acc, ovl)                                                                                                                                                                                               |
| <b>Description</b> | SplinePP spline motion                                                                                                                                                                                                                                                             |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• j1~j6: Target joint position, unit [°];</li> <li>• x, y, z, rx, ry, rz: Cartesian pose of the target, unit [mm] [°];</li> <li>• tool: tool number;</li> <li>• user: workpiece number;</li> <li>• speed: speed, range [0~100%];</li> </ul> |

- acc: Acceleration, range [0~100%], temporarily not open;
- ovl: Debugging speed, range [0~100%].

**Return value** null

### SLIN method 1: Spline segments of SLIN type

Table 3-28 SLIN Detailed Parameters

| Attribute           | Explanation                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SLIN (point_name, ovl )                                                                                                             |
| <b>Description</b>  | SLIN spline segment                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• point_name: Target point name;</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                |

### SLIN method 2: SplineLINE type spline segments

Table 3-29 Detailed Parameters of SplineLINE

| Attribute           | Explanation                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SplineLINE (j1, j2, j3, j4, j5, j6, x, y, z, rx, ry, rz, tool, user, speed, acc, ovl)                                                                                                                                                     |
| <b>Description</b>  | <p>SplineLINE spline segment</p> <ul style="list-style-type: none"> <li>• j1~j6: Target joint position, unit [°];</li> <li>• x, y, z, rx, ry, rz: Cartesian pose of the target, unit [mm] [°];</li> <li>• tool: tool number;</li> </ul>   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• user: workpiece number;</li> <li>• speed: speed, range [0~100%];</li> <li>• acc: Acceleration, range [0~100%], temporarily not open;</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                      |

### SCIRC Method 1: Spline Segment of SCIRC Type

Table 3-30 Detailed Parameters of SCIRC

| Attribute           | Explanation                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SCIRC(pos_p_name, pos_t_name, ovl)                                                                                                                                                                            |
| <b>Description</b>  | SCIRC spline segment                                                                                                                                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• pos_p_name: the name of the midpoint of the arc;</li> <li>• pos_t_name: name of the endpoint of the arc;</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                          |

## SCIRC Method 2: SplineCIRC type spline segments

Table 3-31 Detailed Parameters of SplineCIRC

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SplineCIRC (pj1, pj2, pj3, pj4, pj5, pj6, px, py, pz, prx, pry, prz, ptool, puser, pspeed, pacc, tj1, tj2, tj3, tj4, tj5, tj6, tx, ty, tz, trx, try, trz, ttool, tuser, tspeed, tacc,ovl)                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>  | SplineCIRC spline segment <ul style="list-style-type: none"> <li>• pj1~pj6: Joint position of the midpoint of the arc, unit [°];</li> <li>• px, py, pz, prx, pry, prz: Cartesian pose of the midpoint of the arc, unit [mm] [°];</li> <li>• ptool: tool number for the midpoint of the arc;</li> <li>• pusher: workpiece number at the midpoint of the arc;</li> <li>• pspeed: velocity at the midpoint of the arc, range [0~100%];</li> <li>• pacc: Acceleration at the midpoint of the arc, range [0~100%], temporarily closed;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• tj1~tj6: Joint position at the end of the arc, unit [°];</li> <li>• tx, ty, tz, trx, try, trz: Cartesian pose of the endpoint of the arc, unit [mm] [°];</li> <li>• ttool: tool number for the endpoint of the arc;</li> <li>• tuser: Arc endpoint workpiece number;</li> <li>• tspeed: End velocity of arc, range [0~100%];</li> <li>• tacc: End acceleration of arc, range [0~100%], temporarily closed;</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul>                              |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## SplineEnd: End of spline group

Table 3-32 Detailed Parameters of SplineEnd

| Attribute           | Explanation                 |
|---------------------|-----------------------------|
| <b>Prototype</b>    | SplineEnd ()                |
| <b>Description</b>  | SplineEnd spline group ends |
| <b>Parameter</b>    | null                        |
| <b>Return value</b> | null                        |

Code 3-12 Example of Same Way Movement

|                                            |
|--------------------------------------------|
| 1. --Spline motion of SPTP spline segments |
|--------------------------------------------|

2. SplineStart() -- spline motion begins
3. SPTP (DW01100) -- DW01- Point Name, 100- Debugging Speed
4. SPTP (DW02100) -- DW02- Point Name, 100- Debugging Speed

Code 3-12 (continued)

5. SPTP (DW03100) -- DW03- Point Name, 100- Debugging Speed
6. SPTP (DW04100) -- DW04- Point Name, 100- Debugging Speed
7. SplineEnd() -- End of spline motion
- 8.
9. --Spline motion of SLIN spline segments
10. SplineStart() --spline motion begins
11. SLIN (DW01100) -- DW01- Point Name, 100- Debugging Speed
12. SLIN (DW02100) -- DW02- Point Name, 100- Debugging Speed
13. SLIN (DW03100) -- DW03- Point Name, 100- Debugging Speed
14. SLIN (DW04100) -- DW04- Point Name, 100- Debugging Speed
15. SplineEnd() -- End of spline motion
16. --Spline motion of SCIRC spline segments
17. SplineStart() -- spline motion begins
18. SCIRC (DW01, DW02100) -- DW01- midpoint name of arc, endpoint name of DW02 arc, 100- debugging speed 100%
19. SCIRC (DW03, DW04100) -- DW03- midpoint name of arc, endpoint name of DW04 arc, 100- debugging speed 100%
20. SCIRC (DW05, DW06100) -- DW05- Center Point Name of Arc, End Point Name of DW06 Arc, 100- Debugging Speed 100%
21. SCIRC (DW07, DW08100) -- DW07- midpoint name of arc, endpoint name of DW08 arc, 100- debugging speed 100%
22. SplineEnd() -- End of spline motion

Code 3-13 Example of Spline Motion in Method 2

1. --Spline motion of SplinePP spline segments
2. SplineStart() -- spline motion begins
3. SplinePTP(-88.938,-67.089,-119.074,-57.750,78.739,-53.107,-154.495,-456.371,271.098,-172.005,-27.192,-130.384,1,0,100,180,100)
4. SplinePTP(-50.137,-67.089,-119.074,-57.750,78.739,-53.108,165.568,-452.472,271.098,-172.005,-27.192,-91.582,1,0,100,180,100)
5. SplinePTP(-116.604,-103.398,-106.020,-60.282,89.088,-26.541,-340.231,-440.449,59.996,179.861,-0.950,179.936,1,0,100,180,100)
6. SplinePTP(-117.355,-89.202,-120.591,-59.927,89.057,-27.266,-297.517,-341.920,69.240,179.817,-0.966,179.910,1,0,100,180,100)
7. SplineEnd() -- End of spline motion
8. --Spline motion of SplineLINE spline segments

9. SplineStart() -- spline motion begins
10. SplineLINE(-88.938,-67.089,-119.074,-57.750,78.739,-53.107,-154.495,-456.371, 271.098,-172.005,-27.192,-130.384,1,0,100,180,100)

Code 3-13 (continued)

11. SplineLINE(-50.137,-67.089,-119.074,-57.750,78.739,-53.108,165.568,-452.472, 271.098,-172.005,-27.192,-91.582,1,0,100,180,100)
12. SplineLINE(-116.604,-103.398,-106.020,-60.282,89.088,-26.541,-340.231,-440.449, 59.996,179.861,-0.950,179.936,1,0,100,180,100)
13. SplineLINE(-117.355,-89.202,-120.591,-59.927,89.057,-27.266,-297.517,-341.920, 69.240,179.817,-0.966,179.910,1,0,100,180,100)
14. SplineEnd() -- End of spline motion
  
15. --Spline Motion of SplineCIRC Spline Segment
16. SplineStart() - spline motion begins
17. SplineCIRC(-88.938, -67.089, -119.074, -57.750, 78.739, -53.107, -154.495, -456.371, 271.098, -172.005, -27.192, -130.384, 1, 0, 100, 180, -50.137, -67.089, -119.074, -57.750, 78.739, -53.108, 165.568, -452.472, 271.098, -172.005, -27.192, -91.582, 1,0,100,180,100)
- 18.
19. SplineCIRC(-116.604, -103.398, -106.020, -60.282, 89.088, -26.541, -340.231, -440.449, 59.996, 179.861, -0.950, 179.936, 1, 0, 100, 180, -117.355, -89.202, -120.591, -59.927, 89.057, -27.266,-297.517,-341.920,69.240,179.817,-0.966,179.910,1,0,100,180,100)
- 20.
21. SplineCIRC(-110.420, -104.178, -103.638, -59.952, 89.153, -26.480, -297.923, -494.668, 71.977, -178.379,-1.753,-173.981,1,0,100,180,-115.854,-85.308,-123.979,-59.371,89.058,-27.513,-279.135,-330.367,72.864,-179.245,-1.455,-178.362,1,0,100,180,100)
- 22.
23. SplineCIRC(-108.752,-104.491,-103.204,-59.601,89.035,-26.465,-285.668,-507.818, 73.101, -178.008,-2.068,-172.346,1,0,100,180,-123.459,-95.123,-113.554,-62.039,87.801, -26.914,-361.158,-339.783,72.733,178.366,-1.636,173.492,1,0,100,180,100)
24. SplineEnd() -- End of spline motion

### 3.2.9 New spline

#### NewSplineStart: New spline multi-point trajectory start

Table 3-33 rameters of NewSplineStart

| Attribute        | Explanation                         |
|------------------|-------------------------------------|
| <b>Prototype</b> | NewSplineStart (Con_mode, Gac_time) |

|                     |                                                                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | New spline multi-point trajectory starting                                                                                                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Con_mode: Control mode, 0-Arc transition point, 1-Given transition point;</li> <li>• Gac_time: Global average connection time, greater than 10.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                |

### NewSP: Method 1: New spline multi-point trajectory segment

Table 3-34 Detailed Parameters of NewSP

| Attribute           | Explanation                                                                                                                                                                                                                                      |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | NewSP (point_name, ovl, blendR, islast_point)                                                                                                                                                                                                    |
| <b>Description</b>  | New spline multi-point trajectory segment                                                                                                                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• point_name: Point name;</li> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• blendR: Smooth radius [0~1000], unit [mm];</li> <li>• islast_point: Is it the last point? 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                             |

### NewSplinePoint: Method 2: New Spline Multi point Trajectory Segment

Table 3-35 Detailed Parameters of NewSplinePoint

| Attribute           | Explanation                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | NewSplinePoint(j1, j2, j3, j4, j5, j6, x, y, z, rx, ry, rz, tool, user, speed, acc, ovl, blendR )                                                                                                                                |
| <b>Description</b>  | New spline multi-point trajectory segment<br>j1~j6: Target joint position, unit [° ];<br>x, y, z, rx, ry, rz: Cartesian pose of the target, unit [mm] [° ];<br>tool: tool number;                                                |
| <b>Parameter</b>    | user: workpiece number;<br>speed: speed, range [0~100%];<br>acc: Acceleration, range [0~100%], temporarily not open;<br>ovl: Debugging speed, range [0~100%];<br>blendR: [-1] - Non smooth, [0~1000] - Smooth radius, unit [mm]. |
| <b>Return value</b> | null                                                                                                                                                                                                                             |

### NewSplineEnd: End of spline group

Table 3-36 Detailed Parameters of NewSplineEnd

| Attribute        | Explanation     |
|------------------|-----------------|
| <b>Prototype</b> | NewSplineEnd () |

|                     |                         |
|---------------------|-------------------------|
| <b>Description</b>  | End of new spline group |
| <b>Parameter</b>    | null                    |
| <b>Return value</b> | null                    |

---

## Code 3-14 Method 1: New Spline Instruction Motion Example

1. --New Spline Motion of N-Spline Arc Transition Point Control mode
2. NewSplineStart (0,10) -- spline motion starts, 0-arc transition point control mode, 10- global average connection time 10ms
3. NewSP (DW01100,10,0) -- DW01- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
4. NewSP (DW02100,10,0) -- DW02- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
5. NewSP (DW03100,10,0) -- DW03- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
6. NewSP (DW04100,10,1) -- DW04- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 1- is the last point
7. NewSplineEnd() - End of new spline motion
  
8. -New spline motion with given path point control mode in N-Spline
9. NewSplineStart (1,10) -- spline motion starts, 1- given path point control mode, 10- global average connection time 10ms
10. NewSP (DW01100,10,0) -- DW01- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
11. NewSP (DW02100,10,0) -- DW02- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
12. NewSP (DW03100,10,0) -- DW03- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 0- Not the last point
13. NewSP (DW04100,10,1) -- DW04- Point name, 100- Debugging speed, 10- Smooth transition radius of 10mm, 1- is the last point
14. NewSplineEnd() -- End of new spline motion

## Code 3-15 Method 2 New Spline Instruction Motion Example

1. --New Spline Motion of N-Spline Arc Transition Point Control mode
2. NewSplineStart (0,10) -- spline motion starts, 0-arc transition point control mode, 10- global average connection time 10ms
- 3.
4. NewSplinePoint(-88.938,-67.089,-119.074,-57.750,78.739,-53.107,-154.495,-456.371, 271.098,-172.005,-27.192,-130.384,1,0,100,180,100,10,0)
5. NewSplinePoint(-50.137,-67.089,-119.074,-57.750,78.739,-53.108,165.568,-452.472,

```

271.098,-172.005,-27.192,-91.582,1,0,100,180,100,10,0)
6.  NewSplinePoint(-116.604,-103.398,-106.020,-60.282,89.088,-26.541,-340.231,-440.449,
59.996,179.861,-0.950,179.936,1,0,100,180,100,10,0)
7.  NewSplinePoint(-117.355,-89.202,-120.591,-59.927,89.057,-27.266,-297.517,-341.920,
69.240,179.817,-0.966,179.910,1,0,100,180,100,10,1)

```

Code 3-15 (continued)

```

8.  NewSplineEnd() -- End of new spline motion
9.
10. --New spline motion with given path point control mode in N-Spline
    NewSplineStart(1,10)
    --Spline motion begins, 1-given path point control mode, 10 global average connection time
    10ms
11. NewSplinePoint(-88.938,-67.089,-119.074,-57.750,78.739,-53.107,-154.495,-456.371,271.09
8,-172.005,-27.192,-130.384,1,0,100,180,100,0,0)
12. NewSplinePoint(-50.137,-67.089,-119.074,-57.750,78.739,-53.108,165.568,-452.472,271.09
8,-172.005,-27.192,-91.582,1,0,100,180,100,0,0)
13. NewSplinePoint(-116.604,-103.398,-106.020,-60.282,89.088,-26.541,-340.231,-440.449,59.9
96,179.861,-0.950,179.936,1,0,100,180,100,0,0)
14. NewSplinePoint(-117.355,-89.202,-120.591,-59.927,89.057,-27.266,-297.517,-341.920,69.24
0,179.817,-0.966,179.910,1,0,100,180,100,0,1)
15. NewSplineEnd() -- End of new spline motion

```

### 3.2.10 Swing

#### WeaveStart: Swing begins

Table 3-37 Parameters of WeaveStart

| Attribute           | Explanation                                                    |
|---------------------|----------------------------------------------------------------|
| <b>Prototype</b>    | WeaveStart(weaveNum)                                           |
| <b>Description</b>  | Initial Swing                                                  |
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

#### WeaveEnd: End of swing

Table 3-38 Detailed Parameters of WeaveEnd

| Attribute          | Explanation        |
|--------------------|--------------------|
| <b>Prototype</b>   | WeaveEnd(weaveNum) |
| <b>Description</b> | Terminal swing     |

---

|                     |                                                                |
|---------------------|----------------------------------------------------------------|
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

---

### WeaveStartSim: Simulation swing begins

Table 3-39 Detailed Parameters of WeaveStartSim

| Attribute           | Explanation                                                    |
|---------------------|----------------------------------------------------------------|
| <b>Prototype</b>    | WeaveStartSim(weaveNum)                                        |
| <b>Description</b>  | Simulation swing begins                                        |
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

---

### WeaveEndSim: Simulation swing ends

Table 3-40 Detailed Parameters of WeaveEndSim

| Attribute           | Explanation                                                    |
|---------------------|----------------------------------------------------------------|
| <b>Prototype</b>    | WeaveEndSim (weaveNum)                                         |
| <b>Description</b>  | Simulation swing ends                                          |
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

---

### WeaveInspectStart: Start trajectory warning

Table 3-41 WeaveInspectStart Detailed Parameters

| Attribute           | Explanation                                                    |
|---------------------|----------------------------------------------------------------|
| <b>Prototype</b>    | WeaveInspectStart (weaveNum)                                   |
| <b>Description</b>  | Start trajectory warning                                       |
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

---

### WeaveInspectEnd: Stop trajectory warning

Table 3-42 WeaveInspectEnd Detailed Parameters

| Attribute        | Explanation                |
|------------------|----------------------------|
| <b>Prototype</b> | WeaveInspectEnd (weaveNum) |

|                     |                                                                |
|---------------------|----------------------------------------------------------------|
| <b>Description</b>  | Stop trajectory warning                                        |
| <b>Parameter</b>    | • weaveNum: Configuration number for swing welding Parameters. |
| <b>Return value</b> | null                                                           |

### OriginPointWeaveStart: The fixed-point swing begins

Table 3-43 OriginPointWeaveStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | OriginPointWeaveStart(weaveNum,mode,refPoint,weaveTime)                                                                                                                                                                                                                        |
| <b>Description</b>  | The fixed-point swing begins                                                                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• weaveNum: The pendulum parameter configuration number</li> <li>• mode: 0 - tool coordinate system, 1 - reference point</li> <li>• refPoint[6]: Reference Points [x,y,z,a,b,c]</li> <li>• weaveTime: Pendulum welding time.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                           |

### OriginPointWeaveEnd: The fixed-point swing ends

Table 3-44 OriginPointWeaveEnd Detailed Parameters

| Attribute           | Explanation                |
|---------------------|----------------------------|
| <b>Prototype</b>    | OriginPointWeaveEnd ()     |
| <b>Description</b>  | The fixed-point swing ends |
| <b>Parameter</b>    | null                       |
| <b>Return value</b> | null                       |

Code 3-16 Swing Command Motion Example

1. WeaveInspectStart(0);-- Start trajectory warning
1. Lin(DW01,100,0,0,0)
2. WeaveInspectEnd(0);-- Stop trajectory warning
- 3.
4. WeaveStartSim (weaveNum) -- Simulate swing start
5. Lin(DW01,100,0,0,0)
6. WeaveEndSim (weaveNum) -- simulation swing ends
- 7.

8. WeaveStart (weaveNum) -- Start swinging
9. Lin(DW01,100,0,0,0)
10. WeaveEnd (weaveNum) -- End swing

### 3.2.11 Trajectory Reproduction

#### LoadTPD: Track Preloading

Table 3-45 Detailed Parameters of LoadTPD

| Attribute           | Explanation                                                           |
|---------------------|-----------------------------------------------------------------------|
| <b>Prototype</b>    | LoadTPD(name)                                                         |
| <b>Description</b>  | Trajectory preloading                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Track name.</li> </ul> |
| <b>Return value</b> | null                                                                  |

#### MoveTPD: Trajectory Reproduction

Table 3-46 Detailed Parameters of MoveTPD

| Attribute           | Explanation                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveTPD(name, blend, ovl)                                                                                                                         |
| <b>Description</b>  | Trajectory reproduction <ul style="list-style-type: none"> <li>• name: Trajectory Name, /fruser/traj/trajHelix_aima_2.txt;;</li> </ul>            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• blend: Smooth or not, 0-Not smooth, 1-Smooth;</li> <li>• ovl: Debugging speed, range [0~100].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                              |

#### MoveToTPDStart: Movement to the start of the TPD trajectory recording

Table 3-47 Detailed Parameters of MoveToTPDStart

| Attribute           | Explanation                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveToTPDStart (name, moveType, ovl)                                                                                                               |
| <b>Description</b>  | Movement to the start of the TPD trajectory recording <ul style="list-style-type: none"> <li>• name: Track name, trajHelix_aima_2.txt;;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• moveType: Types of exercise, 0-PTP, 1-LIN;</li> <li>• ovl: Debugging speed, range [0~100].</li> </ul>     |
| <b>Return value</b> | null                                                                                                                                               |

Code 3-17 Trajectory Reproduction Example

1. LoadTPD("20lin")

2. MoveToTPDStart("20lin",0,25)
3. MoveTPD("20lin",0,25)

### 3.2.12 point offset

The point offset command is an overall offset command. By inputting various offsets, the open and close commands are added to the program. The motion commands between the start and close will be offset based on the base coordinates (or workpiece coordinates).

#### PointsOffsetEnable: The overall offset of the point position begins

Table 3-48 PointsOffsetEnable detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | PointsOffsetEnable(flag, x,y,z,rx,ry,rz)                                                                                                                                                                      |
| <b>Description</b>  | The overall offset of the point position begins <ul style="list-style-type: none"> <li>• flag: offset in the base coordinate or workpiece coordinate system, offset in the tool coordinate system;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• x, y, z, rx, ry, rz: pose offset, unit [mm] [° ].</li> </ul>                                                                                                         |
| <b>Return value</b> | null                                                                                                                                                                                                          |

#### PointsOffsetDisable: End of overall point offset

Table 3-49 PointsOffsetDisable Detailed Parameters

| Attribute           | Explanation                                        |
|---------------------|----------------------------------------------------|
| <b>Prototype</b>    | PointsOffsetDisable()                              |
| <b>Description</b>  | The overall offset of the point position has ended |
| <b>Parameter</b>    | null                                               |
| <b>Return value</b> | null                                               |

Code 3-18 point offset example

1. PointsOffsetEnable (0,0,0,10,0,0,0)
2. --Starting from the overall offset of the point position, 0-offset in the base coordinate or workpiece coordinate system, (0,0,10,0,0,0) - offset amount
3. PTP (DW01100, -1,0) PTP motion
4. PointsOffsetDisab() -- End of overall point offset

### 3.2.13 Servo

Servo control (Cartesian space motion) instructions, which can control robot motion through absolute pose control or based on current pose offset.

#### ServoMoveStart: Servo motion begins

Table 3-50: Detailed Parameters of ServoMoveStart

| Attribute           | Explanation         |
|---------------------|---------------------|
| <b>Prototype</b>    | ServoMoveStart()    |
| <b>Description</b>  | Servo motion begins |
| <b>Parameter</b>    | null                |
| <b>Return value</b> | null                |

#### ServoMoveEnd: End of servo motion

Table 3-51: Detailed Parameters of ServoMoveEnd

| Attribute           | Explanation       |
|---------------------|-------------------|
| <b>Prototype</b>    | ServoMoveEnd()    |
| <b>Description</b>  | Servo motion ends |
| <b>Parameter</b>    | null              |
| <b>Return value</b> | null              |

#### ServoCart: Cartesian Space Servo mode Motion

Table 3-52: Detailed Parameters of ServoCart

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | ServoCart (mode, x, y, z, Rx, Ry, Rz, pos_gainx, pos_gainy, pos_gainz, pos_gainrx, pos_gainry, pos_gainrz, exaxis_pos, acc, vel, cmdT, filterT, gain)                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b> | Cartesian spatial servo mode motion <ul style="list-style-type: none"> <li>• mode: [0] - Absolute motion (base coordinate system), [1] - Incremental motion (base coordinate system), [2] - Incremental motion (tool coordinate system);</li> <li>• x, y, z, Rx, Ry, Rz: Cartesian pose or pose increment, unit [mm];</li> <li>• Pos_gainx, pos_gainy, pos_gainz, pos_gainrx, pos_gainry, pos_gainrz: pose incremental proportional coefficients, only effective under incremental motion, range [0~1];</li> </ul> |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• exaxis_pos: Outer Axis 1 Position~Outer Axis 4 Position Default [0.0,0.0,0.0,0.0]</li> <li>• acc: Acceleration, range [0~100];</li> <li>• vel: speed, range [0~100];</li> <li>• CmdT: Instruction issuance cycle, unit s, recommended range [0.001~0.0016];</li> </ul>                                                                                                                                                                                                    |

- FilterT: filtering time, filtering time, in seconds;
- Gain: Proportional amplifier at the target position.

**Return value** null

## ServoJ: Joint-space servo motion

Table 3-53: Detailed Parameters of ServoJ

| Attribute           | Explanation                                                                                                                                                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ServoJ(j1,j2,j3,j4,j5,j6,ep1,ep2,ep3,ep4,acc,vel,interval,filterTime,posGaim) <ul style="list-style-type: none"> <li>• j1~j6: Target joint position, unit [°]</li> <li>• ep1~ep4: External axis 1 position to external axis 4 position;</li> <li>• acc:Acceleration, range [0–100%];</li> </ul> |
| <b>Description</b>  | <ul style="list-style-type: none"> <li>• vel: Speed ratio, range [0–100%];</li> <li>• interval: Command period, unit [s];</li> <li>• filterTime: Filtering time, unit [s], not yet available</li> <li>• posGain: Target position scale factor, not yet available.</li> </ul>                    |
| <b>Parameter</b>    | null                                                                                                                                                                                                                                                                                            |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                            |

Code 3-19 Servo Example

```

1.  --Servo control
2.  mode = 2
3.  --[0] - Absolute motion (base coordinate system), [1] - Incremental motion (base
    coordinate system), [2] - Incremental motion (tool coordinate system)
4.  count = 0
5.  ServoMoveStart() - servo motion starts
6.  While (count<100) do
7.    ServoCart(mode,{83.008,50.525,29.246,179.629,-7.138,-166.975},{0.0,0.0,0.0,0.0,0.0,
    0.0},{100.0,0.0,0.0,0.0},0,0,0,0) -- Cartesian space servo mode motion
8.    count = count + 1
9.    WaitMs(10)
10. end
11. ServoMoveEnd() -- End of servo motion

```

### 3.2.14 Trajectory

The Trajectory instruction is a universal interface for cameras to directly provide trajectories, which can be imported into the system to enable robots to move according to the trajectory of the imported file when there are already discrete trajectory point files in a fixed format.

1. Trajectory file import function: Select the local computer file to import into

the robot control system;

2. Trajectory Preloading: Select the imported trajectory file and load it through instructions;

3. Trajectory motion: The robot motion is issued through a combination of preloaded trajectory files and selected debugging speed commands;

4. print trajectory point numbers: print trajectory point numbers during the robot's trajectory to view the current progress of the movement.

### LoadTrajectory: Trajectory Preloading

Table 3-54 Detailed Parameters of LoadTrajectory

| Attribute           | Explanation                                                         |
|---------------------|---------------------------------------------------------------------|
| <b>Prototype</b>    | LoadTrajectory (name)                                               |
| <b>Description</b>  | Trajectory preloading                                               |
| <b>Parameter</b>    | • name: Trajectory name, such as:/fruser/traj/trajHelix_aim_1. txt. |
| <b>Return value</b> | null                                                                |

Obtain the starting point Parameters, tool coordinate number, and workpiece coordinate number of the trajectory through Get Trajectory Start Pose, Get ActualTCPNum, and Get ActualWObjNum, respectively.

### Get trajectory starting pose: Get trajectory starting pose

Table 3-55 Detailed Parameters of Get TrajectoryStartPose

| Attribute           | Explanation                                                         |
|---------------------|---------------------------------------------------------------------|
| <b>Prototype</b>    | GetTrajectoryStartPose (name)                                       |
| <b>Description</b>  | Obtain the starting pose of the trajectory                          |
| <b>Parameter</b>    | • name: Trajectory name, such as:/fruser/traj/trajHelix_aim_1. txt. |
| <b>Return value</b> | desc_pose {x,y,z,rx,ry,rz}                                          |

### FHIR ctualTCPNum: Get the current tool coordinate system number

Table 3-56: Detailed Parameters of VNet TCPNum

| Attribute          | Explanation                                      |
|--------------------|--------------------------------------------------|
| <b>Prototype</b>   | GetActualTCPNum (flag)                           |
| <b>Description</b> | Obtain the current tool coordinate system number |
| <b>Parameter</b>   | • flag: 0- blocking, 1- non blocking default 1.  |

**Return value** Tool\_id: Tool coordinate system number

## FHIR ctualWObjNum: Get the current workpiece coordinate system number

Table 3-57 Detailed Parameters of vDctualWObjNum

| Attribute           | Explanation                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetActualWObjNum (flag)                                                                         |
| <b>Description</b>  | Obtain the current tool coordinate system number                                                |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>flag: 0- blocking, 1- non blocking default 1.</li> </ul> |
| <b>Return value</b> | Wobj-id: workpiece coordinate system number                                                     |

## MoveCart: Cartesian Space Point to Point Motion

Table 3-58: Detailed Parameters of MoveCart

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveCart (desc_pos, ool, user, vel, acc, ovl, blendT, config)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>  | Cartesian space point-to-point motion                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>Desc_pos: Target Cartesian position;</li> <li>tool: tool number, [0~14];</li> <li>user: workpiece number, [0~14];</li> <li>vel: speed, range [0~100], default is 100;</li> <li>Acc: Acceleration, range [0~100], temporarily not open, default is 100;</li> <li>ovl: Debugging speed, range [0~100%];</li> <li>blend T: [-1.0] - Motion in place (blocking), [0~500] - Smooth time (non blocking), unit [ms] defaults to -1.0;</li> <li>Config: Joint configuration, [-1] - solve based on the current joint position, [0~7] - solve based on the joint configuration, default is -1.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## MoveTrajectory: Trajectory Reproduction

Table 3-59 Detailed Parameters of MoveTrajectory

| Attribute          | Explanation                                                                                                                                                       |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | MoveTrajectory (name, ovl)                                                                                                                                        |
| <b>Description</b> | Trajectory reproduction                                                                                                                                           |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>name: Trajectory name, such as:/fruser/traj/trajHelix_aim_1.txt;</li> <li>ovl: Debugging speed, range [0~100%].</li> </ul> |

**Return value** null

### Get Trajectory PointNum: Get trajectory point number

Table 3-60 Detailed Parameters of Get TrajectoryPointNum

| Attribute           | Explanation                    |
|---------------------|--------------------------------|
| <b>Prototype</b>    | GetTrajectoryPointNum ()       |
| <b>Description</b>  | Obtain trajectory point number |
| <b>Parameter</b>    | null                           |
| <b>Return value</b> | Num: Trajectory point number   |

Code 3-20 Trajectory Example

```

1. --Trajectory
2. LoadTrajectory ("/fruser/traj/trajHelix_ima_1.txt") -- Absolute path of preloaded trajectory file
3. startPose = GetTrajectoryStartPose("/fruser/traj/trajHelix_aima_1.txt")
4. --Obtain the starting pose of the trajectory
5. Tool_num=VNet TCPNum() -- Get the current tool coordinate system number
6. Wobj_num=vDctualWObjNum() -- Get the current workpiece coordinate system number
7. MoveCart(startPose, tool_num,wobj_num,100,100,25,-1,-1)
8. --Cartesian space point-to-point motion to the starting point of the trajectory, startPose - target
   Cartesian position, 100- velocity, 100- acceleration, -1- stop in place, -1- joint solved according
   to the configuration
9. MoveTrajectory("/fruser/traj/trajHelix_aima_1.txt",25)
10. --Trajectory reproduction,/fruser/traj/trajHelix_aim_1.txt - Trajectory file name, 25-
    Debugging speed (debugging speed)
11. Num=Get Trajectory PointNum() -- Get trajectory point number
12. Register Var ("number", "num") -- print out the number information

```

### 3.2.15 Trajectory J

The Trajectory J instruction, like Trajectory, is a universal interface suitable for cameras to directly provide trajectories. It can be imported into the system when there are already discrete trajectory point files in a fixed format, allowing the robot to move according to the trajectory of the imported file.

#### LoadTrajectory J: Trajectory Preprocessing

Table 3-61 Detailed Parameters of LoadTrajectory J

| Attribute          | Explanation                     |
|--------------------|---------------------------------|
| <b>Prototype</b>   | LoadTrajectoryJ(name, ovl, opt) |
| <b>Description</b> | Trajectory preprocessing        |

|                     |                                                                                                                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Track name, such as:/fruser/traj/trajHelix_aima_2.txt;</li> <li>• ovl: Debugging speed, range [0~100];</li> <li>• opt: 0- Path point, 1- Control point.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                              |

### MoveTrajectory J: Trajectory Reproduction

Table 3-62: Detailed Parameters of MoveTrajectory J

| Attribute           | Explanation             |
|---------------------|-------------------------|
| <b>Prototype</b>    | MoveTrajectoryJ ( )     |
| <b>Description</b>  | Trajectory reproduction |
| <b>Parameter</b>    | null                    |
| <b>Return value</b> | null                    |

Code 3-21 Trajectory J Example

1. LoadTrajectoryJ("/fruser/traj/trajHelix\_aima\_2.txt",30,0)
2. --Trajectory J preprocessing,/fruser/traj/trajHelix\_ima\_2. txt - Trajectory file name, 30- Debugging speed, 1- Control points
3. startPose = GetTrajectoryStartPose("/fruser/traj/trajHelix\_aima\_2.txt")
4. --Obtain the starting pose of the trajectory
5. Tool\_num=VNet TCPNum() -- Get the current tool coordinate system number
6. Wobj\_num=vDctualWObjNum() -- Get the current workpiece coordinate system number
7. MoveCart(startPose, tool\_num,wobj\_num,100,100,25,-1,-1)
8. --Cartesian space point-to-point motion to the starting point of the trajectory, startPose - target Cartesian position, 100- velocity, 100- acceleration, -1- stop in place, -1- joint solved according to the configuration
9. MoveTrajectoryJ()
10. Num=Get Trajectory PointNum() -- Get trajectory point number
11. Register Var ("number", "num") -- print out the number information

### 3.2.16 DMP

DMP/dmpMotion is a trajectory imitation learning method that requires prior planning of reference trajectories. The specific path of DMP is a new trajectory that imitates the reference trajectory from a new starting point.

#### DMP: Trajectory Imitation

Table 3-63 Detailed Parameters of DMP

| Attribute          | Explanation           |
|--------------------|-----------------------|
| <b>Prototype</b>   | DMP (point_name, ovl) |
| <b>Description</b> | Trajectory imitation  |

|                     |                                                                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• point_name: Target Point Name</li> <li>• ovl: Debugging speed, range [0~100%].</li> </ul> |
| <b>Return value</b> | null                                                                                                                               |

### DmpMotion: Trajectory imitation

Table 3-64 Detailed Parameters of dmpMotion

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | dmpMotion (joint_pos, desc_pos , tool, user, vel, acc, ovl, exaxis_pos )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>  | Trajectory imitation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Joint_pos: Target joint position, unit [° ];</li> <li>• Desc_pos: Target Cartesian pose, unit [mm] [° ]. The default initial value is [0.0, 0.0, 0.0, 0.0, 0.0, 0.0], and the default value is called the forward kinematics solution Return value;</li> <li>• tool: tool number, [0~14];</li> <li>• user: workpiece number, [0~14];</li> <li>• vel: Speed percentage, [0~100] defaults to 100.0;</li> <li>• acc: Acceleration percentage, [0~100], temporarily not open;</li> <li>• ovl: Debugging speed, range [0~100%];</li> <li>• Exaxis_pos: The default positions for external axis 1 to external axis 4 are [0.0, 0.0, 0.0, 0.0].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

Code 3-22 Trajectory Imitation Example

```

1. --DMP trajectory imitation
2. DMP (DW01100) -- Trajectory Imitation, DW01- Starting Point Name, 100- Debugging Speed
3. --DmpMotion trajectory imitation
4. dmpMotion({-88.938,-67.089,-119.074,-57.750,78.739,-53.107},{-154.495,-456.371,271.098, -172.005,-27.192,-130.384},1,0,100,180,100, {0.000,0.000,0.000,0.000})

```

### 3.2.17 Workpiece Conversion

WPTrsf , Workpiece coordinate system conversion, this instruction is implemented by executing internal PTP and LIN instructions, and the point position in the workpiece coordinate system is automatically converted.

## WorkPieceTrsfStart: Start of workpiece coordinate conversion

Table 3-65 Detailed Parameters of WorkPieceTrsfStart

| Attribute           | Explanation                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WorkPieceTrsfStart (id)                                                                                                              |
| <b>Description</b>  | Workpiece coordinate conversion begins                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>id: Target workpiece coordinate system number, such as 0-wobjcoord0, 1-wobjcoord1.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                 |

## WorkPieceTrsfEnd: End of workpiece coordinate conversion

Table 3-66 Detailed Parameters of WorkPieceTrsfEnd

| Attribute           | Explanation                            |
|---------------------|----------------------------------------|
| <b>Prototype</b>    | WorkPieceTrsfEnd ( )                   |
| <b>Description</b>  | Workpiece coordinate conversion begins |
| <b>Parameter</b>    | null                                   |
| <b>Return value</b> | null                                   |

Code 3-23 Example of Coordinate Conversion for Workpiece

1. --Perform workpiece coordinate conversion
2. WorkPieceTrsfStart (1) -- Start of workpiece coordinate conversion, 1 workpiece coordinate system number
3. PTP(DW01,100,0,0)
4. --DW01- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset
5. PTP(DW02,100,0,0)
6. --DW02- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset
7. PTP(DW03,100,0,0)
8. --DW03- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset
9. --End of workpiece conversion
10. WorkPieceTrsfEnd()

### 3.2.18 Tool Conversion

ToolTrsf is a tool coordinate system conversion instruction that automatically

converts point positions in the tool coordinate system by executing internal PTP and LIN instructions.

### SetToolList: Set tool coordinate system

Table 3-67 SetToolList Detailed Parameters

| Attribute           | Explanation                                                                 |
|---------------------|-----------------------------------------------------------------------------|
| <b>Prototype</b>    | SetToolList (name)                                                          |
| <b>Description</b>  | Set tool coordinate system                                                  |
| <b>Parameter</b>    | • name: Target tool coordinate system name, such as toolcoold0, toolcoold1. |
| <b>Return value</b> | null                                                                        |

### ToolTrsfStart: Tool coordinate system conversion begins

Table 3-68 Detailed Parameters of ToolTrsfStart

| Attribute           | Explanation                                                                    |
|---------------------|--------------------------------------------------------------------------------|
| <b>Prototype</b>    | ToolTrsfStart (id)                                                             |
| <b>Description</b>  | Tool coordinate system conversion begins                                       |
| <b>Parameter</b>    | •id: Target tool coordinate system number, such as 0-toolcoold0, 1-toolcoold1. |
| <b>Return value</b> | null                                                                           |

### ToolTrsfEnd: Tool coordinate system conversion completed

Table 3-69 Detailed Parameters of ToolTrsfEnd

| Attribute           | Explanation                                 |
|---------------------|---------------------------------------------|
| <b>Prototype</b>    | ToolTrsfEnd ()                              |
| <b>Description</b>  | Tool coordinate system conversion completed |
| <b>Parameter</b>    | null                                        |
| <b>Return value</b> | null                                        |

Code 3-24 Tool Coordinate Conversion Example

1. --Tool coordinate conversion
2. SetToolList (toolcoord0) -- Set tool coordinate conversion, toolcoord0- Target tool coordinate name
3. ToolTrsfStart (0) -- Tool coordinate conversion begins, 0-Tool coordinate system number
4. PTP (DW01100,0,0) - DW01- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset
5. PTP (DW02100,0,0) -- DW02- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset
6. PTP (DW03100,0,0) -- DW03- Point name to be converted, 100- Debugging speed, 0- Blocking (stop), 0- No offset

|                                                          |
|----------------------------------------------------------|
| 7. ToolTrsfEnd() -- Tool coordinate conversion completed |
|----------------------------------------------------------|

### 3.2.19 line of intersection

#### MoveToIntersectLineStart: Move to the starting point of the intersection line

Table 3-70 Detailed Parameters of MoveToIntersectLineStart

| Attribute           | Explanation                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveToIntersectLineStart(mainP1,mainP2,mainP3,mainP4,mainP5,mainP6, pieceP1,pieceP2,pieceP3,pieceP4,pieceP5,pieceP6,extAxisFlag,extP1,speed,acc,moveType,moveDirection,offsetPos[6])                                                                                                               |
| <b>Description</b>  | Move to the starting point of the intersection line<br>mainP1-6: Six teaching points of the main pipeline<br>pieceP1-6: Six teaching points of the splice pipe<br>extAxisFlag: Enable extended axis or not: 0 - Disable, 1 - Enable<br>extP1: Starting position extended axis angle teaching point |
| <b>Parameter</b>    | speed: Speed<br>acc: Acceleration<br>moveType: Motion mode, PTP/LIN<br>moveDirection: Motion direction: 0 - Clockwise, 1 - Counterclockwise<br>offsetPos[6]: Offset                                                                                                                                |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                               |

#### MoveIntersectLine: Intersection line motion

Table 3-71 Detailed Parameters of MoveIntersectLine

| Attribute          | Explanation                                                                                                                                                                                              |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | MoveIntersectLine(point1,point2,point3,point4,point5,point6, pieceP1,pieceP2,pieceP3,pieceP4,pieceP5,pieceP6,extAxisFlag,extP1,extP2,extP3,extP4,speed,acc,moveDirection,offsetPos[6])                   |
| <b>Description</b> | Intersection line motion<br>mainP1-6: Six teaching points of the main pipeline<br>pieceP1-6: Six teaching points of the splice pipe<br>extAxisFlag: Enable extended axis or not: 0 - Disable, 1 - Enable |
| <b>Parameter</b>   | extP1-4: 4 extended axis positions<br>speed: Speed<br>acc: Acceleration<br>moveDirection: Motion direction: 0 - Clockwise, 1 - Counterclockwise                                                          |

offsetPos[6]: Offset

**Return value** null

#### Code 3-25 Example of intersection line motion usage

1. MoveToIntersectLineStart(mainP1,mainP2,mainP3,mainP4,mainP5,mainP6,pieceP1,pieceP2,pieceP3,pieceP4,pieceP5,pieceP6,1,extP1,100,100,0,0,0,0,0,0,0)
2. MoveIntersectLine(mainP1,mainP2,mainP3,mainP4,mainP5,mainP6,pieceP1,pieceP2,pieceP3,pieceP4,pieceP5,pieceP6,1,extP1,extP2,extP3,extP4,100,100,0,0,0,0,0,0)

## 3.3 Control instruction

### 3.3.1 Digital IO

The digital 'IO' instruction is divided into two parts: setting IO (SetDO/SPLCSetDO) and getting IO (dDI/SPLCDetBI).

#### SetDO: Set the digital quantity blocking output of the control box

Table 3-72 SetDO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetDO (id, status, smooth, thread)                                                                                                                                                                                                                           |
| <b>Description</b>  | Set control box digital quantity blocking output                                                                                                                                                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0~7: Control box DO0~DO7, 8~15: Control box CO0~CO7;</li> <li>• status:0-False, 1-True;</li> <li>• smooth:0-Break, 1-Serious;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                         |

#### SPLCsetDO: Set control box digital quantity non blocking output

Table 3-73 Detailed Parameters of SPLCsetDO

| Attribute           | Explanation                                                                                                                                                 |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCSetDO (id, status)                                                                                                                                      |
| <b>Description</b>  | Set control box digital quantity non blocking output                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0~7: Control box DO0~DO7, 8~15: Control box CO0~CO7;</li> <li>• status: 0-False, 1-True.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                        |

**SetToolDO: Set tool digital quantity to block output**

Table 3-74 SetToolDO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetToolDO (id, status, smooth, thread)                                                                                                                                                                                        |
| <b>Description</b>  | Set tool digital quantity blocking output                                                                                                                                                                                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 End-DO0, 1 End-DO1;</li> <li>• status:0-False, 1-True;</li> <li>• smooth:0-break, 1-Serious;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                          |

**SPLSetToolDO: Set tool digital quantity non blocking output**

Table 3-75 Detailed Parameters of SPLSetToolDO

| Attribute           | Explanation                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLSetToolDO (id, status, smooth, thread)                                                                                    |
| <b>Description</b>  | Set tool digital quantity non blocking output                                                                                |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0-End-DO0, 1-End-DO1;</li> <li>• status: 0-False, 1-True.</li> </ul> |
| <b>Return value</b> | null                                                                                                                         |

**GetDI: Block the acquisition of control box digital input**

Table 3-76 Detailed Parameters of dDI

| Attribute           | Explanation                                                                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetDI(id, thread)                                                                                                                                                             |
| <b>Description</b>  | Block the acquisition of control box digital input                                                                                                                                  |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0~7: control box DI0~DI7, 8~15: control box CI0~CI7;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | • ret: 0-Invalid, 1-Valid                                                                                                                                                           |

**SPLCSDBI: Non blocking access to IO**

Table 3-77: Detailed Parameters of SPLCedEI

| Attribute          | Explanation                                                                                                             |
|--------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | SPLCGetDI (id, status, stime)                                                                                           |
| <b>Description</b> | Non blocking acquisition of control box digital input                                                                   |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• id: io number, 0~7: control box DI0~DI7, 8~15: control box CI0~CI7;</li> </ul> |

- status:0-False, 1-True;
- Stime: waiting time unit [ms].

**Return value** • ret: 0-Invalid, 1-Valid

### GetToolDI: Block the tool from obtaining numerical input

Table 3-78 Detailed Parameters of Get Tool DI

| Attribute           | Explanation                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetToolDI (id, thread)                                                                                                                             |
| <b>Description</b>  | Block the acquisition of control box digital input                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0-EndDIO, 1-EndDI1;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | • ret: 0-Invalid, 1-Valid.                                                                                                                         |

### SPLCSDBI: Non blocking access to IO

Table 3-79: Detailed Parameters of SPLCedEI

| Attribute           | Explanation                                                                                                                                                         |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCGetToolDI (id, status, stime)                                                                                                                                   |
| <b>Description</b>  | Non blocking acquisition of control box digital input                                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0-EndDIO, 1-EndDI1;</li> <li>• status:0-False, 1-True;</li> <li>• Stime: waiting time unit [ms].</li> </ul> |
| <b>Return value</b> | • ret: 0-Invalid, 1-Valid                                                                                                                                           |

### GetDO: Read the DO output of the control box

Table 3-80: Detailed Parameters of GetDO

| Attribute           | Explanation                                                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetDO(id, block)                                                                                                                                                                          |
| <b>Description</b>  | Read the DO output of the control box                                                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id:ioNumber, 0 - 7: Control boxes DO0 - DO7; 8 - 15: Control boxes CO0 - CO7;</li> <li>• block:Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | • ret: 0-Invalid, 1-Valid                                                                                                                                                                       |

### GetToolDO: Read the DO output of the control box

Table 3-81: : Detailed Parameters GetToolDO

| Attribute | Explanation |
|-----------|-------------|
|-----------|-------------|

|                     |                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetToolDO(id, block)                                                                                                                            |
| <b>Description</b>  | Read the robot's extended DO output                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id:Port ID: 0-Tool DO0, 1-Tool DO1;</li> <li>• block:Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | • ret: DO output status: 0-invalid, 1-valid                                                                                                           |

Code 3-26 Example of Digital IO

1. --Set digital IO
2. SetDO (0,1,0,1) -- Set control box digital quantity blocking output
3. SPLCsetDO (1,1) -- Set control box digital quantity non blocking output
4. SetToolDO (1,0,1,1) -- Set tool digital quantity to block output
5. SPLCSetToolDO (1,0) -- Set tool digital quantity non blocking output
6. --PTP (DW01100,0,0) PTP motion mode
7. -Get digital IO
8. Ret1=dDI (0,1) -- Block the acquisition of control box digital input
9. Ret2=SPLCdEI (1,01000) -- Non blocking acquisition of control box digital input
10. Ret3=Get Tool DI (1,0) -- Block the tool from obtaining numerical input
11. Ret4=SPLCDetToolDI (1,0100) -- Non blocking tool for obtaining numerical input

### 3.3.2 Analog IO

In this instruction, it is divided into two parts: setting analog output (SetAO/PLCSetAO) and obtaining analog input (vDI/SPLCDeAI).

#### SetAO: Set control box analog blocking output

Table 3-82 SetAO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                       |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetAO (id, value, thread)                                                                                                                                                                                                                                                         |
| <b>Description</b>  | Set control box analog blocking output                                                                                                                                                                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0-AI0, 1-AI1;</li> <li>• value: percentage of current or voltage value, range [0~100%] corresponding to current value [0~20mA] or voltage [0~10V];</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                              |

#### SPLCSetAO: Set control box analog non blocking output

Table 3-83 Detailed Parameters of SPLCSetAO

| Attribute           | Explanation                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCSetAO (id, value)                                                                                                                                                       |
| <b>Description</b>  | Set control box analog non blocking output <ul style="list-style-type: none"> <li>• id: io number, 0-AI0, 1-AI1;</li> </ul>                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• value: Percentage of current or voltage value, range [0~100%] corresponds to current value [0~20mA] or voltage [0~10V].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                        |

**SetToolAO: Set tool analog output**

Table 3-84 SetToolAO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetToolAO (id, value, thread)                                                                                                                                                                                                             |
| <b>Description</b>  | Set control box analog blocking output <ul style="list-style-type: none"> <li>• id: io number, 0-End-AO0;</li> </ul>                                                                                                                      |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• value: percentage of current or voltage value, range [0~100%] corresponding to current value [0~20mA] or voltage [0~10V];</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                      |

**SPLCSetToolAO: Set control box analog non blocking output**

Table 3-85 Detailed Parameters of SPLCSetToolAO

| Attribute           | Explanation                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCSetToolAO (id, value)                                                                                                                                                   |
| <b>Description</b>  | Set control box analog non blocking output <ul style="list-style-type: none"> <li>• id: io number, 0-End-AO0;</li> </ul>                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• value: Percentage of current or voltage value, range [0~100%] corresponds to current value [0~20mA] or voltage [0~10V].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                        |

**FHIR I: Obtain analog input from the control box**

Table 3-86: Detailed Parameters of FHIR I

| Attribute           | Explanation                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetAI(id, thread)                                                                                                                            |
| <b>Description</b>  | Block the acquisition of control box analog input                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 AI0, 1 AI1;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | value: Input current or voltage value percentage, range [0~100] corresponds to current value [0~20mA] or voltage [0~10V]                     |

### SPLCVEI: Non blocking acquisition of control box analog input

Table 3-87 Detailed Parameters of SPLCVEAI

| Attribute           | Explanation                                                                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCGetAI (id, condition, value, stime)                                                                                                                                                                         |
| <b>Description</b>  | Non blocking acquisition of control box analog input                                                                                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 AI0, 1 AI1;</li> <li>• value: numerical value, 1%~100%;</li> <li>• condition:0 - &gt;, 1 - &lt;;</li> <li>• Stime:maximum time, unit [ms];</li> </ul> |
| <b>Return value</b> | status: return status, 1-successful, 0-failed.                                                                                                                                                                  |

### Get Tool AI: Block tool to obtain analog input

Table 3-88 Detailed Parameters of Get Tool AI

| Attribute           | Explanation                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetToolAI (id, thread)                                                                                                                       |
| <b>Description</b>  | Block the acquisition of control box analog input                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 AI0, 1 AI1;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | value: Input current or voltage value percentage, range [0~100] corresponds to current value [0~20mA] or voltage [0~10V]                     |

### SPLCGetToolAI: Non blocking acquisition of control box analog input

Table 3-89: Detailed Parameters of SPLCDefToolAI

| Attribute | Explanation |
|-----------|-------------|
|-----------|-------------|

|                     |                                                                                                                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SPLCGetToolAI (id, condition, value, stime)                                                                                                                                                                 |
| <b>Description</b>  | Non blocking acquisition of control box analog input                                                                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 AI0, 1 AI1;</li> <li>• value: numerical value, 1%~100%;</li> <li>• condition:0-&gt;, 1-&lt;;</li> <li>• Stime:maximum time, unit [ms];</li> </ul> |
| <b>Return value</b> | status: return status, 1-successful, 0-failed.                                                                                                                                                              |

### GetAO: Read the AO output of the control box

Table 3-90 Detailed Parameters of GetAO

| Attribute           | Explanation                                                                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetAO(id, block)                                                                                                                                                        |
| <b>Description</b>  | Read the AO output of the control box                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id:IO number: 0 for Control Box AO0, 1 for Control Box AO1;</li> <li>• block:Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | • ret: AO output percentage: 0-100                                                                                                                                            |

### GetToolAO: Read the AO output of the control box

Table 3-91 Detailed Parameters of GetToolAO

| Attribute           | Explanation                                                                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetToolAO(id, block)                                                                                                                  |
| <b>Description</b>  | Read the robot's extended AO output                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id:Port ID: 0 - Tool AO0;</li> <li>• block:Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | • ret:AO output percentage, 0 - 100                                                                                                         |

#### Code 3-27 Simulated IO Example

|                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1. - Set analog quantity</li> <li>2. SetAO (0,10,0) - Set control box analog blocking output</li> <li>3. SPLCSetAO (1,10) - Set control box analog non blocking output</li> <li>4. SetToolAO (0,10,0) - Set tool analog blocking output</li> <li>5. SPLCSetToolAO (0,10) - Set tool analog non blocking output</li> <li>6. -Obtain analog quantity</li> </ol> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

7. value1=FHIR I (0,0) - Block the acquisition of control box analog input
8. value2=SPLCVEI (1,0,301000) - Non blocking acquisition of control box analog input
9. value3=Get Tool AI (0,1) - Block the analog input of the acquisition tool
10. value3=SPLCDetToolAI (0,0,10,50) - Non blocking acquisition tool analog input

### 3.3.3 Virtual IO

Virtual IO is a virtual IO control instruction that sets or retrieves simulated external DI and AI states.

#### SetVirtualDI: Set up simulated external DI

Table 3-92 SetVirtualDI Detailed Parameters

| Attribute           | Explanation                                                                                                                                                 |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetVirtualDI (id, status)                                                                                                                                   |
| <b>Description</b>  | Set up simulated external DI                                                                                                                                |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0~7: control box DI0~DI7, 8~15: control box CI0~CI7;</li> <li>• status: 0-Flash, 1-True.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                        |

#### SetVirtualToolDI: Set simulated external tool DI

Table 3-93 SetVirtualToolDI Detailed Parameters

| Attribute           | Explanation                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetVirtualToolDI (id, status)                                                                                                    |
| <b>Description</b>  | Set up simulation external tool DI                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: io number, 0 - End-DI0, 1 - End-DI1;</li> <li>• status: 0-Flash, 1-True.</li> </ul> |
| <b>Return value</b> | null                                                                                                                             |

#### GetVirtualDI: Get simulated external DI

Table 3-94 Detailed Parameters of GetVirtualDI

| Attribute          | Explanation                                                                                                             |
|--------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | GetVirtualDI (id)                                                                                                       |
| <b>Description</b> | Obtain simulated external DI                                                                                            |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• id: io number, 0~7: control box DI0~DI7, 8~15: control box CI0~CI7.</li> </ul> |

**Return value** ret: 0-Invalid, 1-Valid.

### GetVirtualToolDI: Get simulated external tool DI

Table 3-95 Detailed Parameters of GetVirtualToolDI

| Attribute           | Explanation                                                                                |
|---------------------|--------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetVirtualToolDI (id)                                                                      |
| <b>Description</b>  | Obtain simulated external tool DI                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>id: io number, 0 - End-DI0, 1 - End-DI1.</li> </ul> |
| <b>Return value</b> | ret: 0-Invalid, 1-Valid.                                                                   |

### SetVirtualAI: Set up simulated external AI

Table 3-96 Detailed Parameters of GetVirtualAI

| Attribute           | Explanation                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetVirtualAI (id, value)                                                                                                                                      |
| <b>Description</b>  | Set up simulated external AI                                                                                                                                  |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>id: io number, 0 AI0, 1 AI1;</li> <li>value: Corresponding current value [0~20mA] or voltage value [0~10V].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                          |

### SetVirtualToolAI: Set up simulated external AI

Table 3-97 Detailed Parameters of GetVirtualToolAI

| Attribute           | Explanation                                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetVirtualToolAI (id, value)                                                                                                                               |
| <b>Description</b>  | Set up simulated external AI                                                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>id: io number, 0 End AI0;</li> <li>value: Corresponding current value [0~20mA] or voltage value [0~10V].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                       |

### GetVirtualAI, Obtain simulated external AI

Table 3-98 Detailed Parameters of GetVirtualAI

| Attribute          | Explanation                  |
|--------------------|------------------------------|
| <b>Prototype</b>   | GetVirtualAI (id)            |
| <b>Description</b> | Obtain simulated external AI |

|                     |                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | • id: io number, 0 AI0, 1 AI1.                                                                                           |
| <b>Return value</b> | value: Input current or voltage value percentage, range [0~100] corresponds to current value [0~20mA] or voltage [0~10V] |

### GetVirtualToolAI, Obtain simulated external tool AI

Table 3-99 Detailed Parameters of GetVirtualToolAI

| Attribute           | Explanation                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | value = GetVirtualToolAI (id)                                                                                            |
| <b>Description</b>  | Obtain simulated external tool AI                                                                                        |
| <b>Parameter</b>    | • id: io number, 0-End-AI0.                                                                                              |
| <b>Return value</b> | value: Input current or voltage value percentage, range [0~100] corresponds to current value [0~20mA] or voltage [0~10V] |

Code 3-28 Virtual IO Example

1. --Simulate external DI settings and retrieval
2. SetVirtualDI (0,1) -- Set simulated external DI, 0-port number DI0, 1-True
3. SetVirtualAI (0,5) -- Set simulated external AI, 0-port number AI0,5- numerical value 5ma
4. Ret1=GetVirtualDI (1) -- Get simulated external DI, 1-port number DI1
5. value1=GetVirtualAI (1) -- Get simulated external AI, 1-port number AI1
6. --Simulate external tool DI settings and retrieval
7. SetVirtualToolDI (1,0) - Set simulation external tool DI
8. SetVirtualToolAI (0,12) - Set up simulated external tool AI
9. Ret2=GetVirtualToolDI (1) - Get simulated external tool DI
10. value2=GetVirtualToolAI (0) - Get simulated external tool AI

### 3.3.4 Sports DO

The relevant instructions for motion DO are divided into continuous output mode and single output mode to achieve the function of continuously outputting DO signals according to the set interval during linear motion.

#### MoveDOStart: Parallel setting of control box DO status starts during movement

Table 3-100 Detailed Parameters of MoveDOStart

| Attribute          | Explanation                                                      |
|--------------------|------------------------------------------------------------------|
| <b>Prototype</b>   | MoveDOStart (doNum, distance, dutyCycle)                         |
| <b>Description</b> | Parallel setting of control box DO status during exercise begins |
| <b>Parameter</b>   | • doNum: Control box DO number, 0~7: Control box DO0~DO7, 8~15:  |

Control box CO0~CO7;

- distance: interval distance, range: 0~500, unit [mm, default 10];
- dutyCycle: Output pulse duty cycle unit [%], 0~99, default 50%.

**Return value** null

### MoveDOStop: Parallel setting of control box DO status to stop during movement

Table 3-101 Detailed Parameters of MoveDOStop

| Attribute           | Explanation                                                       |
|---------------------|-------------------------------------------------------------------|
| <b>Prototype</b>    | MoveDOStop ()                                                     |
| <b>Description</b>  | Parallel setting of control box DO status to stop during exercise |
| <b>Parameter</b>    | null                                                              |
| <b>Return value</b> | null                                                              |

### MoveToolDOStart: Parallel setting of tool DO status during motion begins

Table 3-102 Detailed Parameters of MoveToolDOStart

| Attribute           | Explanation                                                                                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveToolDOStart (doNum, distance, dutyCycle)                                                                                                                                                                                                             |
| <b>Description</b>  | Parallel setting tool DO status starts during exercise                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• doNum: Tool DO number, 0 End-DO0, 1 End-DO1;</li> <li>• distance: interval distance, range: 0~500, unit [mm, default 10];</li> <li>• dutyCycle: Output pulse duty cycle unit [%], 0~99, default 50%.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                     |

### MoveToolDOStop: Set tool DO status to stop in parallel during motion

Table 3-103 Detailed Parameters of MoveToolDOStop

| Attribute           | Explanation                                                    |
|---------------------|----------------------------------------------------------------|
| <b>Prototype</b>    | MoveToolDOStop ()                                              |
| <b>Description</b>  | Stop the DO state of the parallel setting tool during exercise |
| <b>Parameter</b>    | null                                                           |
| <b>Return value</b> | null                                                           |

#### Code 3-29 Motion DO Example

1. --Control box
2. MoveDOStart (1,10,50)
3. --Set motion DO continuous output, 1-port number DO1, 10 time interval 10mm, 50 output pulse duty cycle 50%
4. Lin (DW01100, -1,0,0) - Linear Motion
5. MoveDOStop() - Stop motion DO input

- 6.
7. --Tools
8. MoveToolDOStart(0,10,50)
9. Lin (DW01100, -1,0,0) -- Linear Motion
10. MoveToolDOStop() -- Stop motion DO input

### 3.3.5 Exercise A0

When used in conjunction with motion commands, it can achieve proportional output of AO signals based on real-time TCP speed during the motion process.

#### MoveAOStart: Control box motion AO starts

Table 3-104 Detailed Parameters of MoveAOStart

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveAOStart (AONum, maxTCPSpeed, maxAOPercent, zeroZoneCmp)                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>  | Control box motion AO starts                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AONum: Control box AO number, 0-AO0,1-AO1;</li> <li>• maxTCpspeed: maximum TCP speed value [1-5000mm/s], default 1000;</li> <li>• maxAOPercent: The AO percentage corresponding to themaximum TCP speed value, with a default of 100%;</li> <li>• ZeroZoneCmp: Dead zone compensation value AO percentage, shaping, default is 20%, range [0-100].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                   |

#### MoveAOStop: Control box motion AO ends

Table 3-105 Detailed Parameters of MoveAOStop1

| Attribute           | Explanation                |
|---------------------|----------------------------|
| <b>Prototype</b>    | MoveAOStop()               |
| <b>Description</b>  | Control box motion AO ends |
| <b>Parameter</b>    | null                       |
| <b>Return value</b> | null                       |

#### MoveToolAOStart: Tool motion AO starts

Table 3-106 Detailed Parameters of MoveAOStart

| Attribute          | Explanation                                                                                    |
|--------------------|------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | MoveToolAOStart (AONum, maxTCPSpeed, maxAOPercent, zeroZoneCmp)                                |
| <b>Description</b> | Tool movement AO begins                                                                        |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• AONum: Control box AO number, 0-AO0,1-AO1;</li> </ul> |

- maxTCpspeed: maximum TCP speed value [1-5000mm/s], default 1000;
- maxAOPercent: The AO percentage corresponding to the maximum TCP speed value, with a default of 100%;
- ZeroZoneCmp: Dead zone compensation value AO percentage, shaping, default is 20%, range [0-100].

**Return value** null

### MoveToolAOSTop: Tool motion AO ends

Table 3-107 Detailed Parameters of MoveAOSTop

| Attribute           | Explanation         |
|---------------------|---------------------|
| <b>Prototype</b>    | MoveToolAOSTop ()   |
| <b>Description</b>  | Tool motion AO ends |
| <b>Parameter</b>    | null                |
| <b>Return value</b> | null                |

Code 3-30 Motion AO Example

```

1. --Control box
2. MoveAOSTart (11000100,20) -- Set motion AO output, 1-port number
   AO11000-maximum TCP speed, 100-maximum TCP speed percentage, 20- dead zone
   compensation value AO percentage
3. Lin (DW01100,0,0,0) -- Linear Motion
4. MoveAOSTop() -- Stop motion AO output
5. -- Tools
6. MoveToolAOSTart (0,1000,100,20)
7. Lin(DW01,100,0,0,0)
8. MoveToolAOSTop ()

```

### 3.3.6 Expanding IO

Aux IO is a command function for external IO expansion control between robots and PLCs, which requires the robot to establish UDP communication with the PLC. On the basis of the original 16 input/output channels, 128 input/output channels can be expanded.

#### ExtDevSetUDPComParam: Configure UDP communication data

Table 3-108 Detailed Parameters of ExtDevSetUDPComParam

| Attribute        | Explanation                             |
|------------------|-----------------------------------------|
| <b>Prototype</b> | ExtDevSetUDPComParam (ip, port, period) |

|                     |                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | UDP Extended Axis Communication Parameter Configuration                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• IP: PLC IP address;</li> <li>• Port: Port number;</li> <li>• Period: Communication cycle (ms).</li> </ul> |
| <b>Return value</b> | null                                                                                                                                               |

### ExtDevLoadUDPDriver loads UDP communication

Table 3-109 Detailed Parameters of ExtDevLoadUDPDriver

| Attribute           | Explanation            |
|---------------------|------------------------|
| <b>Prototype</b>    | ExtDevLoadUDPDriver()  |
| <b>Description</b>  | Load UDP communication |
| <b>Parameter</b>    | null                   |
| <b>Return value</b> | null                   |

#### Code 3-31 Motion AO Example

1. --UDP Extended Axis Communication Parameter Configuration and Loading
2. ExtDevSetUDPComParam("192.168.58.88",2021,2)
3. --UDP communication configuration, "192.168.58.88" - IP address, 2021- port number, 2-communication cycle
4. ExtDevLoadUDPDriver() -- Load UDP driver to enable communication.
5. WaitMs (500) - Wait for 500 milliseconds to ensure that the UDP driver has been loaded correctly.

### SetAuxDO: Set Extended DO

Table 3-110 SetAuxDO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetAuxDO (DONum, status, smooth, thread)                                                                                                                                                                                 |
| <b>Description</b>  | Set extended DO                                                                                                                                                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DOUm: DO number, range [0~127];</li> <li>• status:0-False, 1-True;</li> <li>• smooth:0-Break, 1-Serious;</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                     |

### VDuxDI: Get Extended DI

Table 3-111 Detailed Parameters of vDuxDI

| Attribute           | Explanation                                                                          |
|---------------------|--------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetAuxDI (DINum)                                                                     |
| <b>Description</b>  | Get extended DI value                                                                |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DINum: DI number, range [0~127].</li> </ul> |
| <b>Return value</b> | IsOpen: 0-off; 1- Open                                                               |

**SetAuxAO: Set Extended AO**

Table 3-112 SetAuxAO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetAuxAO (AONum, value, thread)                                                                                                                                                                                                                                                      |
| <b>Description</b>  | Set up extended AO                                                                                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• id: AO number, range [0~3];</li> <li>• value: percentage of current or voltage value, range [0~100%]<br/>corresponding to current value [0~20mA] or voltage [0~10V];</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                 |

**GetAuxAI: Get Extended AI value**

Table 3-113 Detailed Parameters of GetAuxAI

| Attribute           | Explanation                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetAuxAI (AINum, thread)                                                                                                                          |
| <b>Description</b>  | Obtain extended AI values                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AINum: AuxAI number, range [0~3];</li> <li>• thread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | value: Input current or voltage value percentage, range [0~100] corresponds to current value [0~20mA] or voltage [0~10V]                          |

**WaitAuxDI: Waiting for extended DI input**

Table 3-114 Detailed Parameters of WaitAuxDI

| Attribute          | Explanation                                                                                                         |
|--------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | WaitAuxDI(DINum, bOpen,time, timeout)                                                                               |
| <b>Description</b> | Waiting for extended DI input                                                                                       |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• DINum: DI number;</li> <li>• bBOpen: Switch True on, False off;</li> </ul> |

- time: maximum waiting time (ms);
- timeout: waiting for timeout processing 0- stop error, 1- continue waiting, 2- keep waiting.

**Return value** null

### WaitAuxAI: Waiting for extended AI input

Table 3-115 Detailed Parameters of WaitAuxAI

| Attribute           | Explanation                                                                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WaitAuxAI (AINum, sign, value, time, timeout)                                                                                                                                                                                                                                                         |
| <b>Description</b>  | Waiting for extended AI input                                                                                                                                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AINum: AI number;</li> <li>• sign: 0- greater than; 1- Less than;</li> <li>• value: AI value;</li> <li>• time: maximum waiting time (ms);</li> <li>• timeout: waiting for timeout processing 0- stop error, 1- continue waiting, 2- keep waiting.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                  |

### GetAuxDO: Get extended DO output

Table 3-116 Detailed Parameters of GetAuxDO

| Attribute           | Explanation                                                                                                                                         |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetAuxDO (DONum)                                                                                                                              |
| <b>Description</b>  | Get the extended DO value                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DONum: DO number, range [0~127];</li> <li>• block: Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | ret:DO output status: -Invalid, 1-Valid                                                                                                             |

### GetAuxAO: Get extended AO output

Table 3-117 Detailed Parameters of GetAuxAO

| Attribute           | Explanation                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ret = GetAuxAO (AONum)                                                                                                                                                      |
| <b>Description</b>  | Get the extended AO value                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AONum: Port ID: 0 - 4 corresponds to extended AO0 - AO3;</li> <li>• block: Blockage status: 0 = blocked, 1 = unblocked.</li> </ul> |
| <b>Return value</b> | ret:AO output percentage: 0-100                                                                                                                                             |

Code 3-32 Example of Extended IO Instruction Set

```

1.  --Set extended DO
2.  SetAuxDO(0,1,1,0)
3.  --Set up extended AO
4.  SetAuxAO(0,10,0)
5.  --Waiting for extended DI input
6.  WaitAuxDI(0,0,1000,0)
7.  --Waiting for extended AI input
8.  WaitAuxAI(0,0,50,1000,0)
9.  --Get extended DI value
10. Ret = GetAuxDI(0,0)
11. --Obtain extended AI values
12. value = GetAuxAI(0,0)

```

### 3.3.7 Coordinate System

The coordinate system instruction is divided into two parts: "Set tool coordinate system" and "Set workpiece coordinate system".

#### SetToolList: Set tool coordinate series table

Table 3-118 SetToolList Detailed Parameters

| Attribute           | Explanation                                                         |
|---------------------|---------------------------------------------------------------------|
| <b>Prototype</b>    | SetToolList(name)                                                   |
| <b>Description</b>  | Set tool coordinate series table                                    |
| <b>Parameter</b>    | • name: The name of the tool coordinate system, such as toolcoord0. |
| <b>Return value</b> | null                                                                |

#### SetWObjList: Set the workpiece coordinate series table

Table 3-119 SetWObjList Detailed Parameters

| Attribute           | Explanation                                                              |
|---------------------|--------------------------------------------------------------------------|
| <b>Prototype</b>    | SetWObjList (name)                                                       |
| <b>Description</b>  | Set tool coordinate series table                                         |
| <b>Parameter</b>    | • name: The coordinate system name of the workpiece, such as wobjcoord0. |
| <b>Return value</b> | null                                                                     |

Code 3-33 Coordinate System Example

```

1.  SetWObjList (wobjcoord0) -- Set workpiece coordinates

```

2. SetToolList (toolcoord0) -- Set tool coordinates

### 3.3.8 mode Switching

mode can be used to switch the robot mode. This command can switch the robot to manual mode, usually added at the end of a program, so that the user can automatically switch the robot to manual mode and drag it after the program runs.

#### mode: Switch from robot mode to manual mode

Table 3-120 Detailed mode Parameters

| Attribute           | Explanation                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | mode(state)                                                                                       |
| <b>Description</b>  | Control the robot to switch to manual mode                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• State: 0- Robot mode, default 1- Manual mode.</li> </ul> |
| <b>Return value</b> | null                                                                                              |

Code 3-34 Coordinate System Example

1. Lin(DW01,100,-1,0,0)
2. Lin(DW02,100,-1,0,0)
3. Lin(DW03,100,-1,0,0)
4. mode(1)

### 3.3.9 Collision Level

By setting collision levels, the collision levels of each axis can be adjusted in real-time during program execution, making deployment of application scenarios more flexible. In custom percentage mode, 1~100% corresponds to 0~100N.

#### SetAnticollision: Collision Level Setting

Table 3-121 SetAnticollision Detailed Parameters

| Attribute          | Explanation                                                                                                                                                                                                                                                                                         |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | SetAnticollision (mode, level, config)                                                                                                                                                                                                                                                              |
| <b>Description</b> | Set collision level <ul style="list-style-type: none"> <li>• mode: 0- standard level, 1- custom percentage;</li> </ul>                                                                                                                                                                              |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• Level={j1, j2, j3, j4, j5, j6}: collision threshold, a total of 11 levels, 1 is level 1, 2 is level 1, and 2100 is the collision off level;</li> <li>• Config: 0- Do not update configuration file, 1- Update configuration file, default is 0.</li> </ul> |

**Return value** null

#### Code 3-35 Coordinate System Example

1. level={4,4,4,4,4,5}
2. SetAnticollision (0, level, 0) -- Set collision level, 0-Standard mode, level - Collision level of each joint, 0-Do not update configuration file
1. level1={40,40,40,40,40,50}
2. SetAnticollision (1, level 1,0) -- Set collision level, 1- Custom percentage mode, level - Collision threshold for each joint, 0- Do not update configuration file

### 3.3.10 Collision Detection

Custom collision-detection threshold function activated—configure thresholds for both joint-side and TCP-side collision detection.

#### CustomCollisionDetectionStart: Collision threshold function enabled

Table 3-122 CustomCollisionDetectionStart Detailed Parameters

| Attribute          | Explanation                                                                                                                                                                                                         |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | CustomCollisionDetectionStart(flag,jointDetectionThreshold,tcpDetectionThreshold, block)                                                                                                                            |
| <b>Description</b> | Custom collision detection threshold function activated <ul style="list-style-type: none"> <li>• flag: 1 – joint detection only; 2 – TCP detection only; 3 – both joint and TCP detection</li> </ul>                |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• jointDetectionThreshold, j1-j6</li> <li>• tcpDetectionThreshold: TCP collision detection threshold,x-y-z-a-b-c</li> <li>• block: 0 – non-blocking; 1 – blocking</li> </ul> |
| <b>Return</b>      | null                                                                                                                                                                                                                |

#### CustomCollisionDetectionEnd: Collision threshold function disabled

Table 3-123 CustomCollisionDetectionEnd Detailed Parameters

| Attribute          | Explanation                                            |
|--------------------|--------------------------------------------------------|
| <b>Prototype</b>   | CustomCollisionDetectionEnd ()                         |
| <b>Description</b> | Custom collision-detection threshold function disabled |
| <b>Parameter</b>   | null                                                   |
| <b>Return</b>      | null                                                   |

#### Code 3-36 Collision Threshold Function Example

1. CustomCollisionDetectionStart(1,{100,100,100,100,100,100},{300,300,300,300,300,300},0)
2. CustomCollisionDetectionEnd()

### 3.3.11 Acceleration

The Acc command is used to enable the independent setting of robot acceleration. By adjusting the motion command and adjusting the speed, the acceleration and deceleration time can be increased or decreased, and the robot's action rhythm time can be adjusted.

#### SetOaccScale, Set robot acceleration

Table 3-124 SetOaccScale Detailed Parameters

| Attribute           | Explanation                              |
|---------------------|------------------------------------------|
| <b>Prototype</b>    | SetOaccScale(acc)                        |
| <b>Description</b>  | Set robot acceleration                   |
| <b>Parameter</b>    | • acc: Percentage of robot acceleration. |
| <b>Return value</b> | null                                     |

Code 3-37 Acceleration Example

1. SetOaccScale (20) --20- Set acceleration percentage

## 3.4 Peripheral instruction

### 3.4.1 Gripper

ActGripper, Gripper activation/reset

Table 3-125 Detailed Parameters of ActGripper

| Attribute           | Explanation                                                  |
|---------------------|--------------------------------------------------------------|
| <b>Prototype</b>    | ActGripper(index,action)                                     |
| <b>Description</b>  | Activate Gripper                                             |
| <b>Parameter</b>    | • Index: Gripper number;<br>• Action: 0- Reset, 1- Activate. |
| <b>Return value</b> | null                                                         |

### MoveGripper Gripper Motion Control Parameters

Table 3-126 Detailed Parameters of MoveGripper

| Attribute          | Explanation                                           |
|--------------------|-------------------------------------------------------|
| <b>Prototype</b>   | MoveGripper (index, pos, vel, force, max_time, block) |
| <b>Description</b> | Set gripper motion control Parameters                 |
| <b>Parameter</b>   | • Index: Gripper number, range [1~8];                 |

- POS: Position percentage, range [0~100];
- vel: speed percentage, range [0~100];
- force: percentage of torque, range [0~100];
- max\_time: maximum waiting time, range [0~30000], unit: ms;
- block: whether it is blocked, 0-blocking, 1-non blocking.

**Return value** null

#### Code 3-38 Gripper Example

1. ActGripper (1,0) - Gripper Reset, 1-Gripper Number, 0-Reset
2. WaitMs (1000) - Wait for 1000ms to ensure successful jaw reset
3. ActGripper (1,1) - Gripper Activation, 1-Gripper Number, 1-gripper Activation
4. WaitMs (10) - Wait for 1000ms to ensure successful jaw reset
5. MoveGripper(1,62,27,51,3000,1)
6. -Control gripper movement, 1-gripper number, 62 gripper position, 27 gripper opening and closing speed, 51 gripper opening and closing torque, 3000 gripper maximum waiting time, 0-blockage

### 3.4.2 Spray gun

The spray gun command can control actions such as "start spraying", "stop spraying", "start cleaning", and "stop light spraying" of the spray gun.

#### SprayStart: Spraying begins

Table 3-127 Detailed Parameters of SprayStart

| Attribute           | Explanation     |
|---------------------|-----------------|
| <b>Prototype</b>    | SprayStart ()   |
| <b>Description</b>  | Spraying begins |
| <b>Parameter</b>    | null            |
| <b>Return value</b> | null            |

#### SprayStop: Stop spraying

Table 3-128 Detailed Parameters of SprayStop

| Attribute           | Explanation   |
|---------------------|---------------|
| <b>Prototype</b>    | SprayStop ()  |
| <b>Description</b>  | Stop spraying |
| <b>Parameter</b>    | null          |
| <b>Return value</b> | null          |

### PowerCleanStart: Start cleaning the gun

Table 3-129 Detailed Parameters of PowerCleanStart

| Attribute           | Explanation            |
|---------------------|------------------------|
| <b>Prototype</b>    | PowerCleanStart ()     |
| <b>Description</b>  | Start cleaning the gun |
| <b>Parameter</b>    | null                   |
| <b>Return value</b> | null                   |

### PowerCleanStop: Gun cleaning stops

Table 3-130 Detailed Parameters of PowerCleanStop

| Attribute           | Explanation           |
|---------------------|-----------------------|
| <b>Prototype</b>    | PowerCleanStop ()     |
| <b>Description</b>  | Stop clearing the gun |
| <b>Parameter</b>    | null                  |
| <b>Return value</b> | null                  |

#### Code 3-39 Spray Gun Example

1. Lin (SprayStart, 100, -1,0,0) -- Start spraying point and move to spraying starting point
2. SprayStart() - Start spraying
3. Lin (Sprayline, 100, -1,0,0) -- Spray path
4. Lin (template3100, -1,0,0) -- Stop spraying point
5. SprayStop () - Stop spraying
6. Lin (template 4100, -1,0,0) -- gun cleaning point, move to gun cleaning point, wait for gun cleaning processing
7. PowerCleanStart() -- Start cleaning the gun
8. WaitMs (5000) -- gun cleaning time 5000ms
9. PowerCleanStop() -- Stop gun cleaning

### 3.4.3 Expansion axis

The expansion axis is divided into two modes: Controller PLC (UDP) and Controller Servo Driver (485).

#### EXT\_AXIS\_PTP: UDP mode Extended Axis Motion

Table 3-131 Detailed Parameters of EXT\_AXIS\_PTP

| Attribute           | Explanation                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | EXT_AXIS_PTP (mode, name, Vel)                                                                                                      |
| <b>Description</b>  | UDP mode Extended Axis Motion <ul style="list-style-type: none"> <li>• mode: Motion mode, 0-asynchronous, 1-synchronous;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Point name;</li> <li>• vel: Debugging speed.</li> </ul>                              |
| <b>Return value</b> | null                                                                                                                                |

**ExtAxisMoveJ: UDP mode Extended Axis Motion**

Table 3-132 Detailed Parameters of ExtAxisMoveJ

| Attribute           | Explanation                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ExtAxisMoveJ (mode, E1, E2, E3, E4, Vel)                                                                                             |
| <b>Description</b>  | UDP mode Extended Axis Motion <ul style="list-style-type: none"> <li>• mode: Motion mode, 0-asynchronous, 1-synchronous;;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• E1, E2, E3, E4: External axis positions</li> <li>• vel: Debugging speed.</li> </ul>         |
| <b>Return value</b> | null                                                                                                                                 |

**ExtAxisSetHoming: UDP Extended Axis returns to Zero**

Table 3-133 Detailed Parameters of ExtAxisSetHoming

| Attribute           | Explanation                                                                                                                                                                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ExtAxisSetHoming(axisID, mode, searchVel, latchVel)                                                                                                                                                                                                                                  |
| <b>Description</b>  | UDP extension axis returns to zero <ul style="list-style-type: none"> <li>• Axisid: axis number [1-4];</li> <li>• mode: return to zero mode: 0. return to zero at the current position, 1. return to zero at the negative limit, 2. return to zero at the positive limit;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• SearchVel zero search speed (mm/s);</li> <li>• latchVel: Zero positioning speed (mm/s).</li> </ul>                                                                                                                                          |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                 |

**ExtAxisSeroOn: UDP Extended Axis Enable**

Table 3-134 Detailed Parameters of ExtAxisSeroOn

| Attribute        | Explanation                    |
|------------------|--------------------------------|
| <b>Prototype</b> | ExtAxisServoOn(axisID, status) |

|                     |                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | UDP Extension Axis Enable                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Axisid: axis number [1-4];</li> <li>• status: 0- Enable; 1- Enable.</li> </ul> |
| <b>Return value</b> | null                                                                                                                    |

### Code 3-40 UDP Extension Axis Example

```

1. --UDP Extension Axis Example
2. ExtDevSetUDPComParam ("192.168.58.88", 2021,10) -- Configure UDP communication
   Parameters
3. ExtDevLoadUDPDriver() -- Load UDP driver to enable communication
4. WaitMs (500) -- Wait for 500 milliseconds to ensure that the UDP driver has been loaded
   correctly
5. ExtAxisSeroOn (1,0) -- disable, disable axis 1
6. ExtAxisSeroOn (1,1) -- Enable, enable axis 1
7. ExtAxisSetHoming (1,0,40,45) -- Zeroing, 1-Extended axis number, 0-Current position
   zeroing, 40 Zeroing speed, 45 Zeroing clamp speed
8. WaitMs (1000) - Wait for 1000 milliseconds
9. EXT_EAXIS_PTP (0, DW01100) -- Motion command, 0-Asynchronous motion, DW01-
   Point name, 100- Debugging speed
10. WaitMs (1000) -- Wait for 1000 milliseconds

```

Controller servo driver (485) mode is used to configure the Parameters of the extended axis.

**AuxServosetStatusid: Set the 485 extension axis data axis number in the status feedback**

Table 3-135 AuxServosetStatusID Detailed Parameters

| Attribute           | Explanation                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | AuxServosetStatusID(servoid)                                                                                          |
| <b>Description</b>  | Set the 485 extension axis data axis number in the status feedback                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• servoid: servo drive ID, range [1-15], corresponding to slave ID.</li> </ul> |
| <b>Return value</b> | null                                                                                                                  |

**AuxServoEnable, Is the 485 extension axis enabled**

Table 3-136 Detailed Parameters of AuxServoEnable

| Attribute           | Explanation                                                                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | AuxServoEnable(servoid, status)                                                                                                                                              |
| <b>Description</b>  | Enable/disable 485 extension axis                                                                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• servoid: servo drive ID, range [1-15], corresponding to slave ID;</li> <li>• status: Enable status, 0-disable, 1-enable.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                         |

**AuxServoSetControlmode, Set the mode of 485 extended axis control**

Table 3-137 Detailed Parameters of AuxServoSetControlmode

| Attribute           | Explanation                                                                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | AuxServoSetControlmode(servoid, mode)                                                                                                                                               |
| <b>Description</b>  | Set 485 extension axis control mode                                                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• servoid: servo drive ID, range [1-15], corresponding to slave ID;</li> <li>• mode: Control mode, 0-Position mode, 1-Speed mode.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                |

**AuxServoHoming: Set 485 extension axis return to zero mode**

Table 3-138 Detailed Parameters of AuxServoHoming

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | AuxServoHoming(servoid, mode, searchVel, latchVel)                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>  | Set 485 extension axis to zero                                                                                                                                                                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• servoid: servo drive ID, range [1-15], corresponding to slave ID;</li> <li>• mode: return to zero mode, 1- return to zero at the current position; 2-Negative limit returns to zero; 3-Positive limit return to zero;</li> <li>• searchVel: Zero return speed, mm/s or ° /s;</li> <li>• latchVel: clamp speed, mm/s or ° /s;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                             |

**AuxServoSetTarget speed: Set 485 extension axis target speed in speed mode**

Table 3-139 Detailed Parameters of AuxServoSetTarget Speed

| Attribute           | Explanation                                                                                                                                                         |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | AuxServoSetTargetSpeed(servoid, speed)                                                                                                                              |
| <b>Description</b>  | Set 485 Extended Axis Target Speed (Speed mode)                                                                                                                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• servoid: servo drive ID, range [1-15], corresponding to slave ID;</li> <li>• speed: Target speed, mm/s or ° /s.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                |

Code 3-41 Controller+Servo Drive Axis Example

1. --Controller+servo drive (position mode)
2. AuxServoSetStatusID (1) -- Set the 485 extension axis data axis number in the status feedback
3. AuxServoEnable (1,0) -- Set 485 extension axis enable, 1-servo drive ID, 0-disable
4. WaitMs (500) - Wait for 500 milliseconds
5. AuxServoEnable (1,1) -- Set 485 extension axis enable, 1-servo driver ID, 1-enable
6. WaitMs (500) -- Wait for 500 milliseconds
7. AuxServoHoming (1,1,10,10) -- Set 485 extension axis zeroing mode, 1-servo driver ID, 1-current position zeroing, 10 zeroing speed, 10 clamp speed
8. WaitMs (500) -- Wait for 500 milliseconds
9. AuxServoSetTarget Pos (1300,30) -- Set 485 Extended Axis Target Position (Position mode), 1- Servo Driver ID, 300- Target Position, 30- Target Speed
10. WaitMs (500) -- Wait for 500 milliseconds
- 11.
12. -Controller+servo drive (speed mode)
13. AuxServoSetStatusID (1) -- Set the 485 extension axis data axis number in the status feedback
14. AuxServoEnable (1,0) -- Set 485 extension axis enable, 1-servo drive ID, 0-disable
15. WaitMs (500) - Wait for 500 milliseconds
16. AuxServoSetControlmode (1,1) -- Set 485 Extended Axis Control mode, 1-Servo Driver ID, 1-Speed mode
17. WaitMs (500) -- Wait for 500 milliseconds
18. AuxServoEnable (1,1) -- Set 485 extension axis enable, 1-servo driver ID, 1-enable
19. WaitMs (500) -- Wait for 500 milliseconds
20. AuxServoHoming (1,1,10,10) -- Set 485 extension axis zeroing mode, 1-servo driver ID, 1-current position zeroing, 10 zeroing speed, 10 clamp speed
21. WaitMs (500) -- Wait for 500 milliseconds
22. AuxServoSetTarget Speed (1, 30) -- Set 485 Extended Axis Target Position (Speed mode), 1- Servo Driver ID, 30- Target Speed
23. WaitMs (500) -- Wait for 500 milliseconds

Code 3-40(continued)

### 3.4.4 Conveyor Belt

ConveyorIODetect: IO real-time detection

Table 3-140 Detailed Parameters of ConveyorIODetect

| Attribute           | Explanation                                        |
|---------------------|----------------------------------------------------|
| <b>Prototype</b>    | ConveyorIODetect(max_t)                            |
| <b>Description</b>  | Real time IO detection of conveyor belt workpieces |
| <b>Parameter</b>    | • max_t: maximum detection time, in milliseconds.  |
| <b>Return value</b> | null                                               |

### ConveyorGet RackData: Real time location detection

Table 3-141 Detailed Parameters of ConveyorGet RackData

| Attribute           | Explanation                                                               |
|---------------------|---------------------------------------------------------------------------|
| <b>Prototype</b>    | ConveyorGetTrackData(mode)                                                |
| <b>Description</b>  | Real time location detection to obtain the current status of the location |
| <b>Parameter</b>    | • mode: 1- Tracking and grasping 2- Tracking motion 3- TPD tracking.      |
| <b>Return value</b> | null                                                                      |

### ConveyorTrackStart: Enable belt tracking

Table 3-142 Detailed Parameters of ConveyorTrackStart

| Attribute           | Explanation                          |
|---------------------|--------------------------------------|
| <b>Prototype</b>    | ConveyorTrackStart(status)           |
| <b>Description</b>  | Drive belt tracking begins           |
| <b>Parameter</b>    | • status: Status, 1- Start, 0- Stop. |
| <b>Return value</b> | null                                 |

### ConveyorTrackEnd: Stop belt tracking

Table 3-143 Detailed Parameters of ConveyorTrackEnd

| Attribute          | Explanation               |
|--------------------|---------------------------|
| <b>Prototype</b>   | ConveyorTrackEnd()        |
| <b>Description</b> | Drive belt tracking stops |

|                     |      |
|---------------------|------|
| <b>Parameter</b>    | null |
| <b>Return value</b> | null |

## Code 3-42 Spray Gun Example

1. PTP (conversterstart, 30, -1,0) -- robot grasping starting point
2. While (1) do - loop capture
3.     ConveyorIODetect (10000) -- IO real-time object detection
4.     ConveyorGet RackData (1) -- Object Position Acquisition
5.     ConveyorTrackStart (1) -- Conveyor belt tracking begins
6.     Lin (cvrCatchPoint, 10, -1,0,0) -- The robot reaches the grasping point
7.     MoveGripper (1255255,010000) -- Gripping objects with grippers
8.     Lin (cvrRaisePoint, 10, -1,0,0) -- Robot lifting
9.     ConveyorTrackEnd() -- Conveyor belt tracking ends
10.    PTP (conveyor, 30, -1,0) -- robot arrives at waiting point
11.    PTP (converents, 30, -1,0) -- robot reaches placement point
12.    MoveGripper (1,0255010000) -- Gripper release
13.    PTP (conversterstart, 50, -1,0) -- The robot returns to the starting point of grasping again and waits for the next grasping
14. end -- End

### 3.4.5 Grinding equipment

#### PolishingUnloadComDriver: Unload the polishing head communication driver

Table 3-144 Detailed Parameters of PolishingUnloadComDriver

| Attribute           | Explanation                                          |
|---------------------|------------------------------------------------------|
| <b>Prototype</b>    | PolishingUnloadComDriver ()                          |
| <b>Description</b>  | Unloading of communication driver for polishing head |
| <b>Parameter</b>    | null                                                 |
| <b>Return value</b> | null                                                 |

#### PolishingLoadComDriver: Load the polishing head communication driver

Table 3-145 Detailed Parameters of PolishingLoadComDriver

| Attribute          | Explanation                                 |
|--------------------|---------------------------------------------|
| <b>Prototype</b>   | PolishingLoadComDriver ()                   |
| <b>Description</b> | Polishing head communication driver loading |

---

|                     |      |
|---------------------|------|
| <b>Parameter</b>    | null |
| <b>Return value</b> | null |

---

### PolishingDeviceEnable: Device Enable Settings

Table 3-146 Detailed Parameters of PolishingDeviceEnable

| Attribute           | Explanation                                 |
|---------------------|---------------------------------------------|
| <b>Prototype</b>    | PolishingDeviceEnable (status)              |
| <b>Description</b>  | Grinding head equipment enable              |
| <b>Parameter</b>    | • status: 0- Enable below, 1- Enable above. |
| <b>Return value</b> | null                                        |

---

### PolishingClearError: Error Clearing

Table 3-147 Detailed Parameters of PolishingClearError

| Attribute           | Explanation                                             |
|---------------------|---------------------------------------------------------|
| <b>Prototype</b>    | PolishingClearError ()                                  |
| <b>Description</b>  | Clear the error message of the polishing head equipment |
| <b>Parameter</b>    | null                                                    |
| <b>Return value</b> | null                                                    |

---

### Polishing TorqueSensorReset: Clear the polishing head force sensor to zero

Table 3-148 PolishingTorqueSensorReset Detailed Parameters

| Attribute           | Explanation                                       |
|---------------------|---------------------------------------------------|
| <b>Prototype</b>    | PolishingTorqueSensorReset ()                     |
| <b>Description</b>  | The polishing head force sensor is reset to zero. |
| <b>Parameter</b>    | null                                              |
| <b>Return value</b> | null                                              |

---

### Polishing SetTarget Velocity: Grinding Head Speed Setting

Table 3-149 Detailed Parameters of PolishingSetTarget Velocity

| Attribute          | Explanation                      |
|--------------------|----------------------------------|
| <b>Prototype</b>   | PolishingSetTargetVelocity (rot) |
| <b>Description</b> | Grinding head speed setting      |

|                     |                                        |
|---------------------|----------------------------------------|
| <b>Parameter</b>    | • rot: rotational speed, unit [r/min]. |
| <b>Return value</b> | null                                   |

### PolishingSetTarget Torque: Setting Force

Table 3-150 Detailed Parameters of PolishingSetTarget Torque

| Attribute           | Explanation                                   |
|---------------------|-----------------------------------------------|
| <b>Prototype</b>    | PolishingSetTargetTorque (setN)               |
| <b>Description</b>  | Setting the polishing head with setting power |
| <b>Parameter</b>    | • SetN: Set force, unit [N].                  |
| <b>Return value</b> | null                                          |

### Polishing SetTarget Position: Set the extension distance of the polishing head

Table 3-151 Detailed Parameters of PolishingSetTarget Position

| Attribute           | Explanation                                             |
|---------------------|---------------------------------------------------------|
| <b>Prototype</b>    | PolishingSetTargetPosition (distance)                   |
| <b>Description</b>  | Set the extension distance of the polishing head        |
| <b>Parameter</b>    | • distance: Extended distance, measured in millimeters. |
| <b>Return value</b> | null                                                    |

### Polishing Set Operation mode: Set the polishing head control mode

Table 3-152 Detailed Parameters of PolishingSetOperamode

| Attribute           | Explanation                                                       |
|---------------------|-------------------------------------------------------------------|
| <b>Prototype</b>    | PolishingSetTargetPosition (mode)                                 |
| <b>Description</b>  | Grinding head mode setting                                        |
| <b>Parameter</b>    | • mode: 1- return to zero mode, 2- Position mode, 3- Torque mode. |
| <b>Return value</b> | null                                                              |

### Polishing SetTarget Touchforce: Contact Force Settings

Table 3-153 Detailed Parameters of PolishingSetTarget TouchForce

| Attribute          | Explanation                         |
|--------------------|-------------------------------------|
| <b>Prototype</b>   | PolishingSetTargetTouchForce (conN) |
| <b>Description</b> | Contact force setting               |

|                     |                                  |
|---------------------|----------------------------------|
| <b>Parameter</b>    | • conN: Contact force, unit [N]. |
| <b>Return value</b> | null                             |

### PolishingSetTarget Touchtime: Set the force transition time setting

Table 3-154 Detailed Parameters of PolishingSetTarget TouchTime

| Attribute           | Explanation                                |
|---------------------|--------------------------------------------|
| <b>Prototype</b>    | PolishingSetTargetTouchForceTime (settime) |
| <b>Description</b>  | Set the transition time for force setting  |
| <b>Parameter</b>    | • settime: Time, unit [ms].                |
| <b>Return value</b> | null                                       |

### PolishingSetWorkPieceWeight: workpiece weight setting

Table 3-155 Detailed Parameters of PolishingSetWorkPieceWeight

| Attribute           | Explanation                          |
|---------------------|--------------------------------------|
| <b>Prototype</b>    | PolishingSetWorkPieceWeight (weight) |
| <b>Description</b>  | Workpiece weight setting             |
| <b>Parameter</b>    | • weight: Weight, unit [N].          |
| <b>Return value</b> | null                                 |

#### Code 3-43 Grinding Equipment Example

1. PolishingLoadComDriver -- Load the polishing head communication driver
2. PolishingDeviceEnable (1) -- Enable on device
3. Polishing ClearError (1) -- Clear polishing head device error messages
4. PolishingTorqueSensorReset() -- Force sensor reset to zero
5. Polishing SetTarget Velocity (500) -- Set the polishing head speed
6. Polishing Set Target Torque (10) -- Set the polishing head setting force
7. Polishing SetTarget Position (100) -- Set the extension distance of the polishing head
8. Polishing SetOperation mode (3) -- Set the polishing head control mode
9. Polishing SetTarget TouchForce (5) -- Set the contact force of the polishing head
10. Polishing SetTarget TouchTime (500) -- Set the transition time for the contact force of the polishing head
11. PolishingSetWorkPieceWeight (20) -- Set workpiece weight
12. PolishingUnloadComDriver -- Unload Grinding Head Communication Driver

### SetDFCForce: DFC grinding head settings

Table 3-156 Detailed Parameters of SetDFCForce

| Attribute           | Explanation                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetDFCForce(channel,force)                                                                                     |
| <b>Description</b>  | DFC grinding head settings                                                                                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>channel: Grinding head channel</li> <li>Set force, unit [N].</li> </ul> |
| <b>Return value</b> | null                                                                                                           |

**GetDFCState(): DFC grinding head data acquisition**

Table 3-157 Detailed Parameters of GetDFCState

| Attribute           | Explanation                                                                                                                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetDFCForce(Channel,force)                                                                                                                                                                               |
| <b>Description</b>  | DFC grinding head data acquisition                                                                                                                                                                       |
| <b>Parameter</b>    | null                                                                                                                                                                                                     |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>error: Error status, 0 - Normal, 1 - Force control limit alarm</li> <li>forceFeedback: Real-time force feedback value of the current DFC grinding head</li> </ul> |

**3.4.6 Suction cups****SetSuckerCtrl: Suction cup control instructions**

Table 3-158 Detailed Parameters of SetSuckerCtrl

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetSuckerCtrl (slaveID, len, ctrlValue)                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>  | Suction cup control instructions                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>slaveID: The suction cup number that needs to be controlled, 0-broadcast mode, occurs for all slaves, 1-20 is the corresponding slave, where 1-10 is the slave of port 1, and 11-20 is the slave of port 2</li> <li>len: If the number of consecutive writes is 0, the length is invalid</li> <li>ctrlValue: 1 - Suction according to the maximum vacuum level, 2 - Suction according to the set vacuum level, 3 - Stop suction.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

**GetSuckerState: Get the suction cup status**

Table 3-159 Detailed Parameters of GetSuckerState

| Attribute           | Explanation                                                                                                                                                                     |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ConveyorGetTrackData(slaveID)                                                                                                                                                   |
| <b>Description</b>  | Get the suction cup status                                                                                                                                                      |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• slaveID: The suction cup that needs to be controlled from the station number</li> <li>• state: Status, 1 - start, 0 - stop.</li> </ul> |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• pressValue: Current vacuum/pressure.</li> <li>• error: 0 - Normal, non 0 - Error exists.</li> </ul>                                    |

### WaitSuckerState: Wait for the suction cup to be adsorbed

Table 3-160 Detailed Parameters of WaitSuckerState

| Attribute           | Explanation                                                                                                                                                                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WaitSuckerState(slaveID, state, ms)                                                                                                                                                                                                                                           |
| <b>Description</b>  | Wait for the suction cup to be adsorbed                                                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• slaveID: The suction cup number that needs to be controlled</li> <li>• state: 0 - release object, 1 - workpiece detected, adsorb to object, 2 - not adsorbed to object, 3 - object disengaged</li> <li>• ms: Timeout time</li> </ul> |
| <b>Return value</b> | • null                                                                                                                                                                                                                                                                        |

### 3.4.7 End-effector transparent transmission

#### GetAxleGenComCycleData: Get end-cycle data

Table 3-161 Detailed Parameters of GetAxleGenComCycleData

| Attribute           | Explanation                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetAxleGenComCycleData (enable)                                                                                                                                                                                |
| <b>Description</b>  | Get end-effector cyclic data                                                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• enable: 0 - Off, 1 - On. Adapted for devices and other end-effectors with open protocol PDO object dictionary occupied.</li> </ul>                                    |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• dataBuff[128]: Returns the latest cyclic data, up to 128 bytes. Valid data displayed is returned according to the input len, with remaining data set to 0.</li> </ul> |

#### SndRcvAxleGenComCmdData: Send end-effector acyclic data

Table 3-162 Detailed Parameters of SndRcvAxleGenComCmdData

| Attribute           | Explanation                                                   |
|---------------------|---------------------------------------------------------------|
| <b>Prototype</b>    | SndRcvAxleGenComCmdData (len)                                 |
| <b>Description</b>  | Send end-effector acyclic data                                |
| <b>Parameter</b>    | • len: Length of end-effector cyclic data to be obtained.     |
| <b>Return value</b> | • rcvBuff[16]: Command response data, maximum length 16 bytes |

## Code 3-44 End-effector transparent transmission example

1. GetAxleGenComCycleData(1)
2. SndRcvAxleGenComCmdData(1,{2},1);

## 3.5 Welding instruction

### 3.5.1 Welding

#### WeldingDictcurrent: Set welding current

Table 3-163: Detailed Parameters of WeldingAKS Current

| Attribute           | Explanation                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetCurrent(ioType, current,blend,AOIndex)                                                                                                                                                                                                      |
| <b>Description</b>  | Set welding current <ul style="list-style-type: none"> <li>• ioType: Type 0- Controller IO; 1. Digital communication protocol;</li> <li>• Current: welding current value (A);</li> </ul>                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• blend: smooth, 0-not smooth, 1-smooth;</li> <li>• AOIndex: Analog output port (0-1) of welding current control box. When the mode is digital communication protocol, blend is 0 and AOIndex is 0.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                  |

#### WeldingSetvoltage: Set the welding voltage

Table 3-164 Detailed Parameters of WeldingSetVoltage

| Attribute           | Explanation                                                                                                                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetVoltage(ioType, voltage, blend ,AOIndex)                                                                                                                                                                                                                          |
| <b>Description</b>  | Set welding voltage <ul style="list-style-type: none"> <li>• ioType: Type 0- Controller IO; 1-Expand IO;</li> <li>• voltage: Welding voltage value (V);</li> </ul>                                                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• blend: smooth, 0-not smooth, 1-smooth;</li> <li>• AOIndex: Welding current control AO port (0-1). When the mode is digital communication protocol, blend is 0. When AOIndex is 0 protocol, blend is 0 and AOIndex is 0.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                        |

#### ARCStart: Start Arc

Table 3-165 ARCStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ARCStart (ioType, arcNum, timeout)                                                                                                              |
| <b>Description</b>  | Arc Initiation <ul style="list-style-type: none"> <li>• ioType: Type 0- Controller IO; 1-Expand IO;</li> </ul>                                  |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• arcNum: Welding machine configuration file number;</li> <li>• timeout:maximum waiting time.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                            |

**ARCEnd: End Arc**

Table 3-166 ARCEnd Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ARCEnd(ioType, arcNum, timeout)                                                                                                                                                                   |
| <b>Description</b>  | End Arc                                                                                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ioType: 0- Controller IO; 1-Expand IO;</li> <li>• arcNum: Welding machine configuration file number;</li> <li>• timeout:maximum waiting time.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                              |

**SetAspirated: Air supply**

Table 3-167 SetAspirated Detailed Parameters

| Attribute           | Explanation                                                                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetAspirated(ioType, airControl)                                                                                                                                        |
| <b>Description</b>  | Air supply                                                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ioType: 0- Controller IO; 1-Expand IO;</li> <li>• airControl: Air supply control 0- Stop air supply; 1. Air supply.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                    |

**SetEversewireFeed: Reverse wire feeding**

Table 3-168 SetVerseWireFeed Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetReverseWireFeed(ioType, wireFeed)                                                                                                                                        |
| <b>Description</b>  | Reverse wire feeding                                                                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ioType: 0- Controller IO; 1-Expand IO;</li> <li>• wireFeed: Wire feeding control 0- Stop wire feeding; 1. Wire feeding.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                        |

**SetForwardwireFeed: Forward Wire Feed**

Table 3-169 SetForwardWireFeed Detailed Parameters

| Attribute          | Explanation                          |
|--------------------|--------------------------------------|
| <b>Prototype</b>   | SetForwardWireFeed(ioType, wireFeed) |
| <b>Description</b> | Forward wire feeding                 |

Table 3-150(Continued)

| Attribute           | Explanation                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ioType: 0- Controller IO; 1-Expand IO</li> <li>• wireFeed: Wire feeding control 0- Stop wire feeding; 1. Wire feeding</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                      |

**WeldingSetVoltageGradualChangeStart: Set the welding voltage gradient to start.**

Table 3-170 WeldingSetVoltageGradualChangeStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetVoltageGradualChangeStart (ioType, voltageStart, voltageEnd, aoIndex, blend)                                                                                                                                                                                                                        |
| <b>Description</b>  | Set the welding voltage gradient to start.                                                                                                                                                                                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ioType: Type: 0 - Controller IO; 1 - Expansion IO;</li> <li>• voltageStart: Starting voltage, unit: V;</li> <li>• voltageEnd: Ending voltage, unit: V;</li> <li>• aoIndex: Control box AO port number (0-1);</li> <li>• blend: 0 - Not smooth, 1 - Smooth</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                          |

**WeldingSetVoltageGradualChangeEnd: Set the end of the welding voltage gradient**

Table 3-171 WeldingSetVoltageGradualChangeEnd Detailed Parameters

| Attribute           | Explanation                                 |
|---------------------|---------------------------------------------|
| <b>Prototype</b>    | WeldingSetVoltageGradualChangeEnd ( )       |
| <b>Description</b>  | Set the end of the welding voltage gradient |
| <b>Parameter</b>    | null                                        |
| <b>Return value</b> | null                                        |

**WeldingSetCurrentGradualChangeStart: Set the start of the welding current gradient**

Table 3-172 WeldingSetCurrentGradualChangeStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                               |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetCurrentGradualChangeStart (ioType, currentStart, currentEnd, aoIndex, blend)                                                                                                                    |
| <b>Description</b>  | Set the start of the welding current gradient. <ul style="list-style-type: none"> <li>• ioType: Type: 0 - Controller IO; 1 - Expansion IO;</li> <li>• currentStart: Starting current, unit: A;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• currentEnd: Ending current, unit: A;</li> <li>• aoIndex: Control box AO port number (0-1);</li> <li>• blend: 0 - Not smooth, 1 - Smooth</li> </ul>               |
| <b>Return value</b> | null                                                                                                                                                                                                      |

### WeldingSetCurrentGradualChangeEnd: Set the end of the welding current gradient.

Table 3-173 WeldingSetCurrentGradualChangeEnd Detailed Parameters

| Attribute           | Explanation                                  |
|---------------------|----------------------------------------------|
| <b>Prototype</b>    | WeldingSetCurrentGradualChangeEnd ( )        |
| <b>Description</b>  | Set the end of the welding current gradient. |
| <b>Parameter</b>    | null                                         |
| <b>Return value</b> | null                                         |

### WeaveChangeStart: Start of weaving gradient.

Table 3-174 WeaveChangeStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeaveChangeStart (weaveChangeFlag, weaveChangeNum, velStart, velEnd)                                                                                                                                          |
| <b>Description</b>  | Start of weaving gradient <ul style="list-style-type: none"> <li>• weaveChangeFlag: 1 - Change weaving parameter, 2 - Change weaving parameter + welding speed;</li> </ul>                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• weaveChangeNum: Weaving gradient number, range 0-7;</li> <li>• velStart: Weaving start speed, unit: cpm;</li> <li>• velEnd: Weaving end speed, unit: cpm;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                          |

**WeaveChangeEnd: End of weaving gradient.**

Table 3-175 WeaveChangeEnd Detailed Parameters

| Attribute           | Explanation              |
|---------------------|--------------------------|
| <b>Prototype</b>    | WeaveChangeEnd( )        |
| <b>Description</b>  | End of weaving gradient. |
| <b>Parameter</b>    | null                     |
| <b>Return value</b> | null                     |

**WeldingSetCurrertRelation: Set the relationship between welding current and output analog quantity.**

Table 3-176 WeldingSetCurrertRelation Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetCurrertRelation (currentMin, currentMax, outputVoltageMin, outputVoltageMax, AOIndex)                                                                                                                                                                                                                                                                |
| <b>Description</b>  | Set the relationship between welding current and output analog quantity. <ul style="list-style-type: none"> <li>• currentMin: Welding current - analog quantity linear relationship: current value on the left side (A);</li> <li>• currentMax: Welding current - analog quantity linear relationship: current value on the right side (A);</li> </ul>         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• outputVoltageMin: Welding current - analog quantity linear relationship: current value at the right point (A);</li> <li>• outputVoltageMax: Right-point current value (A) of the linear relationship between welding current and analog quantity.;</li> <li>• AOIndex: Welding current analog output port;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                           |

**WeldingSetVoltageRelation: Set the relationship between welding voltage and output analog quantity.**

Table 3-177 WeldingSetVoltageRelation Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                              |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetVoltageRelation (currentMin, currentMax, outputVoltageMin, outputVoltageMax, AOIndex)                                                                                                                                                                                                                                                                          |
| <b>Description</b>  | Set the relationship between welding voltage and output analog quantity. <ul style="list-style-type: none"> <li>weldVoltageMin: Welding voltage - analog output linear relationship: welding voltage value at the left point (V);</li> <li>weldVoltageMax: Welding voltage - analog output linear relationship: welding voltage value at the right point (V);</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>outputVoltageMin: Welding voltage - analog output linear relationship: analog output voltage value at the left point (V);</li> <li>outputVoltageMax: Welding voltage - analog output linear relationship: analog output voltage value at the right point (V);</li> <li>AOIndex: Welding voltage analog output port;</li> </ul>    |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                     |

### WeldingGetCurrertRelation: Get the relationship between welding current and output analog quantity

Table 3-178 WeldingGetCurrertRelation Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingGetCurrertRelation ()                                                                                                                                                                                                                                                     |
| <b>Description</b>  | Get the relationship between welding current and output analog quantity.                                                                                                                                                                                                         |
| <b>Parameter</b>    | null <ul style="list-style-type: none"> <li>currentMin: Welding current - analog quantity linear relationship: current value at the left point (A);</li> <li>currentMax: Welding current - analog quantity linear relationship: current value at the right point (A);</li> </ul> |
| <b>Return value</b> | value at the right point (A); <ul style="list-style-type: none"> <li>outputVoltageMin: Welding current - analog quantity linear relationship: current value at the right point (A).;</li> <li>AOIndex: Welding voltage analog output port;</li> </ul>                            |

### WeldingGetVoltageRelation: Retrieve the relationship between welding voltage and output analog quantity

Table 3-179 WeldingGetVoltageRelation Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingGetVoltageRelation ()                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>  | Retrieve the relationship between welding voltage and output analog quantity                                                                                                                                                                                                                                                                                                                                                            |
| <b>Parameter</b>    | null <ul style="list-style-type: none"> <li>• weldVoltageMin: The welding voltage value at the left point of the linear relationship between welding voltage and analog output voltage (A);</li> <li>• weldVoltageMax: The welding voltage value at the right point of the linear relationship between welding voltage and analog output voltage (A);</li> </ul>                                                                        |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• outputVoltageMin: The analog output voltage value at the left point of the linear relationship between welding voltage and analog output voltage (V);</li> <li>• outputVoltageMax: The analog output voltage value at the right point of the linear relationship between welding voltage and analog output voltage (V);</li> <li>• AOIndex: Analog output port for welding voltage;</li> </ul> |

**WeldingSetProcessParam: Set welding process parameter**

Table 3-180 WeldingSetProcessParam Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetProcessParam (id, startCurrent, startVolage, startTime, weldCurrent, weldVoltage, endCurrent, endVoltage, endTime)                                                                                                                                   |
| <b>Description</b>  | Set welding process parameter <ul style="list-style-type: none"> <li>• id: Welding process number;</li> <li>• startCurrent: Starting current (A);</li> <li>• startVoltage: Starting voltage (V);</li> <li>• startTime: Starting time (ms);</li> </ul>          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• weldCurrent: Welding current (A);</li> <li>• weldVoltage: Welding voltage (V);</li> <li>• endCurrent: Ending current (A);</li> <li>• endVoltage: Ending voltage (V);</li> <li>• endTime: Ending time (ms);</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                           |

**WeldingGetProcessParam: Retrieve welding process parameter**

Table 3-181 WeldingGetProcessParam Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WeldingSetProcessParam ( )                                                                                                                                                                                                                                     |
| <b>Description</b>  | Retrieve welding process parameter                                                                                                                                                                                                                             |
| <b>Parameter</b>    | null <ul style="list-style-type: none"> <li>• id: Welding process number;</li> <li>• startCurrent: Starting current (A);</li> <li>• startVoltage: Starting voltage (V);</li> <li>• startTime: Starting time (ms);</li> </ul>                                   |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• weldCurrent: Welding current (A);</li> <li>• weldVoltage: Welding voltage (V);</li> <li>• endCurrent: Ending current (A);</li> <li>• endVoltage: Ending voltage (V);</li> <li>• endTime: Ending time (ms);</li> </ul> |

## Code 3-45 Welding Example

```

1. --Controller IO soldering
2. WellIOType=0 -- Set mode controller IO
3. -Set current and voltage
4. WeldingDictCurrent (weldIOType, 2,1,0) -- Current setting, 2-Welding voltage 2A,
   1-Welding current control AO port 1,0- Non smooth
5. WeldSetVoltage (weldIOType, 2,1,0) -- Voltage setting, 2-Welding voltage 2A, 1-Welding
   current control AO port 1,0- Non smooth
6. -- Move to the starting point of welding
7. PTP(multilinesafe,10,-1,0)
8. PTP(multilineorigin1,10,-1,0)
9. --Start an arc
10. ARCStart (weldIOType, 01000) -- arc start, weldIOType - controller IO mode, 0-welding
   process number 01000-maximum waiting time 1000ms
11. Lin(DW01,100,-1,0,0);
12. ARCEnd (weldIOType, 01000) -- arc extinguishing, weldIOType - controller IO mode,
   0-welding process number 01000-maximum waiting time 1000ms
13. --Air supply
14. SetAspirated (wellIOType, 1) -- Air supply, wellIOType - Controller IO mode, 1-On
15. Lin(DW01,100,-1,0,0);
16. SetAspirated (wellIOType, 0) -- Stop gas, wellIOType - Controller IO mode, 0-Stop
17. WaitMs (1000) - Wait for 1000 milliseconds
18. --Forward wire feeding
19. SetForwardWireFeed (wellIOType, 1) -- Forward wire feeding, wellIOType - Controller
   IO mode, 1- Enable
20. Lin(DW01,100,-1,0,0);
21.

```

## Code 3-43(Continued)

22. SetForwardWireFeed (wellIOType, 0) -- Forward wire feeding, wellIOType - Controller IO mode, 0-Stop
23. WaitMs (1000) - Wait for 1000 milliseconds
24. --Reverse wire feeding
25. SetEverseWireFeed (wellIOType, 1) -- Reverse wire feeding, wellIOType - Controller IO mode, 1- Enable
26. Lin(DW01,100,-1,0,0);
27. SetEverseWireFeed (wellIOType, 0) --Reverse wire feeding, wellIOType - Controller IO mode, 0-Stop
28. WaitMs (1000) -- Wait for 1000 milliseconds

## Code 3-46 Welding gradient example

1. PTP(p1,100,-1,0) --Safe point
2. WeldingSetVoltage(0,20,1,0) -- Set voltage
3. WeldingSetCurrent(0,210,0,0) -- Set current
4. WeldingSetVoltageGradualChangeStart(0,20,25,1,0)--Set the start of welding voltage gradient
5. WeldingSetCurrentGradualChangeStart(0,210,265,0,0)--Set the start of welding current gradient
6. ArcWeldTraceControl(1,0,1,0.06,5,5,300,1,0.06,5,5,300,0,0,4,1,10,0,0) --Arc tracking control
7. PTP(p2,30,-1,0) -- Welding start point
8. ARCStart(0,0,10000) -- Arc initiation command
9. WeaveStart(0) -- Weaving start
10. WeaveChangeStart(2,1,12,15) -- Weaving gradient start
11. Lin(p3,1,-1,0,0) -- Move to welding end point
12. WeaveChangeEnd() -- Weaving gradient end
13. WeaveEnd(0) -- Weaving end
14. ARCEnd(0,0,10000) -- Arc termination
15. ArcWeldTraceControl(0,0,1,0.06,5,5,300,1,0.06,5,5,300,0,0,4,1,10,0,0)
16. WeldingSetCurrentGradualChangeEnd() -- Set the end of welding current gradient
17. WeldingSetVoltageGradualChangeEnd() -- Set the end of welding voltage gradient
18. PTP(p1,30,-1,0) -- Safe point
- 19.

**SetLaserWeldingStart: Turn the laser welder on and off**

Table 3-182 Detailed Parameters of SetLaserWeldingStart

| Attribute           | Explanation                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingStart(io_type, status, max_waittime)                                                                                               |
| <b>Description</b>  | Turn the laser welder on and off <ul style="list-style-type: none"> <li>• io_type: Communication type: 0-IO, 1-UDP</li> </ul>                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• status: Control Word 0-Light Collection 1-Light Emission</li> <li>• waittime: maximum latency</li> </ul> |
| <b>Return value</b> | null                                                                                                                                              |

**SetLaserWeldingEnable: Laser welding machines make it possible to...**

Table 3-183 Detailed Parameters of SetLaserWeldingEnable

| Attribute           | Explanation                                                                                                                                         |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingStart(io_type, status)                                                                                                               |
| <b>Description</b>  | Laser welding machines make it possible to...                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• io_type: Communication type: 0-IO, 1-UDP</li> <li>• status: Control Byte 0-Disabling 1-Enabling</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                |

**ResetLaserWeldingErr: Laser welding machine fault reset**

Table 3-184 Detailed Parameters of SetLaserWeldingEnable

| Attribute           | Explanation                                                                                                                                          |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ResetLaserWeldingErr(io_type, status)                                                                                                                |
| <b>Description</b>  | Laser welding machine fault reset                                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• io_type: Communication type: 0-IO, 1-UDP</li> <li>• status: Control Byte 0-Invalid 1-Fault Reset</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                 |

**GetLaserWeldingRunningState: Obtain the operating status of the laser welder**

Table 3-185 Detailed Parameters of GetLaserWeldingRunningState

| Attribute        | Explanation                          |
|------------------|--------------------------------------|
| <b>Prototype</b> | GetLaserWeldingRunningState(io_type) |

|                     |                                                 |
|---------------------|-------------------------------------------------|
| <b>Description</b>  | Obtain the operating status of the laser welder |
| <b>Parameter</b>    | • io_type: Communication type: 0-IO, 1-UDP      |
| <b>Return value</b> | • status: 0-No fault 1-Fault exists             |

**SetLaserWeldingParam: Configure the parameters of the laser welding machine**

Table 3-186 Detailed Parameters of SetLaserWeldingParam

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingParam(io_type,Num,scanSpeed,scanWidth,peakPower,dutyCycle,Freq)                                                                                                                                                                                                                                             |
| <b>Description</b>  | Write the configuration parameters for one of the 10 process groups into the laser welding machine and configure them for the machine.                                                                                                                                                                                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• io_type: Communication type: 0-IO, 1-UDP</li> <li>• Num: Process Parameter Group Number</li> <li>• scanSpeed: scanning speed,sweep speed</li> <li>• scanWidth: run-length</li> <li>• peakPower: peak power</li> <li>• dutyCycle: duty ratio</li> <li>• Freq: frequency</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                       |

**GetLaserWeldingParamTarget: Obtain the parameter set for the laser welding machine process**

Table 3-187 Detailed Parameters of GetLaserWeldingParamTarget

| Attribute           | Explanation                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetLaserWeldingParamTarget(io_type)                                                                                                                                       |
| <b>Description</b>  | Obtain the parameter set for the laser welding machine process                                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Num: Process Parameter Group Number</li> <li>• scanSpeed: scanning speed,sweep speed</li> <li>• scanWidth: run-length</li> </ul> |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• peakPower: peak power</li> <li>• dutyCycle: duty cycle, duty ratio</li> <li>• Freq: frequency</li> </ul>                         |

### GetLaserWeldingParamActual : Obtain the actual process parameters of the laser welding machine

Table 3-188 Detailed Parameters of GetLaserWeldingParamTarget

| Attribute           | Explanation                                                                                                                                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetLaserWeldingParamActual(io_type)                                                                                                                                            |
| <b>Description</b>  | Obtain the actual process parameters of the laser welding machine                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• io_type: Communication type: 0-IO, 1-UDP</li> <li>• scanSpeed: scanning speed,sweep speed</li> <li>• scanWidth: run-length</li> </ul> |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• peakPower: peak power</li> <li>• dutyCycle: duty cycle</li> <li>• Freq: frequency</li> </ul>                                          |

### SetLaserWeldingEnableExtDoNum: The laser welding machine is equipped with extended IO, and the DO port is enabled.

Table 3-189 Detailed Parameters of SetLaserWeldingEnableExtDoNum

| Attribute           | Explanation                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingEnableExtDoNum(DONum)                                                                                    |
| <b>Description</b>  | The laser welding machine supports extended DO port numbers.                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DONum: The laser welding machine supports extended DO port numbers.</li> </ul> |
| <b>Return value</b> | null                                                                                                                    |

### SetLaserWeldingStartExtDoNum: The laser welding machine is equipped with extended IO and has DO ports activated.

Table 3-190 Detailed Parameters of SetLaserWeldingEnableExtDoNum

| Attribute           | Explanation                                                                                                             |
|---------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingStartExtDoNum(DONum)                                                                                     |
| <b>Description</b>  | The laser welding machine is equipped with extended IO and has DO ports activated.                                      |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DONum: The laser welding machine supports extended DO port numbers.</li> </ul> |
| <b>Return value</b> | Null                                                                                                                    |

### SetLaserWeldingRunningStateExtDiNum: Configure the operating status (light output state) of the laser welding machine - Extended DI

Table 3-191 Detailed Parameters of SetLaserWeldingRunningStateExtDiNum

| Attribute           | Explanation                                                                                                                              |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingRunningStateExtDiNum(DINum)                                                                                               |
| <b>Description</b>  | Configure the operating status (light output state) of the laser welding machine - Extended DI                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>DINum: Laser welding machine operating status (light emission status) extended DI port</li> </ul> |
| <b>Return value</b> | null                                                                                                                                     |

### SetLaserWeldingErrStateExtDiNum : Configuration of the Fault Status Extension DI for Laser Welding Machines

Table 3-192 Detailed Parameters of SetLaserWeldingErrStateExtDiNu

| Attribute           | Explanation                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | SetLaserWeldingErrStateExtDiNum(DINum)                                                                         |
| <b>Description</b>  | Configuration of the Fault Status Extension DI for Laser Welding Machines                                      |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>DINum: Laser welding machine fault status - Extended DI port</li> </ul> |
| <b>Return value</b> | Null                                                                                                           |

#### Code 3-47 LasterWelding Example

1. GetLaserWeldingParamActual(1)
2. SetLaserWeldingParam(1,1,2000,3,1500,100,1000)
3. Lin(p1,100,-1,0,1,0,0,0,0,0,0,0,100,200)
4. SetLaserWeldingStartEnd(1,1,10000)
5. Lin(p2,100,-1,0,1,0,0,0,0,0,0,0,100,200)
6. SetLaserWeldingStartEnd(1,0,10000)
7. Lin(p3,100,-1,0,1,0,0,0,0,0,0,0,100,200)

### 3.5.2 Arc Tracking

#### ArcWeldTraceControl: Arc Tracking Control

Table 3-193 Detailed Parameters of ArcWeldTraceControl

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ArcWeldTraceControl(flag, delaytime, isLeftRight, klr, tStartLr, stepmaxLr, summaxLr, isUpLow, kud, tStartUd, stepmaxUd, summaxUd, axisSelect, referenceType, referSampleStartUd, referSampleCountUd, referenceCurrent)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>  | <p>Arc tracking control</p> <ul style="list-style-type: none"> <li>• flag: switch, 0-off; 1- Open;</li> <li>• delaytime: Lag time, in milliseconds;</li> <li>• isLeftRight: Left and right deviation compensation 0-off, 1-on;</li> <li>• klr: left and right adjustment coefficient (sensitivity);</li> <li>• tStartLr: Start compensating for time cyc on both sides;</li> <li>• stepmaxLr: maximum compensation amount in millimeters for each left and right operation;</li> <li>• summaxLr: maximum compensation amount on both sides in millimeters;</li> <li>• IsUpLow: Up and down deviation compensation 0-off, 1-on;</li> <li>• kud: Up and down adjustment coefficient (sensitivity);</li> <li>• tStartUd: Start compensating time cyc from top to bottom;</li> <li>• stepmaxUd: maximum compensation amount in mm for each up and down step;</li> <li>• summaxUd: themaximum compensation amount for the upper and lower totals;</li> <li>• axisSlect: selection of upper and lower coordinate systems, 0-swing; 1. Tools; 2-Base;</li> <li>• referenceType: Upper and lower reference current setting method, 0-feedback; 1- Constant;</li> <li>• referSampleStartUd: Start counting of upper and lower reference current sampling (feedback), cyc;</li> <li>• referSampleCountUd: Up and down reference current sampling cycle count (feedback), cyc;</li> <li>• referenceCurrent: Upper and lower reference currents in mA.</li> </ul> |
| <b>Parameter</b>    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

#### ArcWeldTraceReplayStart: Arc tracking with multi-layer and multi-channel compensation enabled

Table 3-194 Detailed Parameters of ArcWeldTraceReplayStart

| Attribute           | Explanation                                                            |
|---------------------|------------------------------------------------------------------------|
| <b>Prototype</b>    | ArcWeldTraceReplayStart ( )                                            |
| <b>Description</b>  | Arc tracking with multi-layer and multi-channel compensation activated |
| <b>Parameter</b>    | null                                                                   |
| <b>Return value</b> | null                                                                   |

### ArcWeldTraceReplayEnd:

Table 3-195 Detailed Parameters of ArcWeldTraceReplayEnd

| Attribute           | Explanation                                                           |
|---------------------|-----------------------------------------------------------------------|
| <b>Prototype</b>    | ArcWeldTraceReplayEnd ( )                                             |
| <b>Description</b>  | Arc tracking with multi-layer and multi-channel compensation shutdown |
| <b>Parameter</b>    | null                                                                  |
| <b>Return value</b> | null                                                                  |

### MultiplayerOffsetTrsfToBase: Offset coordinate variation - multi-layer and multi pass welding

Table 3-196 Detailed Parameters of MultiplayerOffsetTrsfToBase

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MultiplayerOffsetTrsfToBase (pointO.x, pointO.y, pointO.z, pointX.x, pointX.y, pointX.z, pointZ.x, pointZ.y, pointZ.z, dx, dy, dry)                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>  | Offset coordinate change - multi-layer and multi pass welding                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• pointO. x, pointO. y, pointO. z: Cartesian pose of reference point O;</li> <li>• pointX. x, pointX. y, pointX. z: Cartesian pose of the reference point offset in the X direction;</li> <li>• pointZ. x, pointZ. y, pointZ. z: Cartesian pose of the reference point Z offset direction;</li> <li>• dx: x-direction offset, unit [mm];</li> <li>• dy: x-direction offset, unit [mm];</li> <li>• dry: offset around the y-axis, unit [° ].</li> </ul> |
| <b>Return value</b> | offset_x, offset_y, offset_z, offset_rx, offset_ry, offset_rz: offset amount                                                                                                                                                                                                                                                                                                                                                                                                                  |

#### Code 3-48 Example of Arc Tracking

1. --Move to the starting point of welding
2. PTP(multilinesafe,10,-1,0)
3. PTP(multilineorigin1,10,-1,0)
- 4.

Code 3-7 44(continued)

5. --Welding (first position)
6. ARCStart(1,0,3000)
7. WeaveStart(0)
8. ArcWeldTraceControl(1,0,1,0.06,5,5,50,1,0.06,5,5,55,0,0,4,1,10)
9. Lin(multilineorigin2,1,-1,0,0)
10. ArcWeldTraceControl(0,0,1,0.06,5,5,50,1,0.06,5,5,55,0,0,4,1,10)

11. WeaveEnd(0)
12. ARCEnd(1,0,3000)
13. PTP(multilinesafe,10,-1,0)
14. Pause (0) -- No function
15. --Welding (second position)
16. Offset\_x, offset\_y, offset\_z, offset\_rx, offset\_ry, offset\_rz=MultiplayerOffsetTrsfToBase (multilineorigin1, multilineX1, multilineZ1, 10,0,0) -- offset coordinate change - multi-layer and multi pass welding
17. PTP(multilineorigin1,10,-1,1, offset\_x,offset\_y,offset\_z,offset\_rx,offset\_ry,offset\_rz)
18. ARCStart(1,0,3000)
- 19.
20. Offset\_x, offset\_y, offset\_z, offset\_rx, offset\_ry, offset\_rz=MultiplayerOffsetTrsfToBase (multilineorigin2, multilineX2, multilineZ2, 10,0,0) - offset coordinate change - multi-layer and multi pass welding
21. ArcWeldTraceReplayStart() -- Arc tracking with multi-layer and multi-channel compensation enabled
22. Lin(multilineorigin2,2,-1,0,1, offset\_x,offset\_y,offset\_z,offset\_rx,offset\_ry,offset\_rz)
23. ArcWeldTraceReplayEnd() -- Arc tracking with multi-layer and multi-channel compensation closed
24. ARCEnd(1,0,3000)
25. PTP(multilinesafe,10,-1,0)
26. Pause (0) -- No function
- 27.
28. --Welding (third position)
29. Offset\_x, offset\_y, offset\_z, offset\_rx, offset\_ry, offset\_rz=MultiplayerOffsetTrsfToBase (multilineorigin1, multilineX1, multilineZ1,0,10,0) - offset coordinate change - multi-layer and multi pass welding
30. PTP(multilineorigin1,10,-1,1, offset\_x,offset\_y,offset\_z,offset\_rx,offset\_ry,offset\_rz)
31. ARCStart(1,0,3000)
32. Offset\_x, offset\_y, offset\_z, offset\_rx, offset\_ry, offset\_rz=MultiplayerOffsetTrsfToBase (multilineorigin2, multilineX2, multilineZ2,0,10,0) - offset coordinate change - multi-layer and multi pass welding
33. ArcWeldTraceReplayStart() -- Arc tracking with multi-layer and multi-channel

|                                                                                                    |
|----------------------------------------------------------------------------------------------------|
| compensation enabled                                                                               |
| 34. Lin(multilineorigin2,2,-1,0,1, offset_x,offset_y,offset_z,offset_rx,offset_ry,offset_rz)       |
| 35. ArcWeldTraceReplayEnd() -- Arc tracking with multi-layer and multi-channel compensation closed |
| 36. ARCEnd(1,0,3000)                                                                               |
| 37. PTP(multilinesafe,10,-1,0)                                                                     |

### 3.5.3 Laser Tracking

Laser tracking requires sensor loading, sensor activation, laser tracking, data recording, sensor point movement, and positioning commands to be completed together.

#### LoadPosSensorDriver: Sensor loading

Table 3-197: Detailed Parameters of LoadPosSensorDriver

| Attribute           | Explanation                                                                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | LoadPosSensorDriver (choiceid)                                                                                                                                                                                              |
| <b>Description</b>  | Sensor function selection loading                                                                                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>choiceid: Function Number, 101- Ruiniu RRT-SV2-BP, 102- Chuangxiang CXZK-RBTA4L, 103- Full Vision FV-160G4-WD-PP-RL, 104- Tongzhou Laser Sensor, 105- Aotai Laser Sensor.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                        |

#### UnloadPosSensorDriver: Sensor Unloading

Table 3-198 Detailed Parameters of UnloadPosSensorDriver

| Attribute           | Explanation                                                                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | UnloadPosSensorDriver (choiceid)                                                                                                                                                                                            |
| <b>Description</b>  | Sensor function selection uninstallation                                                                                                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>choiceid: Function Number, 101- Ruiniu RRT-SV2-BP, 102- Chuangxiang CXZK-RBTA4L, 103- Full Vision FV-160G4-WD-PP-RL, 104- Tongzhou Laser Sensor, 105- Aotai Laser Sensor.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                        |

#### LTLaserOn: Turn on the sensor

Table 3-199 Detailed Parameters of LTLaserOn

| Attribute           | Explanation                                                                                                                                                                                                                                             |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | LTLaserOn (Taskid)                                                                                                                                                                                                                                      |
| <b>Description</b>  | Open the sensor                                                                                                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>Taskid: Select the weld type (Ruiniu RRT-SV2-BP, Chuangxiang CXZK-RBTA4L), choose the task number (Full View FV-160G4-WD-PP-RL, Aotai Laser Sensor), and select the solution (Tongzhou Laser Sensor).</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                    |

**LTLaserOff: Turn off the sensor**

Table 3-200 Detailed Parameters of LTLaserOff

| Attribute           | Explanation         |
|---------------------|---------------------|
| <b>Prototype</b>    | LTLaserOff ()       |
| <b>Description</b>  | Turn off the sensor |
| <b>Parameter</b>    | null                |
| <b>Return value</b> | null                |

**LTTrackOn: Start Tracking**

Table 3-201 Detailed Parameters of LTTrackOn

| Attribute           | Explanation                                                                       |
|---------------------|-----------------------------------------------------------------------------------|
| <b>Prototype</b>    | LTTrackOn (toolid)                                                                |
| <b>Description</b>  | Start tracking                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>toolid: Coordinate system name.</li> </ul> |
| <b>Return value</b> | null                                                                              |

**LTTrackOff: Turn off tracking**

Table 3-202 LTTrackOff Detailed Parameters

| Attribute           | Explanation    |
|---------------------|----------------|
| <b>Prototype</b>    | LTTrackOff ()  |
| <b>Description</b>  | Close Tracking |
| <b>Parameter</b>    | null           |
| <b>Return value</b> | null           |

**LaserSensorRecord: Data Recording**

Table 3-178(Continued)

Table 3-203: Detailed Parameters of LaserSensorRecord

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | LaserSensorRecord (status , delayMode, delayTime, delayDisExAxisNum, delayDis, sensitivePara, trackMode, triggerMode, runtime, speed)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>  | data record                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• status: Function selection, 0-stop recording, 1-real-time tracking, 2-start recording, 3-trajectory reproduction (when selecting trajectory reproduction, laser tracking reproduction can be selected), 4-reproduction while recording;</li> <li>• delayMode: Data processing mode, 0 - delay time, 1 - delay distance;</li> <li>• delayTime: The time from the starting point of the laser sensor to the robot welding torch is measured in ms</li> <li>• delayDisExAxisNum: The delay distance corresponds to the external axis number, according to the bital notation;</li> <li>• delayDis: The distance from the starting point of the laser sensor to the welding torch, unit mm/°;</li> <li>• sensitivePara: Compensation sensitivity coefficient, range (0-1);</li> <li>• trackMode: Fixed-point tracking type, 0-Extended axis 1-1 movement, 1-robot;</li> <li>• triggerMode: Fixed-point tracking trigger mode: 0-tracking duration, 1-IO;</li> <li>• runTime: Robot fixed-point tracking time, unit s;</li> <li>• speed: Percentage of robot motion speed;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

**MoveLTR: Laser Tracking Reproduction**

Table 3-204 Detailed Parameters of MoveLTR

| Attribute           | Explanation                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MoveLTR ( )                                                                                                                |
| <b>Description</b>  | Laser tracking reproduction (this command can only be used after selecting the trajectory reproduction for data recording) |
| <b>Parameter</b>    | null                                                                                                                       |
| <b>Return value</b> | null                                                                                                                       |

**LTSearchStart: Start location search**

Table 3-205 LTSearchStart Detailed Parameters

| Attribute          | Explanation                                                           |
|--------------------|-----------------------------------------------------------------------|
| <b>Prototype</b>   | LTSearchStart (refdirection, refdpion, ovl, length, max_time, toolid) |
| <b>Description</b> | Start searching for location                                          |

|                     |                                                                                                                                               |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | • refdirection: direction, 0-+x, 1-x, 2-+y, 3-y, 4+z, 5-z, 6-specified direction (custom reference point direction);                          |
|                     | • refdpiont: Direction point. When the direction is 6, the direction point needs to be specified, while others default to {0, 0, 0, 0, 0, 0}; |
|                     | • ovl: Speed percentage, unit [%];                                                                                                            |
|                     | • rength: length, unit [mm];                                                                                                                  |
|                     | • max_time: maximum positioning time, unit [ms];                                                                                              |
|                     | • roolid: Coordinate system name.                                                                                                             |
| <b>Return value</b> | null                                                                                                                                          |

### LTSearchStop: Stop locating

Table 3-206 LTSearchStop Detailed Parameters

| Attribute           | Explanation      |
|---------------------|------------------|
| <b>Prototype</b>    | LTSearchStop ( ) |
| <b>Description</b>  | Stop locating    |
| <b>Parameter</b>    | null             |
| <b>Return value</b> | null             |

### MoveStationary: In-situ planning interpolation and filling instructions

Table 3-207 MoveStationary Detailed Parameters

| Attribute           | Explanation                                             |
|---------------------|---------------------------------------------------------|
| <b>Prototype</b>    | MoveStationary ( )                                      |
| <b>Description</b>  | In-situ planning interpolation and filling instructions |
| <b>Parameter</b>    | null                                                    |
| <b>Return value</b> | null                                                    |

### Code 3-49 Laser Tracking Example

1. LoadPosSensorDriver (101) -- Load Sensor Driver
2. LTLaserOn (1) -- Turn on the sensor
3. LTTrackOn (1) -- Start Tracking
4. LaserSensorRecord(2,0,10,1,0,0.1,0,0,10,100) -- Record data
5. LTSearchStart (0, 0, 50, 100, 5000, 1) -- Find Position
6. MoveLTR() -- Laser Tracking Reproduction
7. LTSearchStop() -- Stop finding
8. LTTrackOff () -- Turn off tracking
9. LTLaserOff() -- Turn off sensor
10. --Uninstall sensor driver

|                                |
|--------------------------------|
| 11. UnloadPosSensorDriver(101) |
|--------------------------------|

### 3.5.4 Laser Recording

The laser recording instruction realizes the function of extracting the starting and ending points of laser tracking recording, allowing the robot to automatically move to the starting position. It is suitable for situations where the robot starts moving from the outside of the workpiece and performs laser tracking recording. At the same time, the upper computer can obtain information about the starting and ending points in the recorded data for subsequent movements.

#### MoveToLaserRecordStart: Move to the starting point of the weld seam

Table 3-208 Detailed Parameters of MoveToLaserRecordStart

| Attribute           | Explanation                                 |
|---------------------|---------------------------------------------|
| <b>Prototype</b>    | MoveToLaserRecordStart ( )                  |
| <b>Description</b>  | Move to the starting point of the weld seam |
| <b>Parameter</b>    | null                                        |
| <b>Return value</b> | null                                        |

#### MoveToLaserRecordEnd: Move to the end point of the weld seam

Table 3-209 Detailed Parameters of MoveToLaserRecordEnd

| Attribute           | Explanation                                 |
|---------------------|---------------------------------------------|
| <b>Prototype</b>    | MoveToLaserRecordEnd ( )                    |
| <b>Description</b>  | Move to the starting point of the weld seam |
| <b>Parameter</b>    | null                                        |
| <b>Return value</b> | null                                        |

#### Code 3-50 Laser Recording Example

- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1. Lin (recordStartPt, 100, -1,0,0) -- Move to the starting position of the weld seam</li> <li>2. LaserSensorRecord(2,0,10,1,0,0.1,0,0,10,100) -- Record the starting point of the weld seam</li> <li>3. Lin (recordEndPt, 100, -1,0,0) -- Move to the end position of the weld seam</li> <li>4. LaserSensorRecord(0,0,10,1,0,0.1,0,0,10,100) -- Record the end point of the weld seam</li> <li>5. MoveToLaserRecordStart (1,30) -- Move to the welding start point</li> <li>6. ARCStart (0,01000) - Start Arc</li> </ol> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

7. LaserSensorRecord(3,0,10,1,0,0.1,0,0,10,10)-- Weld seam trajectory reproduction
8. MoveLTR() -- Linear movement of weld seam
9. ARCEnd (0,01000) -- Arc off
10. MoveToLaserRecordEnd (1,30) -- Move to the welding end point

### 3.5.5 Wire positioning

The welding wire positioning instruction is generally applied in welding scenarios, requiring a combination of welding machine and robot IO and motion instructions.

#### WireSearchStart: Wire positioning begins

Table 3-210 WireSearchStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WireSearchStart (refPos, searchVel, searchDis, autoBackFlag, autoBackVel, autoBackDis, effectFlag)                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>  | Wire positioning begins                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• pedlocation: whether the reference position has been updated, 0-no update, 1-update;</li> <li>• searchVel: Search speed%;</li> <li>• searchDis: Positioning distance mm;</li> <li>• autoBackflag: Automatic return flag, 0- Not automatic- Automatic;</li> <li>• autoBackvel: Automatic return speed%;</li> <li>• autoBackDis: automatically returns distance in mm;</li> <li>• effectflag: 1- Positioning with offset; 2. Find the teaching point location.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

#### WireSearchEnd: End of wire positioning

Table 3-211 WireSearchEnd Detailed Parameters

| Attribute          | Explanation                                                                                                                                                                                                                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | WireSearchEnd (refPos, searchVel, searchDis, autoBackFlag, autoBackVel, autoBackDis, effectFlag)                                                                                                                                                                                                          |
| <b>Description</b> | Wire positioning completed                                                                                                                                                                                                                                                                                |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• pedlocation: whether the reference position has been updated, 0-no update, 1-update;</li> <li>• searchVel: Search speed%;</li> <li>• searchDis: Positioning distance mm;</li> <li>• autoBackflag: Automatic return flag, 0- Not automatic- Automatic;</li> </ul> |

| Attribute           | Explanation                                                                                                                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | <ul style="list-style-type: none"> <li>• autoBackvel: Automatic return speed%;</li> <li>• autoBackDis: automatically returns distance in mm;</li> <li>• effectflag: 1- Positioning with offset; 2. Find the teaching point location.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                            |

### GetWireSearchoffset: Calculate the offset of wire positioning

Table 3-212: Detailed Parameters of GetWireSearchOffset

| Attribute           | Explanation                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetWireSearchOffset (seamType, method, varNameRef, varNameRes)                                                                                                                                                                                                                         |
| <b>Description</b>  | Calculate the offset of welding wire positioning                                                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• seamType: Weld seam type;</li> <li>• method: Calculation method;</li> <li>• varNameRef: Benchmarks 1-6, "#" represents a non-point variable;</li> <li>• varNameRes: Contact points 1-6, where "#" represents a non-point variable.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                   |

### WireSearchWait: Waiting for the completion of wire positioning

Table 3-213 Set PointToDatabase Detailed Parameters

| Attribute           | Explanation                                                                                      |
|---------------------|--------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | WireSearchWait(varname)                                                                          |
| <b>Description</b>  | Waiting for the completion of wire positioning                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• varname: Contact point names "RES0"~"RES99".</li> </ul> |
| <b>Return value</b> | null                                                                                             |

### Set PointToDatabase: Writing wire positioning contact points into the database

Table 3-214 Set PointToDatabase Detailed Parameters

| Attribute          | Explanation                                                                                      |
|--------------------|--------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | SetPointToDatabase (varName, pos)                                                                |
| <b>Description</b> | Write the contact point of welding wire positioning into the database                            |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• varname: Contact point names "RES0"~"RES99";</li> </ul> |

- pos: Contact point data x, y, x, a, b, c.

**Return value** null

#### Code 3-51 Welding Wire Positioning Example

```

1. WireSearchStart (1,10300,10,0) -- Wire positioning begins
2. Lin (2dx1,10,0,0,0) -- Starting point of positioning reference point
3. Lin (2dx2,10,0,1,0) -- Positioning reference point direction point
4. WireSearchWait ("REF0") -- Wait for wire positioning to be completed
5. Lin (2dy1,10,0,0,0) -- Starting point of positioning reference point
6. Lin (2dy2,10,0,1,0) -- Positioning reference point direction point
7. WireSearchWait ("REF1") -- Wait for wire positioning to be completed
8. WireSearchEnd (1,10300,10,0) -- End of wire positioning
9. WireSearchStart(0,10,300,1,10,10,0)
10. Lin (2dx1,10,0,0,0) -- Positioning starting point
11. Lin (2dx2,10,0,1,0) -- Positioning direction point
12. WireSearchWait("RES0")
13. Lin (2dy1,10,0,0,0) -- Positioning starting point
14. Lin (2dy2,10,0,1,0) -- Positioning direction point
15. WireSearchWait("RES1")
16. WireSearchEnd(0,10,300,1,10,10,0)
17. F1, x1, y1, z1, a1, b1, c1=GetWireSearchOffset (0,1, "REF0", "REF1", "#", "#", "#",
    "RES0", "RES1", "#", "#", "#", "#") -- Calculate the positioning offset
18. RegisterVar("number","f1")
19. RegisterVar("number","x1")
20. RegisterVar("number","y1")
21. RegisterVar("number","z1")
22. RegisterVar("number","a1")
23. RegisterVar("number","b1")
24. RegisterVar("number","c1")
25. PointsOffsetEnable (f1, x1, y1, z1, a1, b1, c1) -- Motion offset
26. Lin(test1,10,0,0,0)
27. Lin(test2,10,0,0,0)
28. PointsOffsetDisable()

```

### 3.5.6 Attitude Adjustment

#### PostureAdjustOn: Enable posture adjustment

Table 3-215 PostureAdjustOn Detailed Parameters

| Attribute | Explanation |
|-----------|-------------|
|-----------|-------------|

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | PostureAdjustOn (plate_type, direction_type={PosA, PosB, PosC}, time, paDisatance_1, inflection_type, paDisatance_2, paDisatance_3 , paDisatance_4, paDisatance_5)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>  | Enable posture adjustment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• plate_date: Plate type, 0-corrugated board, 1-corrugated board, 2-fence board, 4-corrugated shell steel</li> <li>• direction-type: direction of motion, from left to right (direction-type is PosA, PosB, PosC), from right to left (direction-type is PosA, PosC, PosB)</li> <li>• time: Attitude adjustment time, unit [ms];</li> <li>• paDisatance_1: length of the first segment, unit [mm];</li> <li>• inflection type: inflection point type, 0- from top to bottom, 1- from bottom to top;</li> <li>• paDisatance_2: Second segment length, unit [mm];</li> <li>• paDisatance3: Third segment length, unit [mm];</li> <li>• paDisatance4: Fourth segment length, unit [mm];</li> <li>• paDisatance_5: Fifth segment length, unit [mm].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

### PostureAdjustOff: Turn off posture adjustment

Table 3-216 PostureAdjustOff Detailed Parameters

| Attribute           | Explanation              |
|---------------------|--------------------------|
| <b>Prototype</b>    | PostureAdjustOff ( )     |
| <b>Description</b>  | Close posture adjustment |
| <b>Parameter</b>    | null                     |
| <b>return value</b> | null                     |

#### Code 3-52 Attitude Adjustment Example

1. --Enable posture adjustment
2. PostureAdjustOn(0, PosA,PosB,PosC,1000,100,0,100,100,100,100)
- 3.
4. PTP(DW01,100,10,0)
5. --Close posture adjustment
6. PostureAdjustOff()

### 3.6 Force Control Command

#### 3.6.1 Force Control Set

##### FT\_Guard: Collision Detection

Table 3-217 FT\_Guard Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FT_Guard (flag, tool_id, select_Fx, select_Fy, select_Fz, select_Tx, select_TY, select_Tz, value_Fx, value_Fy, value_Fz, value_Tx, value_TY, value_Tz, max_threshold_Fx,max_threshold_Fy,max_threshold_Fz,max_threshold_Tx, max_threshold_Ty,max_threshold_Tz, min_threshold_Fx, min_threshold_Fy, min_threshold_Fz, min_threshold_Tx, min_threshold_Ty, min_threshold_Tz)                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>  | collision detection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>•flag: Torque activation flag, 0-disable collision protection, 1-enable collision protection;</li> <li>• Tool_i: Coordinate system name;</li> <li>• Select_fx~select_Tz: Select whether to detect collisions in six degrees of freedom, 0-no detection, 1-detection, select_Tx is set to not select;</li> <li>• value_Sx~value_Tz: The current values of the six degrees of freedom, with value_Tx set to 0;</li> <li>•max_threshord_FX~max_threshord_Tz: maximum threshold for six degrees of freedom, with max_threshord_Tx set to 0;</li> <li>• Min_threshold_fx~min_threshold_Tz: The minimum threshold for six degrees of freedom, with min_threshold_Tx set to 0.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

##### FT\_Control: Constant Force Control

Table 3-218 FT\_Control Detailed Parameters

| Attribute        | Explanation                                                                                                                                                                                            |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b> | FT_Control (flag, sensor_num, select, force_torque, gain, adj_sign, ILC_sign,max_dis,max_ang, polishRadio, filter_Sign, posAdapt_sign, M0,M1,B0,B1, Threshold1, Threshold2, adjustCoeff1,adjustCoeff2, |

Table 3-172 (Continued)

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | isNoBlock)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>  | Hengli Control                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• flag: Constant force control on flag, 0-off, 1-on;</li> <li>• Sensor_num: force sensor number;</li> <li>• Select: Check if the six degrees of freedom detect fx, fy, fz, mx, my, mz, 0-inactive, 1-active;</li> <li>• Force_torque: detects force/torque, in N or Nm;</li> <li>• gain: f_p, f_i,f_d,m_p,m_i,m_d, Force PID Parameters, torque PID Parameters;</li> <li>• Add_sign: adaptive start stop state, 0-off, 1-on;</li> <li>• ILC_sign: ILC controls start stop status, 0-stop, 1-training, 2-practical operation;</li> <li>• MAX-DIS: maximum adjustment distance;</li> <li>• max_ang: maximum adjustment angle.</li> <li>• polishRadio: Radius of grinding wheel (optional);</li> <li>• filter_Sign: Filter on flag;</li> <li>• posAdapt_sign: The gesture is a sign of the opening;</li> <li>• M0: rx inertia coefficient, range [0.1,10], default value 2</li> <li>• M1: The inertia coefficient of the IR, ranging from [0.1, 10], with a default value of 2.;</li> <li>• B0: rx damping coefficient, range [0.1,50], default value 8</li> <li>• B1: ry damping coefficient of ry ranges from [0.1, 50] and defaults to 8.</li> <li>• Threshold1: rx startup threshold, range [0, 10], default value 0.2;</li> <li>• Threshold2: ry startup threshold, range [0, 10], default value 0.2;</li> <li>• adjustCoeff1:rx Torque adjustment coefficient, range [0, 1], default value 1;</li> <li>• adjustCoeff2:ry Torque adjustment coefficient, range [0, 1], default value 1;</li> <li>• isNoBlock: 0-blocked; 1-not blocked</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

### FT\_Spiralsearch: Spiral Insertion

Table 3-219 FT\_SpiralSearch Detailed Parameters

| Attribute          | Explanation                                                                                                                                                                                                                                       |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | FT_SpiralSearch(rcs, dr,ft ,max_t_ms,max_vel)                                                                                                                                                                                                     |
| <b>Description</b> | <p>Spiral insertion</p> <ul style="list-style-type: none"> <li>• rcs: Reference Coordinate System, 0-Tool Coordinate System, 1-Base Coordinate System</li> </ul>                                                                                  |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• dr: feed rate per circle radius, unit mm default 0.7;</li> <li>• ft: Force/torque threshold, fx,fy,fz,tx,ty,tz, Range [0~100];</li> <li>• max_t_ms:maximum exploration time, in milliseconds;</li> </ul> |

- max\_vel: maximum linear velocity, measured in millimeters per second.

**Return value** null

### FT\_ComplianceStart: Smooth control enabled

Table 3-220 FT\_ComplianceStart Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                      |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FT_ComplianceStart(p, force)                                                                                                                                                     |
| <b>Description</b>  | Smooth control enabled                                                                                                                                                           |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• p: Position adjustment coefficient or compliance coefficient;</li> <li>• force: Soft opening force threshold, in units of N.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                             |

### FT\_ComplianceStop: Smooth Control Off

Table 3-221 FT\_ComplianceStop Detailed Parameters

| Attribute           | Explanation           |
|---------------------|-----------------------|
| <b>Prototype</b>    | FT_ComplianceStop ()  |
| <b>Description</b>  | Smooth control closed |
| <b>Parameter</b>    | null                  |
| <b>Return value</b> | null                  |

### FT\_SotInsertion: Rotating Insertion

Table 3-222 Detailed Parameters of FT\_SotInsertion

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | FT_RotInsertion(rcs, angVelRot, ft,max_angle, orn,max_angAcc, rotorn)                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b> | <p>Rotating insertion</p> <ul style="list-style-type: none"> <li>• rcs: Reference coordinate system, 0-tool coordinate system, 1-base coordinate system;</li> <li>• angVelRot rotational angular velocity, unit deg/s;</li> <li>• ft: Force or torque threshold (0~100), measured in N or Nm;</li> <li>• max_angle of rotation, unit: deg;</li> </ul>                                                                            |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• orn: direction of force/torque, 1- along the z-axis direction, 2- around the z-axis direction;</li> <li>• max_angAcc: maximum rotational acceleration, unit deg/s ^ 2, not currently in use, default to 0;</li> <li>• rotorn: Rotation direction, 1- clockwise, 2- counterclockwise;</li> <li>• strategy: Handling strategy for no detection of force/moment, 0 - error, 1 -</li> </ul> |

| Attribute           | Explanation                  |
|---------------------|------------------------------|
|                     | warning to continue movement |
| <b>Return value</b> | null                         |

### FT\_LinInsertion: Linear Insertion

Table 3-223 Detailed Parameters of FT\_LinInsertion

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FT_LinInsertion(rcs, ft, lin_v, lin_a, dismax, linorn)                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>  | Straight line insertion                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• rcs: Reference coordinate system, 0-tool coordinate system, 1-base coordinate system;</li> <li>• ft: Force or torque threshold (0~100), measured in N or Nm;</li> <li>• lin-v: Linear velocity, unit mm/s, default 1;</li> <li>• lin_a: Linear acceleration, unit mm/s ^ 2, not using default 0 for now;</li> <li>• dismax: maximum insertion distance, in millimeters;</li> <li>• linorn: Insertion direction: 0-negative direction, 1-positive direction.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

### FT-FindSurface: Surface Positioning

Table 3-224 Detailed Parameters of FT\_SindSurface

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FT_FindSurface (rcs, dir, axis, lin_v, lin_a, dismax, ft)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>  | Surface positioning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• rcs: Reference coordinate system, 0-tool coordinate system, 1-base coordinate system;</li> <li>• dir: direction of movement, 1-positive direction, 2-negative direction;</li> <li>• axis: moving axis, 1-x, 2-y, 3-z;</li> <li>• lin-v: Explore linear velocity, unit mm/s defaults to 3;</li> <li>• lin_a: Explore linear acceleration, unit mm/s ^ 2 defaults to 0;</li> <li>• dismax: Large exploration distance, in millimeters;</li> <li>• ft: Action termination force threshold, in units of N.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

### FT\_CalCenterStart: Start calculating the position of the middle plane

Table 3-225 FT\_CalCenterStart Detailed Parameters

| Attribute | Explanation |
|-----------|-------------|
|-----------|-------------|

|                     |                                                            |
|---------------------|------------------------------------------------------------|
| <b>Prototype</b>    | FT_CalCenterStart ()                                       |
| <b>Description</b>  | Starting from calculating the position of the middle plane |
| <b>Parameter</b>    | null                                                       |
| <b>Return value</b> | null                                                       |

### FT\_CalCenterEnd: End of calculating the position of the middle plane

Table 3-226 FT\_CalCenterEnd Detailed Parameters

| Attribute           | Explanation                                         |
|---------------------|-----------------------------------------------------|
| <b>Prototype</b>    | FT_CalCenterEnd ()                                  |
| <b>Description</b>  | End of calculating the position of the middle plane |
| <b>Parameter</b>    | null                                                |
| <b>Return value</b> | null                                                |

### FT\_Click: Tap Force Detection

Table 3-227 FT\_Click Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FT_Click (ft, lin_v, lin_a, dismax)                                                                                                                                                                                                                                                                                        |
| <b>Description</b>  | Tap force detection                                                                                                                                                                                                                                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• ft: Force or torque threshold (0~100), measured in N or Nm;</li> <li>• lin-v: Linear velocity, unit mm/s, default 1;</li> <li>• lin_a: Linear acceleration, unit mm/s ^ 2, not using default 0 for now;</li> <li>• dismax: maximum insertion distance, in millimeters.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                       |

Code 3-53 Examples of Force Control Set in Various modes

1. --Examples of FT\_Guard instruction in various modes
2. FT\_Guard (1,1,1,1,0,0,0,5,0,0,0,0,10,0,0,0,0,0,0,5,0,0,0,0,0,0) -- Force/moment collision detection enabled
3. PTP (template1100, -1,0) -- Motion Instructions
4. FT\_Guard (0,1,1,1,0,0,0,5,0,0,0,0,10,0,0,0,0,0,0,5,0,0,0,0,0,0) -- Force/moment collision detection turned off
5. --FT\_Control, Constant Force Control
6. FT\_Control (1,11,0,1,0,0,10,5,0,0,0,0.001,0,0,0,0,0,0,0,0,0,0,0,0,5) -- Force/torque motion control enabled
7. Lin (template3100, -1,0,0) -- Motion command

8. FT\_Control (0,11,1,0,1,0,0,10,5,0,0,0,0,0.001,0,0,0,0,0,0,0,0,0,0,10,5) -- Force/torque motion control turned off
9. --FT\_Spiral, spiral insertion
10. FT\_Control (1,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,0,0,0,0,10,0) -- Force/torque enabled
11. FT\_SpiralSearch (0,0.7,060000,5) -- # Spiral Insertion

Code 3-49 (Continued)

12. FT\_Control (0,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,0,0,0,0,10,0) -- Force/torque motion control turned off
13. --FT-Rot, Rotate Insert
14. FT\_Control (1,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,0,0,0,0,10,0) - enabled
15. FT\_SotInsertion (0,3,0,5,1,0,1) -- Rotating Insertion
16. FT\_Control  
(0,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0)---turned off
17. --FT\_Lin, Linear Insertion
18. FT\_Control  
(1,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) -- enabled
19. FT\_LinInsertion(0,50,1,0100,1)--Linear Insertion
20. FT\_Control  
(0,10,0,0,1,1,0,0,0,0,5,0,0,0.0005,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) -- turned off
21. -FT\_FindSurface, surface positioning
22. PTP (1,30, -1,0) - Initial Position
23. FT FindSurface (0,1,3,0100,5- Surface localization)
24. --FT\_CalCenter, center positioning
25. PTP (1,30, -1,0) -- Initial Position
26. FT\_CalCenterStart() -- # Surface localization Start
27. FT\_Control (1,10,0,0,1,1,0,0,0,0,0, -10,0,0,0,0.00001,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) -- enabled
28. FT\_SindSurface (1,2,10,0200,5) -- Positioning Plane A  
FT\_Control (0,10,0,0,1,1,0,0,0,0,0, -10,0,0,0,0.00001,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) -- turned off
29. PTP (1,30, -1,0) - Initial Position
30. FT\_Control (1,10,0,0,1,1,0,0,0,0,0, -10,0,0,0,0.00001,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) - enabled
31. FT\_FindSurface (1,1,2,20,0200,5) -- Positioning Plane B
32. FT\_Control  
(0,10,0,0,1,1,0,0,0,0,10,0,0,0,0.00001,0,0,0,0,0,1,0,50,0,0,0,0,2,2,8,8,0.2,0.2,1,1,0) - turned off
33. Pos={ } -- Define array pos
34. Pos=FT\_CalCenterEnd() -- Obtain the Cartesian pose of the positioning center

35. MoveCart (pos, vDctualTCPNum(), vDctualWObjNum(), 30,10100, -1,0) - moves to the center position of the positioning
- 36.

### ImpedanceControlStartStop: Impedance control start-stop

Table 3-228 Detailed Parameters of ImpedanceControlStartStop

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ImpedanceControlStartStop ()                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>  | Impedance control start-stop                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• status: 0 - Off, 1 - On;</li> <li>• workSpace: 0: Joint space mode, 1: Cartesian space mode</li> <li>• m[6]: Mass Parameter;</li> <li>• b[6]: Damping parameter;</li> <li>• k[6]: Stiffness parameter;</li> <li>• maxV: Maximum linear velocity (mm/s);</li> <li>• maxVA: Maximum linear acceleration (mm/s<sup>2</sup>);</li> <li>• maxV: Maximum angular velocity (° /s);</li> <li>• maxV: Maximum angular acceleration (° / s<sup>2</sup>);</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

### 3.6.2 Torque Recording

Torque recording command, realizing real-time torque recording and collision detection function.

#### TorqueRecordStart: Torque recording begins

Table 3-229 Detailed Parameters of TorqueRecordStart

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | TorqueRecordStart (flag, negativevalues, positivevalues, collisionTime)                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b> | Torque recording start/stop                                                                                                                                                                                                                                                                                                                                                                |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• flag: Smooth selection, 0-Not smooth, 1-Smooth;</li> <li>• negativevalues: Negative thresholds for each joint {j1, j2, j3, j4, j5, j6};</li> <li>• positivevalues: Positive thresholds for each joint {j1, j2, j3, j4, j5, j6};</li> <li>• collisiontime: The duration of collision detection for each joint {j1, j2, j3, j4, j5, j6}.</li> </ul> |

| Attribute           | Explanation |
|---------------------|-------------|
| <b>Return value</b> | null        |

### TorqueRecordEnd: Torque recording stops

Table 3-230 TorqueRecordEnd Detailed Parameters

| Attribute           | Explanation              |
|---------------------|--------------------------|
| <b>Prototype</b>    | TorqueRecordEnd ( )      |
| <b>Description</b>  | Torque recording stopped |
| <b>Parameter</b>    | null                     |
| <b>Return value</b> | null                     |

### TorqueRecordReset: Torque Record Reset

Table 3-231 TorqueRecordReset Detailed Parameters

| Attribute           | Explanation           |
|---------------------|-----------------------|
| <b>Prototype</b>    | TorqueRecordReset ( ) |
| <b>Description</b>  | Reset torque record   |
| <b>Parameter</b>    | null                  |
| <b>Return value</b> | null                  |

Code 3-54 Example of torque recording

1. negativevalues = {-0.1, -0.1, -0.1, -0.1, -0.1, -0.1}
2. positivevalues = {0.1, 0.1, 0.1, 0.1, 0.1, 0.1}
3. collisionTime = {500, 500, 500, 500, 500, 500}
4. TorqueRecordStart(1, negativevalues, positivevalues, collisionTime)
5. TorqueRecordEnd()
6. WaitMs (1000) - Wait for 1000 milliseconds
7. TorqueRecordReset()

## 3.7 Packing Instruction

### 3.7.1 Matrix Movement

#### MatrixMoveStart: Matrix movement started

Table 3-232 MatrixMoveStart Detailed Parameters

| Attribute           | Explanation                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MatrixMoveStart(name, direction, speed)                                                                                              |
| <b>Description</b>  | Matrix movement started <ul style="list-style-type: none"> <li>• name: Matrix Name;</li> </ul>                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• direction: Direction: 0-move up, 1-move down;</li> <li>• speed: Debugging Speed;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                 |

#### MatrixMoveEnd: Matrix movement completed

Table 3-233 MatrixMoveStart Detailed Parameters

| Attribute           | Explanation             |
|---------------------|-------------------------|
| <b>Prototype</b>    | MatrixMoveEnd()         |
| <b>Description</b>  | Matrix movement started |
| <b>Parameter</b>    | null                    |
| <b>Return value</b> | null                    |

#### MatrixSetCountPlus: Matrix Operation Count

Table 3-234 MatrixSetCountPlus Detailed Parameters

| Attribute           | Explanation                                                              |
|---------------------|--------------------------------------------------------------------------|
| <b>Prototype</b>    | MatrixSetCountPlus(name)                                                 |
| <b>Description</b>  | Increase the matrix run count by 1 and update the current position index |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Matrix Name;</li> </ul>   |
| <b>Return value</b> | null                                                                     |

#### MatrixSetStartCount: Configuration starting count

Table 3-235 MatrixSetStartCount Detailed Parameters

| Attribute        | Explanation                                          |
|------------------|------------------------------------------------------|
| <b>Prototype</b> | MatrixSetStartCount(name,curRows,curCols,curLayers,) |

|                     |                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>  | Increase the matrix run count by 1 and update the current position index                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Matrix Name;</li> <li>• curRows: Start row ;</li> <li>• curCols: Start column;</li> <li>• curLayers: Start Layer;</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                        |

### MatrixGetCount: Get the current matrix position index

Table 3-236 MatrixGetCount Detailed Parameters

| Attribute           | Explanation                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | MatrixGetCount(name)                                                                                              |
| <b>Description</b>  | Get the current matrix position index                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• name: Matrix Name;</li> <li>• curRows: Current line ;</li> </ul>         |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• curCols: Current Column;</li> <li>• curLayers: Current Layer;</li> </ul> |

Code 3-55 Matrix movement code example

```

1. MatrixSetStartCount(matrix1,0,0,0)--Configuration starting position
2. while(1) do
3.     m,n,k=MatrixGetCount(matrix1)--Get current location
4.     if m==0 and n==0 and k == 3 then --Check if the number of layers exceeds the limit
5.         MatrixSetStartCount(matrix1,0,0,0)
6.     end
7.     MatrixMoveStart(matrix1,1,20)--Move to the transition point at matrix 1's offset
   position, then proceed to the material pickup point at a speed of 20
8.     MatrixMoveEnd()
9.     WaitMs(500)
10.    MatrixSetCountPlus(matrix1)--Offset count +1
11.    MatrixMoveStart(matrix1,0,20)--Move from the material pickup point to the transition
   point
12.    PTP(safepoint,100,-1,0)--Move to a safe location
13. end

```

## 3.8 Communication instruction

### 3.7.1 Modbus

The Modbus instruction functionality supports bus operations based on the Modbus-TCP protocol. Users can employ the relevant commands to let the robot communicate with a Modbus-TCP (or Modbus-RTU) client or server—i.e., act as master or slave—and perform read/write operations on coils, discrete inputs, and registers.

#### 3.7.1.1 Modbus-TCP

Related operation instructions for the main station:

#### Modbus MasterWriteDO: Write digital output (write coil)

Table 3-237: Detailed Parameters of Modbus MasterWriteDO

| Attribute           | Explanation                                                                                                                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWriteDO (Modbus_name, Register_name, Register_num, {Register_value})                                                                                                                                             |
| <b>Description</b>  | Modbus TCP Write Digital Output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DO Name;</li> </ul>                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_num: Number of registers;</li> <li>• { Register_value } : Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                         |

#### Modbus MasterReadDO: Read digital output (read coil)

Table 3-238: Detailed Parameters of Modbus MasterReadDO

| Attribute           | Explanation                                                                                                                               |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDO (Modbus_name, Register_name, Register_num)                                                                             |
| <b>Description</b>  | Modbus TCP Write Digital Output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers.</li> </ul>                 |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Regite_num                      |

## Modbus MasterReadDI: Read Digital Input (Read Discrete Input)

Table 3-239: Detailed Parameters of Modbus MasterReadDI

| Attribute           | Explanation                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDI (Modbus_name, Register_name, Register_num)                                                                           |
| <b>Description</b>  | Modbus TCP Read Digital Input <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DI Name;</li> <li>• Register_num: Number of registers;</li> </ul>               |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Register_num                  |

Code 3-56 Numerical Input/Output Example

1. ModbusMasterWriteDO(Modbus\_0,Register\_1,1,{1})
2. --Write digital output, Modbus 0- master station name, Register 1-DO name, 1- number of registers, {2}- Register value
3. DO\_value = ModbusMasterReadDO(Modbus\_0,Register\_1,1)
4. --Read digital output, Modbus 0- master station name, Register 1-DO name, 1- register quantity
5. DI\_value = ModbusMasterReadDI(Modbus\_0,Register\_2,1)
6. --Read digital output, Modbus 0- master station name, Register 1- DI name, 1- number of registers

## Modbus MasterWriteAO: Write analog output (hold register)

Table 3-240: Detailed Parameters of Modbus MasterWriteAO

| Attribute           | Explanation                                                                                                                                                                                                                 |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWriteAO (Modbus_name, Register_name, Register_num, {Register_value})                                                                                                                                            |
| <b>Description</b>  | Modbus TCP Write Analog Output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus</li> <li>• Register_name: AO name;</li> </ul>                                                  |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_num: Number of registers;</li> <li>• { Register_value }: Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                        |

## Modbus MasterReadAO: Read analog output (read hold register)

Table 3-241 ModbusMasterReadAO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadAO (Modbus_name, Register_name, Register_num)                                                                                                                              |
| <b>Description</b>  | Modbus TCP read analog output                                                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: AO name;</li> <li>• Register_num: Number of registers.</li> </ul> |
| <b>Return value</b> | Reg_value: Register value                                                                                                                                                                  |

### Modbus MasterReadAI: Read Analog Input (Read Input Register)

Table 3-242: Detailed Parameters of Modbus MasterReadAI

| Attribute           | Explanation                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadAI (Modbus_name, Register_name, Register_num)                                                                                                                          |
| <b>Description</b>  | Modbus TCP Read Input Register                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: AO name;</li> <li>• Register: Number of registers.</li> </ul> |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Regite_num                                                                   |

#### Code 3-57 Analog Input/Output Example

1. --Analog output settings
2. ModbusMasterWriteAO(Modbus\_0,Register\_3,1,{2})
3. --Write analog output, Modbus 0- master station name, Register 3-AO name, 1- number of registers, {2}- Register value
4. --Analog output settings
5. ModbusMasterWriteAO(Modbus\_0,Register\_3,1,{2})
6. --Write analog output, Modbus 0- master station name, Register 3-AO name, 1- number of registers, {2}- Register value
7. AO\_value = ModbusMasterReadAO(Modbus\_0,Register\_3,1)
8. --Read analog output, Modbus 0- master station name, Register 3-AO name, 1- register quantity
9. AI\_value = ModbusMasterReadAO(Modbus\_0,Register\_2,1)
10. --Read analog input, Modbus 0- master station name, Register 2-AI name, 1- register quantity

## ModbusMasterWaitDI, Waiting for analog input settings (waiting for input register values)

Table 3-243: Detailed Parameters of Modbus MasterWaitDI

| Attribute           | Explanation                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWaitDI (Modbus_name, Register_name, Waiting_state, Waiting_time)                                                                                                                                                                       |
| <b>Description</b>  | Modbus TCP waiting for analog input settings                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DI Name;</li> <li>• Waiting_state: waiting state, 1-True, 2-False;</li> <li>• Waiting_time: timeout unit [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                               |

## Modbus MasterWaitAI: Waiting for Digital Input Settings (Waiting for Discrete Input values)

Table 3-244: Detailed Parameters of Modbus MasterWaitAI

| Attribute           | Explanation                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWaitAI (Modbus_name, Register_name, Waiting_state, Register_value, Waiting_time)                                                                                                                                                                                            |
| <b>Description</b>  | Modbus TCP waits for digital input settings                                                                                                                                                                                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: AI name;</li> <li>• Waiting_state: waiting state, 1-&lt;, 2-&gt;;</li> <li>• Register_value: Register value;</li> <li>• Waiting_time: timeout [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                    |

Code 3-58 Waiting for Digital/Analog Input/Output Example

1. ModbusMasterWaitDI(Modbus\_0,Register\_0,1,1000)
2. --Modbus 0- Master Station Name, Register 0-DI Name, 1-True, 1000- Timeout Time ms
3. ModbusMasterWaitAI(Modbus\_0, Register\_2,0,13,1000)
4. --Modbus 0- Master Station Name, Register 2-DA Name, 0->, 13- Register value, 1000- Timeout Time ms

Related instructions from the station

## Modbus Slave WriteDO: Slave Digital Output Settings (Write Discrete Input)

Table 3-245: Detailed Parameters of Modbus SlaveWriteDO

| Attribute           | Explanation                                                                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWriteDO (Register_name, Register_num, {Register_value})                                                                                                                                                                                           |
| <b>Description</b>  | Modbus TCP Slave Station Write Digital Output Settings                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers;</li> <li>• {Register_value}: Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                         |

## Modbus Slave ReadDO: Read Digital Output (Read Discrete Input)

Table 3-246: Detailed Parameters of Modbus SlaveRadDO

| Attribute           | Explanation                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveReadDO (Register_name, Register_num)                                                                           |
| <b>Description</b>  | Modbus TCP reads and writes digital outputs                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers;</li> </ul> |
| <b>Return value</b> | {Register_value}: Register value, the number of register values matches the number of registers {value_1, value_2,...}    |

## Modbus Slave ReadDI: Read digital input (read coil)

Table 3-247: Detailed Parameters of Modbus SlaveReadDI

| Attribute           | Explanation                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDI (Register_name, Register_num)                                                                      |
| <b>Description</b>  | Modbus TCP slave station reads digital input                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DI Name;</li> <li>• Register: Number of registers.</li> </ul> |
| <b>Return value</b> | Reg_faluel, Reg_faluel2,...: returns the corresponding quantity of values based on the value of Regite_num            |

Code 3-59 Slave Station Digital Input/Output Settings

- |                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1. -Slave station digital output settings</li> <li>2. ModbusSlaveWriteDO(DO0,1,{2})</li> </ol> |
|---------------------------------------------------------------------------------------------------------------------------------------|

Code 3-54 (Continued)

3. -Write digital output, DO0-DO number, 1-register quantity, {2}- Register value
4. DO\_value = ModbusSlaveReadDO(DO0,1)
5. -Read digital output, DO0-DO number, 1-register quantity
- 6.
7. -Digital input settings
8. ModbusSlaveReadDI(DI1,3)
9. -Read numerical input, DI1-DI name, 3-register quantity

**Modbus SlaveWetDI: Waiting for digital input settings (waiting for coil values)**

Table 3-248: Detailed Parameters of Modbus SlaveWetDI

| Attribute           | Explanation                                                                                                                                                                                   |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWaitDI (Register_name, Waiting_state, Waiting_time)                                                                                                                                |
| <b>Description</b>  | Modbus TCP waits for digital input settings                                                                                                                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DI Name;</li> <li>• Waiting_state: waiting state, 1-Ture, 2-Flase;</li> <li>• Waiting_time: The unit of waiting time [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                          |

**ModbusSlaveWaitAI, Waiting for analog input settings (waiting to hold register values)**

Table 3-249: Detailed Parameters of Modbus SlaveWaitAI

| Attribute           | Explanation                                                                                                                                                                                                            |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWaitAI (Register_name, Waiting_state, Register_value , Waiting_time)                                                                                                                                        |
| <b>Description</b>  | Modbus TCP slave station waiting for analog input settings                                                                                                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: AI name;</li> <li>• Waiting_state: waiting state, 1-&lt;, 2-&gt;;</li> <li>• Register value: Register value;</li> <li>• Waiting_time: timeout [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                   |

Code 3-60 slave station waiting for digital/analog input settings

1. ModbusSlaveWaitDI(DI2,0,100)
2. -Waiting for numerical input settings: DI2-DI name, 0-false, 100- waiting time ms
3. ModbusSlaveWaitAI(AI1,0,12,133))
4. -AI1-AI name, 0->, 12 register value, 133 timeout time ms

## Modbus RegRead: Read Register Instruction

Table 3-250: Detailed Parameters of Modbus RegRead

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusRegRead ( fun_code, reg_add, reg_num, add, isthread )                                                                                                                                                                                                                                                                            |
| <b>Description</b>  | Read register instruction                                                                                                                                                                                                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• fun_code: Function code, 1-0x01 coil, 2-0x02 discrete quantity, 3-0x03 hold register, 4-0x04 input register;</li> <li>• reg_add: Register address;</li> <li>• reg_num: Number of registers;</li> <li>• add: Address;</li> <li>• isthread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                   |

## Modbus RegdData: Read register data

Table 3-251 Detailed Parameters of Modbus RegdData

| Attribute           | Explanation                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusRegGetData ( reg_num,isthread )                                                                                                           |
| <b>Description</b>  | Read register data                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• reg_num: Number of registers;</li> <li>• isthread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | Reg_value: array variable                                                                                                                       |

## Modbus RegWrite: Write Register

Table 3-252 Detailed Parameters of Modbus RegWrite

| Attribute          | Explanation                                                                                                                                                                                                                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | ModbusRegWrite ( fun_code, reg_add, reg_num, reg_value, add, isthread )                                                                                                                                                                                                                                                                                     |
| <b>Description</b> | Write register                                                                                                                                                                                                                                                                                                                                              |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• fun_code: function code, 5-0x05- single coil, 6-0x06- single register, 15-0x0f - multiple coils, 16-0x10- multiple registers;</li> <li>• reg_add: single coil, single register, multiple coils, multiple register addresses;</li> <li>• reg_num: Number of registers;</li> <li>• reg_value: byte array;</li> </ul> |

Table 3-214 (Continued)

| Attribute           | Explanation                                                                                                                     |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------|
|                     | <ul style="list-style-type: none"> <li>• add: Address;</li> <li>• isthread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                            |

Code 3-61 Modbus RTU Instruction Example

```

1.  addr = 0x1000
2.  val = {400, 600, 900, 700}
3.  ret = {}
4.  ModbusRegWrite(10, addr, 4, val, 1, 0)
5.  --1-0x10- Multiple registers, addr - Register address, 4- Number of registers, val- Byte
    array, 1- Address, 0- No threads applied
6.  WaitMs(10)
7.  ModbusRegRead(4, addr, 4, 1, 0)
8.  --1-0x04- Input register, addr - Register address, 4- Number of registers, 1- Address, 0- Do
    not apply thread
9.  WaitMs(10)
10. ret = ModbusRegGetData(4, 0)
11. --Read register data, 4- number of registers, 0- do not apply threads
12. WaitMs(10)
    
```

### 3. 7. 1. 1 Modbus-RTU

Related operation instructions for the main station:

#### **Modbus MasterWriteDO\_RTU: Write digital output (write coil)**

Table 3-253 Detailed Parameters of Modbus MasterWriteDO

| Attribute           | Explanation                                                                                                                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWriteDO_RTU(Modbus_name, Register_name, Register_num, {Register_value})                                                                                                                                          |
| <b>Description</b>  | Modbus RTU Write Digital Output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DO Name;</li> </ul>                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_num: Number of registers;</li> <li>• { Register_value } : Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                         |

#### **ModbusMasterReadDO\_RTU: Read digital output (read coil)**

Table 3-254 Detailed Parameters of Modbus MasterReadDO\_RTU

| Attribute           | Explanation                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDO_RTU (Modbus_name, Register_name, Register_num)                                                                                                                          |
| <b>Description</b>  | Modbus RTU Write Digital Output                                                                                                                                                            |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers.</li> </ul> |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Regite_num                                                                       |

**Modbus MasterReadDI\_RTU: Read Digital Input (Read Discrete Input)**

Table 3-255: Detailed Parameters of Modbus MasterReadDI

| Attribute           | Explanation                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDI_RTU (Modbus_name, Register_name, Register_num)                                                                                                                          |
| <b>Description</b>  | Modbus RTU Read Digital Input                                                                                                                                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DI Name;</li> <li>• Register_num: Number of registers;</li> </ul> |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Regite_num                                                                       |

Code 3-62 Numerical Input/Output Example

```

7. ModbusMasterWriteDO_RTU (Modbus_0, Register_1, 1, {1})
8. --Write digital output, Modbus 0- master station name, Register 1-DO name, 1- number of registers, {2}- Register value
9. DO_value = ModbusMasterReadDO_RTU (Modbus_0, Register_1, 1)
10. --Read digital output, Modbus 0- master station name, Register 1-DO name, 1- register quantity
11. DI_value = ModbusMasterReadDI_RTU (Modbus_0, Register_2, 1)
12. --Read digital output, Modbus 0- master station name, Register 1- DI name, 1- number of registers
    
```

**Modbus MasterWriteAO\_RTU: Write analog output (hold register)**

Table 3-256: Detailed Parameters of Modbus MasterWriteAO\_RTU

| Attribute | Explanation |
|-----------|-------------|
|-----------|-------------|

| Attribute           | Explanation                                                                                                                                                                                                                  |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWriteAO_RTU(Modbus_name, Register_name, Register_num, {Register_value})                                                                                                                                          |
| <b>Description</b>  | Modbus RTU Write Analog Output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus</li> <li>• Register_name: AO name;</li> </ul>                                                   |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_num: Number of registers;</li> <li>• { Register_value } : Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                         |

**ModbusMasterReadAO\_RTU: Read analog output (read hold register)**

Table 3-257 ModbusMasterReadAO Detailed Parameters

| Attribute           | Explanation                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadAO_RTU(Modbus_name, Register_name, Register_num)                                                                        |
| <b>Description</b>  | Modbus RTU read analog output <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: AO name;</li> <li>• Register_num: Number of registers.</li> </ul>               |
| <b>Return value</b> | Reg_value: Register value                                                                                                               |

**Modbus MasterReadAI\_RTU: Read Analog Input (Read Input Register)**

Table 3-258: Detailed Parameters of Modbus MasterReadAI

| Attribute           | Explanation                                                                                                                              |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadAI_RTU(Modbus_name, Register_name, Register_num)                                                                         |
| <b>Description</b>  | Modbus RTU Read Input Register <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: AO name;</li> <li>• Register: Number of registers.</li> </ul>                    |
| <b>Return value</b> | Reg_value1, Reg_value2,...: int values, return the corresponding quantity of values based on the value of Regite_num                     |

## Code 3-63 Analog Input/Output Example

```

11. --Analog output settings
12. ModbusMasterWriteAO_RTU (Modbus_0,Register_3,1,{2})
13. --Write analog output, Modbus 0- master station name, Register 3-AO name, 1- number of
    registers, {2}- Register value
14. --Analog output settings
15. ModbusMasterWriteAO_RTU (Modbus_0,Register_3,1,{2})
16. --Write analog output, Modbus 0- master station name, Register 3-AO name, 1- number of
    registers, {2}- Register value
17. AO_value = ModbusMasterReadAO_RTU (Modbus_0,Register_3,1)
18. --Read analog output, Modbus 0- master station name, Register 3-AO name, 1- register
    quantity
19. AI_value = ModbusMasterReadAO_RTU (Modbus_0,Register_2,1)
20. --Read analog input, Modbus 0- master station name, Register 2-AI name, 1- register
    quantity

```

### ModbusMasterWaitDI\_RTU , Waiting for analog input settings (waiting for input register values)

Table 3-259: Detailed Parameters of Modbus MasterWaitDI

| Attribute           | Explanation                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWaitDI_RTU (Modbus_name, Register_name, Waiting_state, Waiting_time)                                                                                                                                                                   |
| <b>Description</b>  | Modbus RTU waiting for analog input settings                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: DI Name;</li> <li>• Waiting_state: waiting state, 1-Ture, 2-Flase;</li> <li>• Waiting_time: timeout unit [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                               |

### ModbusMasterWaitAI\_RTU: Waiting for Digital Input Settings (Waiting for Discrete Input values)

Table 3-260: Detailed Parameters of Modbus MasterWaitAI\_RTU

| Attribute          | Explanation                                                                                      |
|--------------------|--------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | ModbusMasterWaitAI_RTU (Modbus_name, Register_name, Waiting_state, Register_value, Waiting_time) |
| <b>Description</b> | Modbus RTU waits for digital input settings                                                      |

Table 3-206 (Continued)

| Attribute           | Explanation                                                                                                                                                                                                                                                                             |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Modbus_name: The name of the main station for Modbus;</li> <li>• Register_name: AI name;</li> <li>• Waiting_state: waiting state, 1-&lt;, 2-&gt;;</li> <li>• Register_value: Register value;</li> <li>• Waiting_time: timeout [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                    |

## Code 3-64 Waiting for Digital/Analog Input/Output Example

5. ModbusMasterWaitDI\_RTU (Modbus\_0, Register\_0, 1, 1000)
6. --Modbus 0- Master Station Name, Register 0-DI Name, 1-True, 1000- Timeout Time ms
7. ModbusMasterWaitAI\_RTU (Modbus\_0, Register\_2, 0, 13, 1000)
8. --Modbus 0- Master Station Name, Register 2-DA Name, 0->, 13- Register value, 1000- Timeout Time ms

Related instructions from the station

### ModbusSlaveWriteDO\_RTU: Slave Digital Output Settings (Write Discrete Input)

Table 3-261: Detailed Parameters of Modbus SlaveDWriteDO\_RTU

| Attribute           | Explanation                                                                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWriteDO_RTU (Register_name, Register_num, {Register_value})                                                                                                                                                                                       |
| <b>Description</b>  | Modbus RTU Slave Station Write Digital Output Settings                                                                                                                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers;</li> <li>• {Register_value}: Register value, the number of register values matches the number of registers {value_1, value_2,...}.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                         |

### ModbusSlaveReadDO\_RTU: Read Digital Output (Read Discrete Input)

Table 3-262: Detailed Parameters of Modbus SlaveRadDO\_RTU

| Attribute           | Explanation                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveReadDO_RTU (Register_name, Register_num)                                                                       |
| <b>Description</b>  | Modbus RTU reads and writes digital outputs                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DO Name;</li> <li>• Register_num: Number of registers;</li> </ul> |
| <b>Return value</b> | {Register_value}: Register value, the number of register values matches the number of registers {value_1, value_2,...}    |

**ModbusSlaveReadDI\_RTU: Read digital input (read coil)**

Table 3-263: Detailed Parameters of ModbusSlaveReadDI\_RTU

| Attribute           | Explanation                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterReadDI_RTU (Register_name, Register_num)                                                                  |
| <b>Description</b>  | Modbus RTU slave station reads digital input                                                                          |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Register_name: DI Name;</li> <li>• Register: Number of registers.</li> </ul> |
| <b>Return value</b> | Reg_faluel, Reg_faluel2,...: returns the corresponding quantity of values based on the value of Regite_num            |

## Code 3-65 Slave Station Digital Input/Output Settings

- |                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10. -Slave station digital output settings<br>11. ModbusSlaveWriteDO_RTU (DO0,1,{2})<br>12. -Write digital output, DO0-DO number, 1-register quantity, {2}- Register value<br>13. DO_value = ModbusSlaveReadDO_RTU (DO0,1)<br>14. -Read digital output, DO0-DO number, 1-register quantity<br>15.<br>16. -Digital input settings<br>17. ModbusSlaveReadDI_RTU (DI1,3)<br>18. -Read numerical input, DI1-DI name, 3-register quantity |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**ModbusSlaveWaitDI\_RTU: Waiting for digital input settings (waiting for coil values)**

Table 3-264: Detailed Parameters of ModbusSlaveWaitDI\_RTU

| Attribute           | Explanation                                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWaitDI_RTU (Register_name, Waiting_state, Waiting_time)                                                                                         |
| <b>Description</b>  | Modbus RTU waits for digital input settings <ul style="list-style-type: none"> <li>• Register_name: DI Name;</li> </ul>                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Waiting_state: waiting state, 1-True, 2-False;</li> <li>• Waiting_time: The unit of waiting time [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                       |

### ModbusSlaveWaitAI\_RTU, Waiting for analog input settings (waiting to hold register values)

Table 3-265: Detailed Parameters of ModbusSlaveWaitAI\_RTU

| Attribute           | Explanation                                                                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusSlaveWaitAI_RTU (Register_name, Waiting_state, Register_value, Waiting_time)                                                                                                  |
| <b>Description</b>  | Modbus RTU slave station waiting for analog input settings <ul style="list-style-type: none"> <li>• Register_name: AI name;</li> </ul>                                              |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Waiting_state: waiting state, 1-&lt;, 2-&gt;;</li> <li>• Register value: Register value;</li> <li>• Waiting_time: timeout [ms].</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                |

Code 3-66 slave station waiting for digital/analog input settings

- |                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>5. ModbusSlaveWaitDI(DI2,0,100)</li> <li>6. -Waiting for numerical input settings: DI2-DI name, 0-false, 100- waiting time ms</li> <li>7. ModbusSlaveWaitAI(AI1,0,12,133))</li> <li>8. -AI1-AI name, 0-&gt;, 12 register value, 133 timeout time ms</li> </ol> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### ModbusMasterReadReg\_RTU: Read Register Instruction

Table 3-266: Detailed Parameters of ModbusMasterReadReg\_RTU

| Attribute          | Explanation                                                         |
|--------------------|---------------------------------------------------------------------|
| <b>Prototype</b>   | ModbusMasterReadReg_RTU (fun_code, reg_add, reg_num, add, isthread) |
| <b>Description</b> | Read register instruction                                           |

Table 3-212(Continued)

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                            |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• fun_code: Function code, 1-0x01 coil, 2-0x02 discrete quantity, 3-0x03 hold register, 4-0x04 input register;</li> <li>• reg_add: Register address;</li> <li>• reg_num: Number of registers;</li> <li>• add: Address;</li> <li>• isthread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                   |

**ModbusMasterWriteReg\_RTU: Write Register**

Table 3-267 Detailed Parameters of ModbusMasterWrite\_RTU

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | ModbusMasterWrite_RTU ( fun_code, reg_add, reg_num, reg_value, add, isthread )                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>  | Write register                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• fun_code: function code, 5-0x05- single coil, 6-0x06- single register, 15-0x0f - multiple coils, 16-0x10- multiple registers;</li> <li>• reg_add: single coil, single register, multiple coils, multiple register addresses;</li> <li>• reg_num: Number of registers;</li> <li>• reg_value: byte array;</li> <li>• add: Address;</li> <li>• isthread: Whether to apply threads, 0- No, 1- Yes.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                                                                                                                                                                               |

Code 3-67 Modbus\_RTU Reg Instruction Example

```

13. addr = 0x1000
14. val = {400, 600, 900, 700}
15. ret = {}
16. ModbusMasterWriteReg_RTU (10, addr, 4,val, 1, 0)
17. --1-0x10- Multiple registers, addr - Register address, 4- Number of registers, val- Byte array, 1- Address, 0- No threads applied
18. WaitMs(10)
19. ModbusMasterReadReg_RTU (4, addr, 4, 1, 0)
20. --1-0x04- Input register, addr - Register address, 4- Number of registers, 1- Address, 0- Do not apply thread
21. WaitMs(10)
    
```

### 3.7.2 Xmlrpc

XMLRPC is a remote procedure call method that uses sockets to transfer data between programs using XML. Through this method, the robot controller can call functional functions (with Parameters) from remote programs/services and obtain the returned structural data.

#### XMLrpcClientCall: Data Remote Call

Table 3-268 Detailed Parameters of XMLrpcClientCall

| Attribute           | Explanation                                                                                                                                                                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | XmlrpcClientCall (url, func, type, func_Para)                                                                                                                                                                                                  |
| <b>Description</b>  | Remote data call                                                                                                                                                                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• url: Server URL;</li> <li>• func: Call the function;</li> <li>• type: The type of the input Parameter, a 1-double array, a 2-string array;</li> <li>• func_Para: Call function Parameters.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                           |

Code 3-68 Xmplppc Instruction Example

```

1. --Example of double array:
2. xmlrpcclientcall(" http://192.168.58.20:50000/rpc2 ","example.array",1,{1.0,2.0,3.0})
3. -- http://192.168.58.20:50000/rpc2 -Server URL, example. array - call function name,
   1-type, {1.0,2.0,3.0}- Call function Parameters
4. --Example of string array:
5. xmlrpcclientcall("                               http://192.168.58.20:50000/rpc2
   ","example.array",2,{"hello","world"})
6. -- http://192.168.58.20:50000/rpc2 -Server URL, example. array - call function name, 0-
   type, {1.0,2.0,3.0}-- Call function Parameters

```

### 3.7.3 Board Card

#### FieldBusSlaveWriteDO: From Station Mode Settings: Slave DO

Table 3-269 FieldBusSlaveWriteDO Detailed Parameters

| Attribute          | Explanation                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | FieldBusSlaveWriteDO(DOStartIndex, writeNum, status)                                                                   |
| <b>Description</b> | From Station Mode Settings: Slave DO                                                                                   |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• DOStartIndex: Initial DO number;</li> <li>• writeNum: Write count;</li> </ul> |

- status:Write value array

**Return value** null

### FieldBusSlaveWriteAO: From Station Mode Settings: Slave AO

Table 3-270 FieldBusSlaveWriteAO Detailed Parameters

| Attribute           | Explanation                                                                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FieldBusSlaveWriteAO(AOStartIndex, writeNum, status)                                                                                                                 |
| <b>Description</b>  | From Station Mode Settings: Slave AO                                                                                                                                 |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AOStartIndex: Initial AO number;</li> <li>• writeNum: Number of writes;</li> <li>• status:Write the value array.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                 |

### FieldBusSlaveReadDI: Obtain the slave DI from the slave mode

Table 3-271 FieldBusSlaveReadDI Detailed Parameters

| Attribute           | Explanation                                                                                                           |
|---------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FieldBusSlaveReadDI(DIStartIndex, writeNum, status)                                                                   |
| <b>Description</b>  | Obtain the slave DI from the slave mode                                                                               |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DIStartIndex: Initial DI number;</li> <li>• writeNum: Read count;</li> </ul> |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• status:Read the value array</li> </ul>                                       |

**FieldBusSlaveReadAI: Obtain slave AI from the slave mode**

Table 3-272 FieldBusSlaveReadAI Detailed Parameters

| Attribute           | Explanation                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FieldBusSlaveReadAI(DIStartIndex, writeNum, status)                                                                        |
| <b>Description</b>  | Obtain slave AI from the slave mode                                                                                        |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• AIStartIndex: Initial AI number;</li> <li>• writeNum: Number of reads;</li> </ul> |
| <b>Return value</b> | <ul style="list-style-type: none"> <li>• status:Read the value array</li> </ul>                                            |

**FieldBusSlaveWaitDI: From Station Mode: Waiting for Station DI**

Table 3-273 FieldBusSlaveWaitDI Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FieldBusSlaveWaitDI(DIIndex, status, waitMs)                                                                                                                                                      |
| <b>Description</b>  | From Station Mode: Waiting for Station DI                                                                                                                                                         |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DIIndex: Waiting for DI ID;</li> <li>• status: Waiting for DI value;</li> <li>• waitMs:Timeout duration (ms); -1 indicates permanent waiting.</li> </ul> |
| <b>Return value</b> | errcode: 0: Successful, -1: Not connected, -2: Waiting timeout                                                                                                                                    |

**FieldBusSlaveWaitAI: From Station Mode: Waiting for the Slave AI**

Table 3-274 FieldBusSlaveWaitAI Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | FieldBusSlaveWaitAI(AIIndex, status, waitMs)                                                                                                                                                                                                                                   |
| <b>Description</b>  | From Station Mode: Waiting for the Slave AI                                                                                                                                                                                                                                    |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• DIIndex: Waiting for the AI number;</li> <li>• waitType: Waiting type: 0: greater than, 1: less than</li> <li>• status: Waiting for the AI value;</li> <li>• waitMs:Timeout duration (ms); -1 indicates permanent waiting.</li> </ul> |
| <b>Return value</b> | errcode: 0: Successful, -1: Not connected, -2: Waiting timeout                                                                                                                                                                                                                 |

## Code 3-69 Board Code Example

1. FieldBusSlaveWriteDO(1,1,{1})
2. FieldBusSlaveReadDI(1,1)
3. FieldBusSlaveWriteAO(1,2,{1,1})
4. FieldBusSlaveReadAI(1,1)
5. FieldBusSlaveWaitDI(1,0,-1)
6. FieldBusSlaveWaitAI(1,0,100,-1)

### 3.9 Auxiliary instruction

#### 3.8.1 Auxiliary Threads

FR Lua provides auxiliary thread functionality, where users can define an auxiliary thread to run simultaneously with the main thread. The auxiliary thread mainly interacts with external devices for data exchange.

#### NewAuxthread: Creating auxiliary threads

Table 3-275 Detailed Parameters of NewAuxThread

| Attribute           | Explanation                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | NewAuxThread (func_name, func_Para)                                                                                           |
| <b>Description</b>  | Create auxiliary thread                                                                                                       |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• func_name: Call function;</li> <li>• func_Para: Call function Parameters.</li> </ul> |
| <b>Return value</b> | null                                                                                                                          |

## Code 3-70 Auxiliary Thread Example

1. --Definition of auxiliary thread function
2. function auxThread\_TCPCOM(ip, port)
3.     local flag = 0
4.     Set SysNumber (1,0) -- System variable 1 is assigned a value of 0
5.     while 1 do
6.         if flag == 0 then
7.             Flag=SocketOpen (IP, port, "socket-0") -- Establish a connection with the server
8.         elseif flag == 1 then
9.             SocketSendString("hello world","socket\_0",1)
10.         n. Svar=SocketReadAsciiFloat (1, "socket-0", 0) -- interacts with the server for

```

data exchange
11.         if n == 1 then
12.             Set SysNumber (1, svar) - Assign svar to system variable 1
13.         end
14.     end
15. end
16. end
17. -Create auxiliary thread
18. NewAuxThread(auxThread_TCPCom, {"127.0.0.1",8010})
19. WaitMs(100)
20. while 1 do
21.     v=Get SysNumber (1) - Get the value of system variable 1
22.     if v == 100 then
23.         PTP(P1,10,0,0)
24.     elseif v == 200 then
25.         PTP(P2,10,0,0)
26.     end
27. end

```

### 3.8.2 Call Function

FR Lua provides robot interface functions for customers to choose from and prompts them with the required Parameters for the function, making it convenient for customers to write script instructions

For example, the provided `GetInverseKinRef` and `GetInverseKinHasSolution` functions.

#### **GetInverseKinRef: Inverse kinematics solution - specifying position reference**

Table 3-276 GetInverseKinRef Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                                                                             |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | <code>GetInverseKinRef (type, desc_pos, joint_pos_ref)</code>                                                                                                                                                                                                                                                                                           |
| <b>Description</b>  | Inverse kinematics, tool pose solving joint position, referencing specified joint position solving                                                                                                                                                                                                                                                      |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• type: 0- Absolute pose (base coordinate system), 1-Relative pose (base coordinate system), 2-Relative pose (tool coordinate system);</li> <li>• desc_pos: {x, y, z, rx, ry, rz} tool pose, unit [mm] [° ];</li> <li>• joint_pos_def: {j1, j2, j3, j4, j5, j6}, joint reference position, unit [° ].</li> </ul> |
| <b>Return value</b> | J1, j2, j3, j4, j5, j6: Joint position, unit [° ]                                                                                                                                                                                                                                                                                                       |

### GetInverseKinHasSolution, Inverse kinematics solution - Is there a solution

Table 3-277 Detailed Parameters of FHIR converseKinHasSolution

| Attribute           | Explanation                                                                                                                                                                                                                                                                     |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | GetInverseKinHasSolution (type, desc_pos, joint_pos_ref)                                                                                                                                                                                                                        |
| <b>Description</b>  | Is there a solution for solving joint positions using inverse kinematics and tool pose <ul style="list-style-type: none"> <li>• type: 0- Absolute pose (base coordinate system), 1-Relative pose (base coordinate system), 2-Relative pose (tool coordinate system);</li> </ul> |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• desc_pos: {x, y, z, rx, ry, rz} tool pose, unit [mm] [°];</li> <li>• joint_pos_def: {j1, j2, j3, j4, j5, j6}, joint reference position, unit [°].</li> </ul>                                                                           |
| <b>Return value</b> | Result: 'True' - there is a solution, 'False' - there is no solution                                                                                                                                                                                                            |

#### Code 3-71 Call Function Example

```

1. J1={95.442,-101.149,-98.699,-68.347,90.580,-47.174}
2. P1={75.414,568.526,338.135,-178.348,-0.930,52.611]
3. ret_1 = GetInverseKinRef(0,P1,J1)
4. --Inverse kinematics solution - specify reference position, 0-absolute pose (base
   coordinate system), P1 tool pose, J1 joint reference position
5. ret_2 = GetInverseKinHasSolution(0,P1,J1)
6. --Inverse kinematics solution - whether there is a solution, 0-absolute pose (base
   coordinate system), P1 tool pose, J1 joint reference position

```

### 3.8.3 Point Table

#### PointTableSwitch: Point Switching

Table 3-278 PointTableSwitch Detailed Parameters

| Attribute           | Explanation                                                                                                                                                                                                                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>    | PointTableSwitch(point_table_name)                                                                                                                                                                                                                                                             |
| <b>Description</b>  | Point table switching, Used together with PointTableUpdateLua and its subroutines.                                                                                                                                                                                                             |
| <b>Parameter</b>    | <ul style="list-style-type: none"> <li>• Point_table_name: The name of the point table to be switched is pointTable1.db. When the point table is empty, that is, "", it means updating the Lua program to the initial program that has not applied the point table, in system mode.</li> </ul> |
| <b>Return value</b> | null                                                                                                                                                                                                                                                                                           |

#### PointTableUpdateLua: Update LUA program

Table 3-279 Detailed Parameters of PointTableUpdateLua

| Attribute          | Explanation                                                                                              |
|--------------------|----------------------------------------------------------------------------------------------------------|
| <b>Prototype</b>   | PointTableUpdateLua (lua_name)                                                                           |
| <b>Description</b> | Update LUA program                                                                                       |
| <b>Parameter</b>   | <ul style="list-style-type: none"> <li>• lua_name: Name of the LUA program to be updated</li> </ul> null |

Code 3-72 Example of point table switching usage

```

1. PointTableSwitch("point_table_test1.db")
2. WaitMs(100)
3. PointTableUpdateLua("testProgram.lua")
4. NewDofile("/fruser/testProgram.lua",1,1)
5. DofileEnd()
6.
7. PointTableSwitch("point_table_test2.db")
8. WaitMs(100)
9. PointTableUpdateLua("testProgram.lua")
10. NewDofile("/fruser/testProgram.lua",1,2)
11. DofileEnd()

```